



Canon PowerShot SD850 IS Battery Replacement

This guide will show you how to remove and replace the battery in your Canon PowerShot SD850 IS camera.

Written By: Peter Tran



INTRODUCTION


The Canon PowerShot SD850 IS digital camera uses rechargeable batteries that you will occasionally have to remove. You can tell that your battery needs charging when the camera fails to turn on or displays a low battery indicator onscreen. Fortunately, you can easily get your camera running again. This guide explains how to remove or install the battery of your Canon PowerShot SD850 IS in two simple steps.

Step 1 — Battery



- Slide the light grey tab toward the edge of the camera using your fingernail.
- Pull the light grey tab up to open the door.
- ⓘ These photos do not show the camera's memory card or battery, which should be visible inside.

Step 2

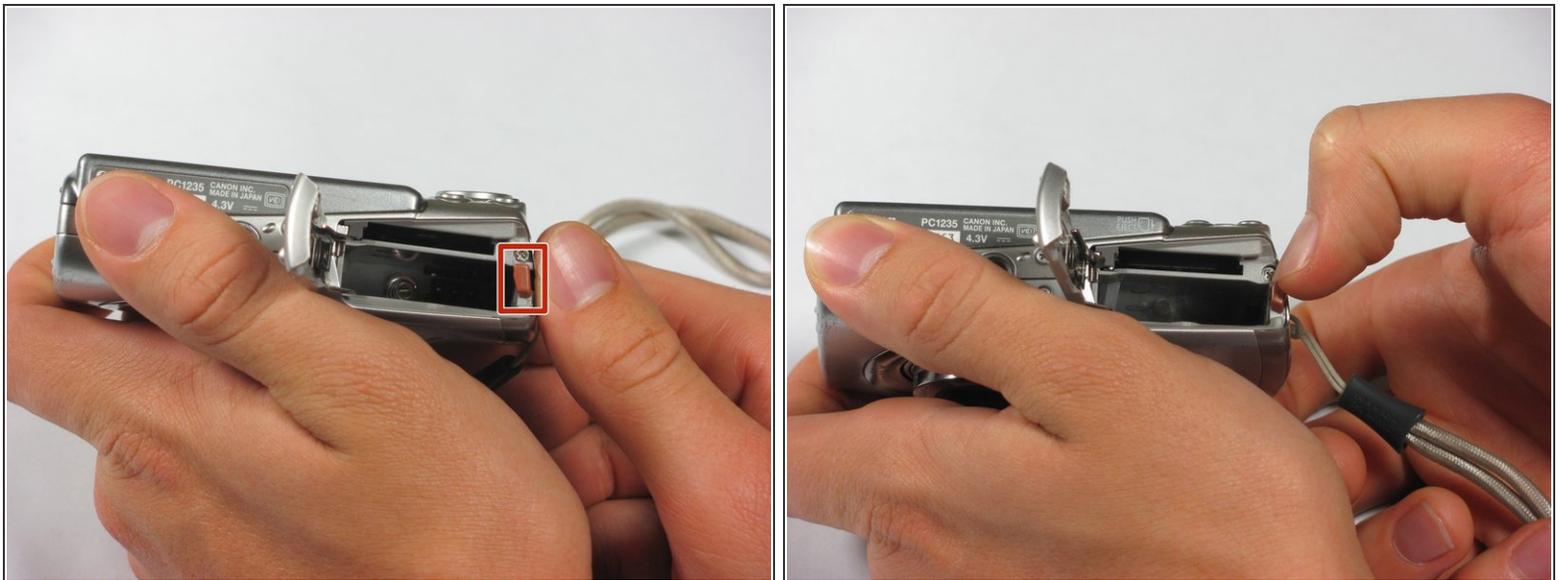

- Slide the small brown tab toward the edge of the camera using your fingernail.
 - Let go of the brown tab when the battery pops up.
 - Grab battery and pull straight up to remove from holder.
- ☞ When inserting the battery, orient it so that the terminals connect.

To reassemble your device, follow the instructions in reverse order.