



Kodak EasyShare Z1015 IS Back Cover Replacement

Replace the Back Cover in your Kodak EasyShare Z1015 IS.

Written By: katie newman



INTRODUCTION

This tutorial demonstrates how to remove the back cover from the camera.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Begin by sliding the switch towards the open symbol. Release your finger from the switch and the battery case will pop open.

Step 2



- Next, press down on the red lever which holds the battery in place.

Step 3



- Once the battery has popped out of the compartment, simply pull it out of the camera.

Step 4 — Back Cover



- ⚠ Make sure that the lens cover is on the Kodak EasyShare whenever working with one of these guides.
- ⚠ Also, make sure to keep track of the screws you remove throughout these step by step guides. Losing a screw could inhibit the ability to reassemble the camera.
- Begin by removing the first screw located on the back of the camera.

Step 5



- Next, remove the two screws located on the right side of the camera.

Step 6



- After removing the screws located on the right side, remove the six screws located on the bottom of the camera.

Step 7



- Lastly, remove the two screws located on the left side of the camera.

Step 8



- Once all eleven screws have been removed, use Plastic Opening Tools to take off the back cover.
 - Insert the plastic opening tool and apply leverage on each side of the camera. The recommended spots to apply leverage are shown in these pictures.

Step 9



- Apply pressure on the left and right side of the camera and pull the back cover away from the device.
- Once the back cover has been successfully removed, you should have a total of eleven screws as well as the bottom cover separated from the camera.

To reassemble your device, follow these instructions in reverse order.