



HP Mini 1000 SD Card Replacement

Written By: Walter Galan



INTRODUCTION

This guide is used as a prereq to other guides.

Step 1 — SD Card



- Push the SD card toward the inside of the computer to unlock it from the lower case.
- Pull the SD card out of the lower case.

To reassemble your device, follow these instructions in reverse order.