




Canon PowerShot S230 Battery Replacement

How to remove the Canon PowerShot S230 battery.

Written By: Tanya Malalang

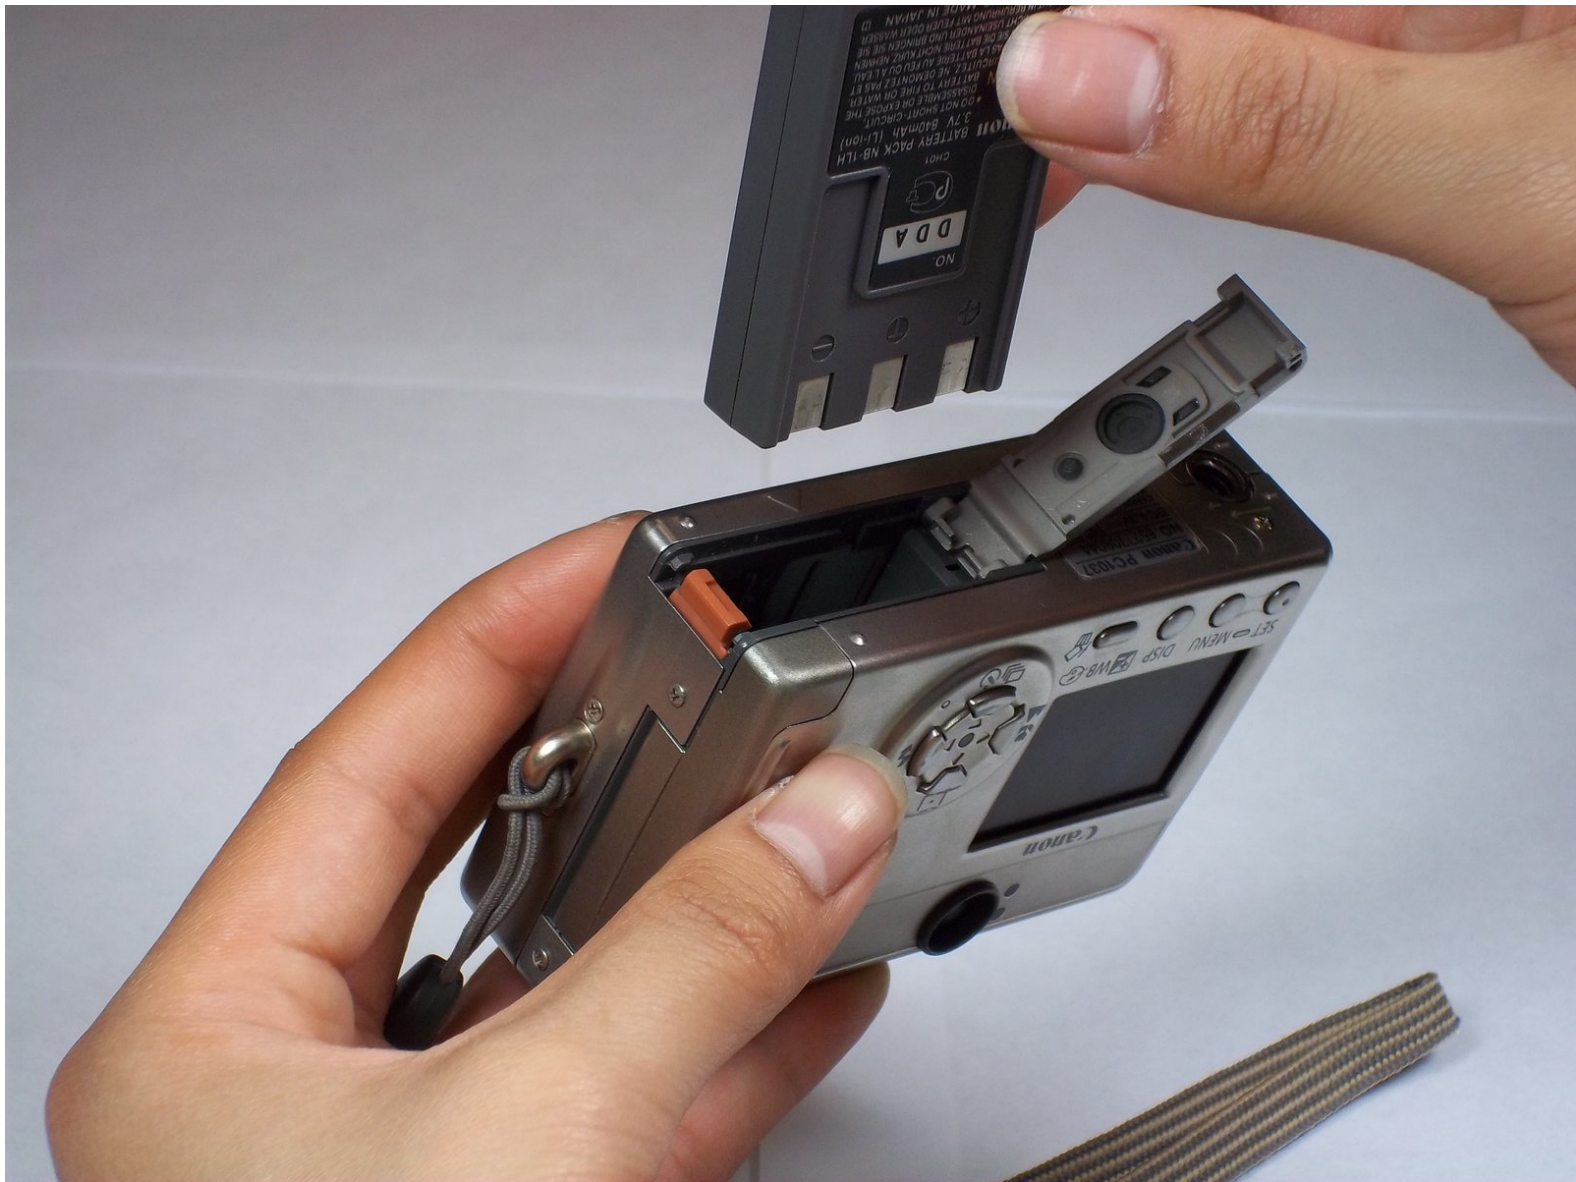

INTRODUCTION

If your Canon Powershot S230 camera is not turning on or is not retaining its charge, the issue may be that the battery is no longer functional. The battery supplies power to the device and is therefore vital to the camera's operation.

Before you move forward with the guide, make sure you are informed of what to do with a [swollen battery](#) and the safety concerns related to [removing batteries](#).

This guide will walk you through how to find and replace the battery in the Canon PowerShot S230 camera with the use of visual representations to help guide you through the process.



PARTS:

- [Canon PowerShot S230 Battery](#) (1)
-

Step 1 — Battery



- On the bottom of the camera, use your thumb to press the rubber battery cover towards the side of the camera with the strap base. The cover will shift to extend beyond the rest of the camera.

Step 2




- Hold the end of the battery cover that extends beyond the camera and lift it up.

Step 3



- Locate the orange tab next to the battery. Next roll the tab back in order for the battery to come out.

Step 4

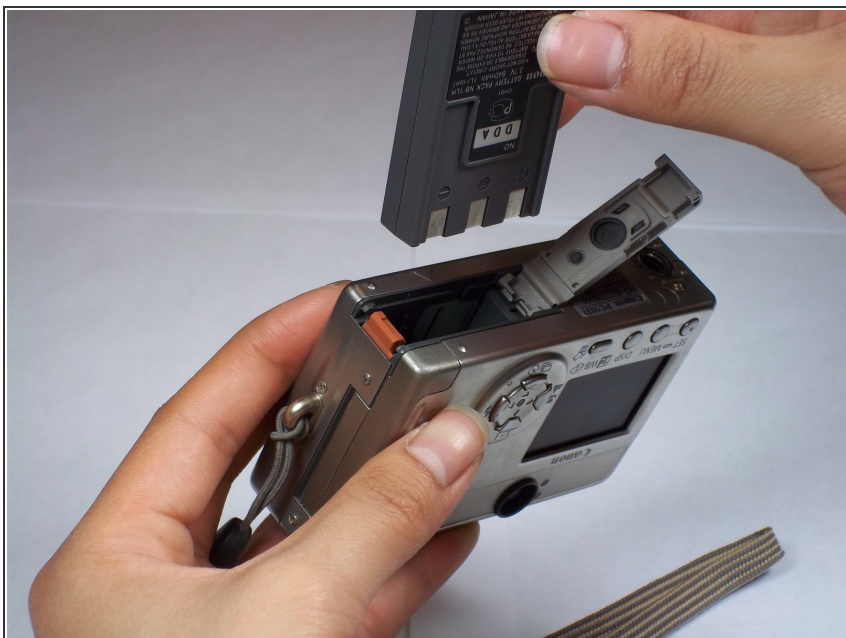

- Pull the battery out.

To reassemble your device, follow these instructions in reverse order.