




Handspring Visor Edge Button Board Replacement

The button board can be easily pulled off...

Written By: Nick Lazarakis

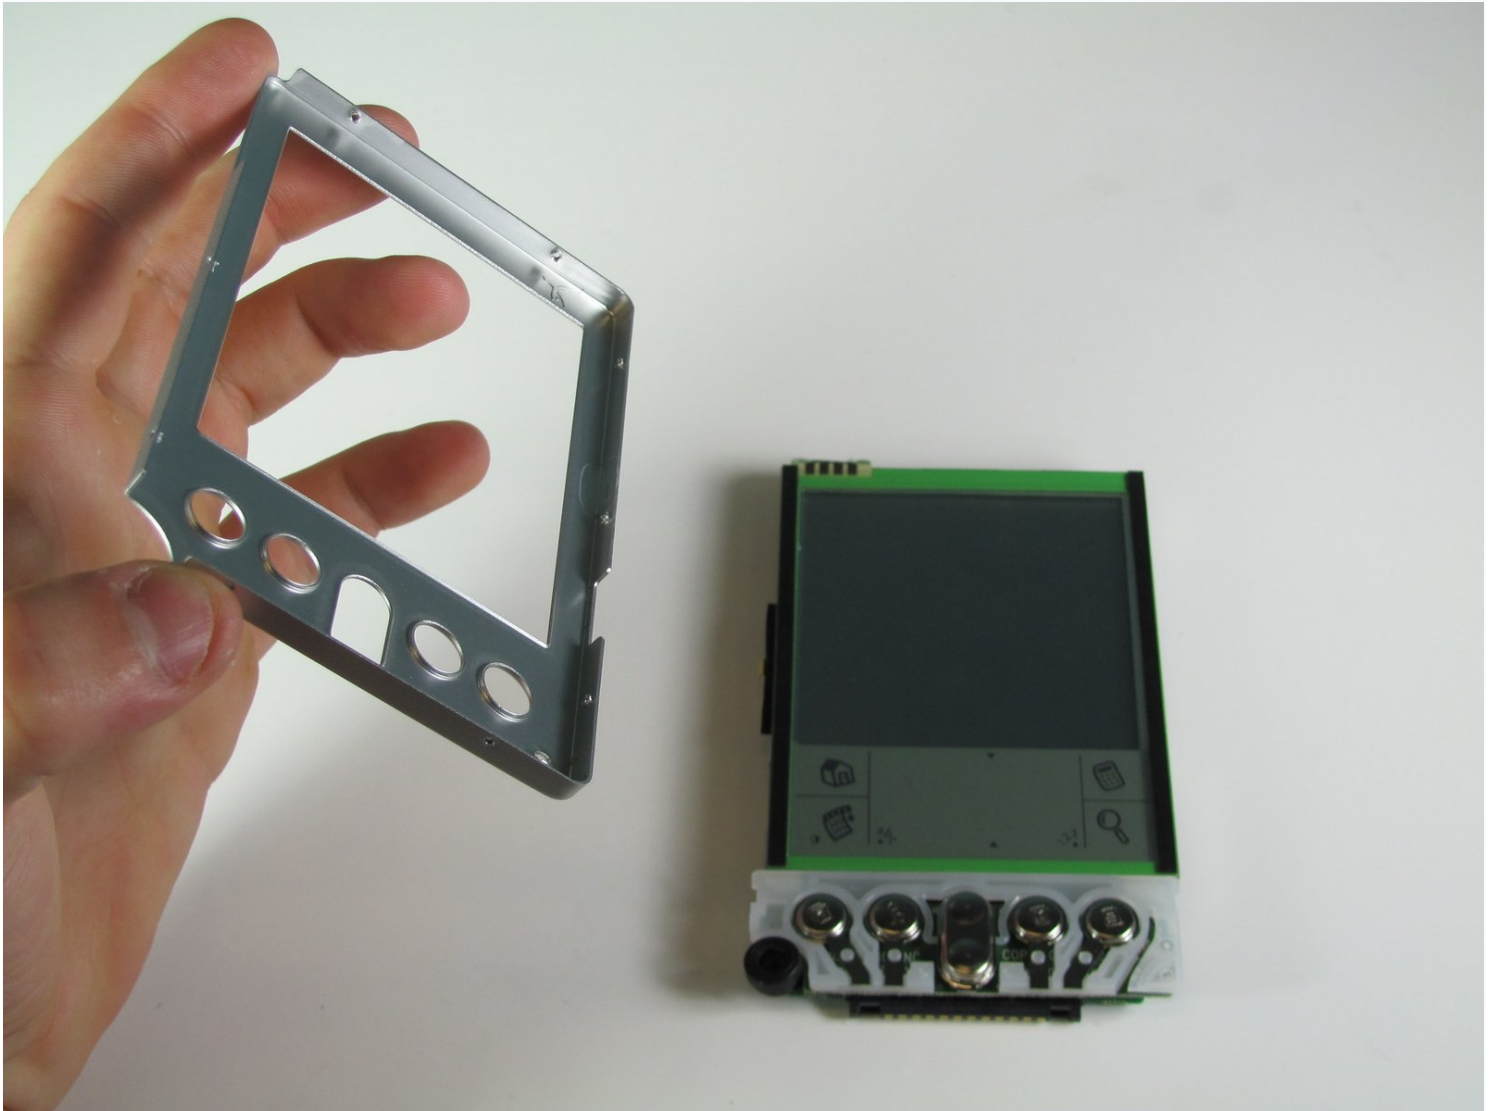


INTRODUCTION

The button board can be easily pulled off without damaging the device. The only tool you need is a #00 Philips screwdriver.

TOOLS:

Phillips #00 Screwdriver (1)


Step 1 — Flip Cover

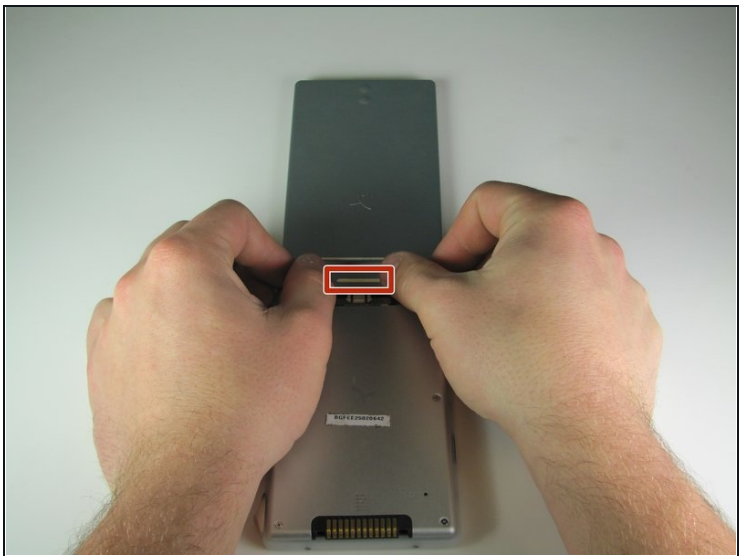

- Open the Visor Edge and place it on a table facing down.
- Gently push the tab that connects the flip cover (top half) to the PDA (bottom half) upward, lift the pieces apart to detach them.

 Do not pull on the flip cover in an attempt to remove it from the PDA.

Step 2 — Back Panel

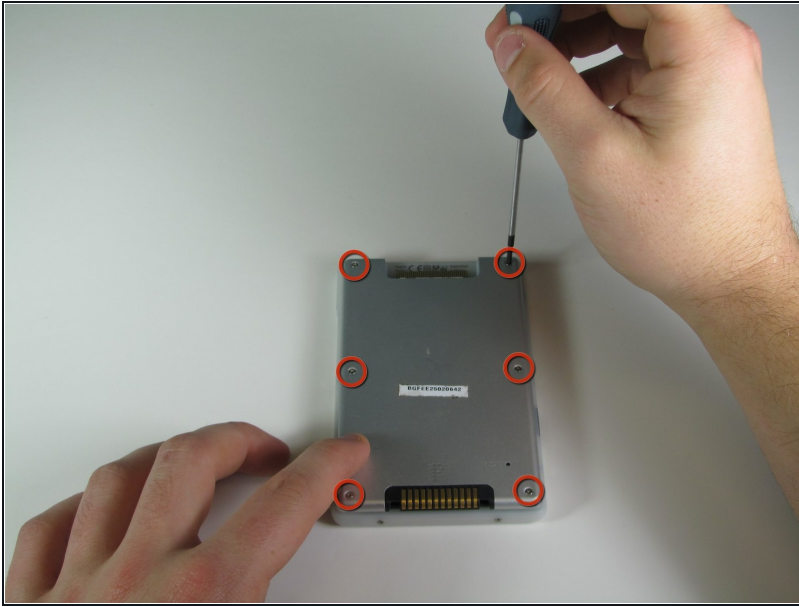

- Remove the six 4.1 mm Phillips screws from the back plate using the #00 Phillips Screwdriver.

Step 3




- Remove the gray back plate from the PDA.

Step 4




- Remove the four 2.6 mm Philips screws that are on the sides of the frame.
- Remove the 3.9 mm Philips screw holding the stylus holster to the frame.

Step 5

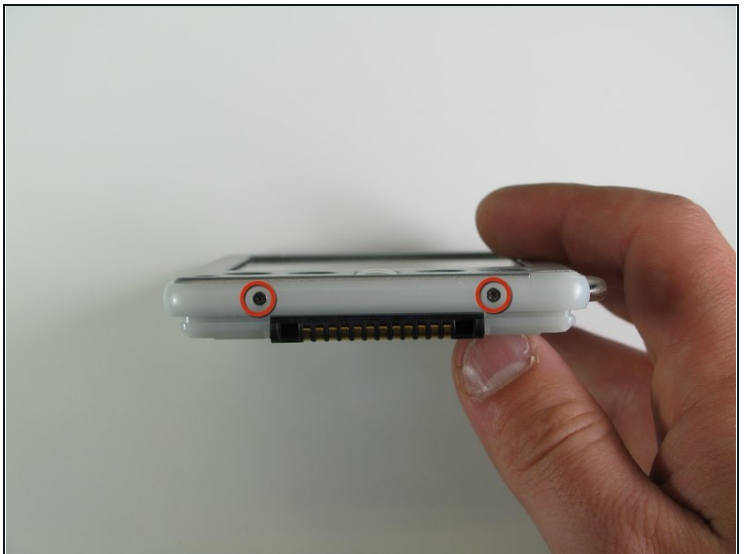


- Remove the four 2.6 mm Philips screws on the top and bottom of the frame.

Step 6

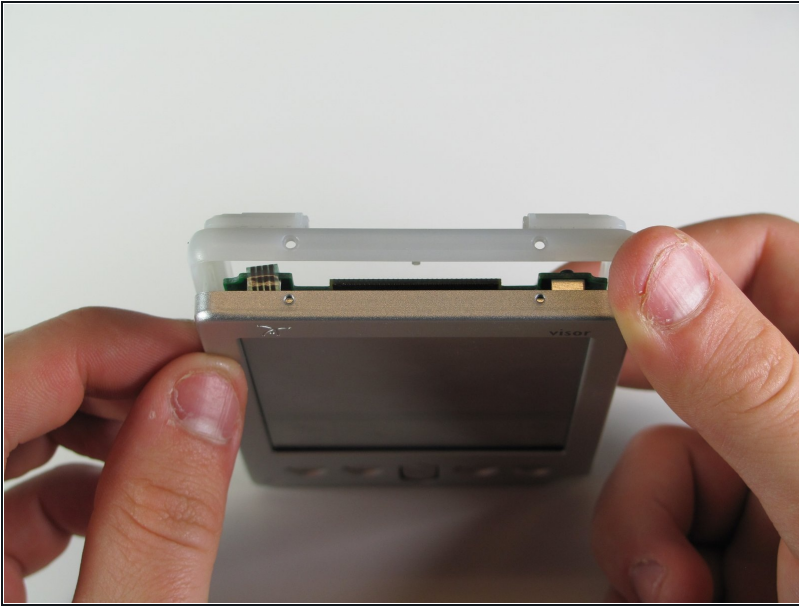


- Gently remove the white frame from the back of the PDA.

Step 7 — Button Board

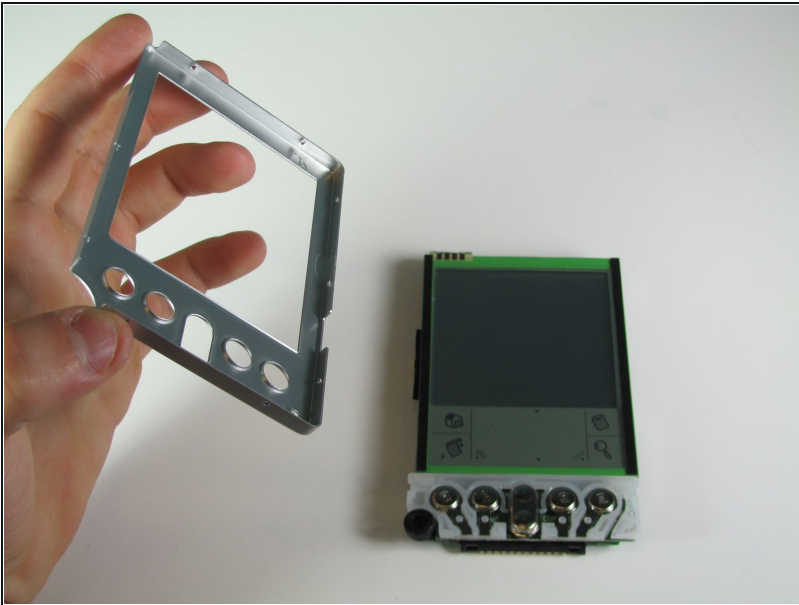

- Pull off front cover gently.

Step 8

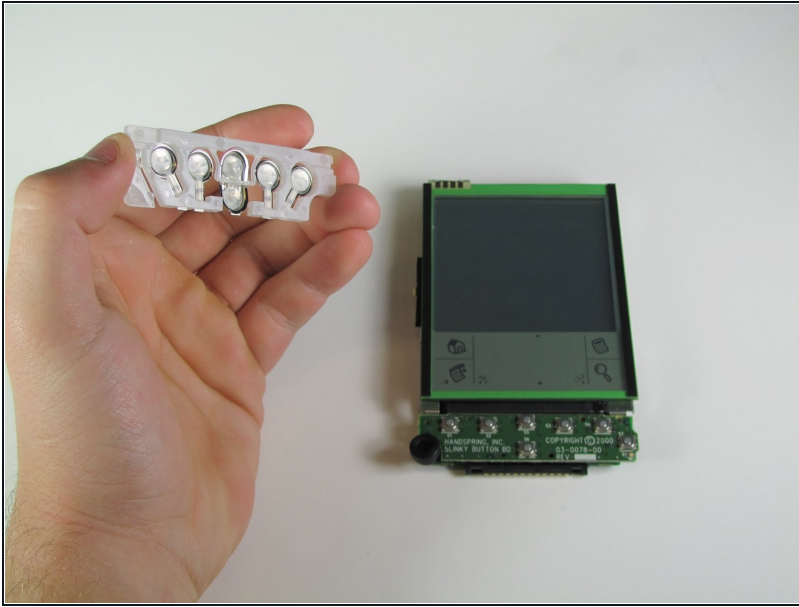

- Remove buttons by hand, they should come off easily.

To reassemble your device, follow these instructions in reverse order.