


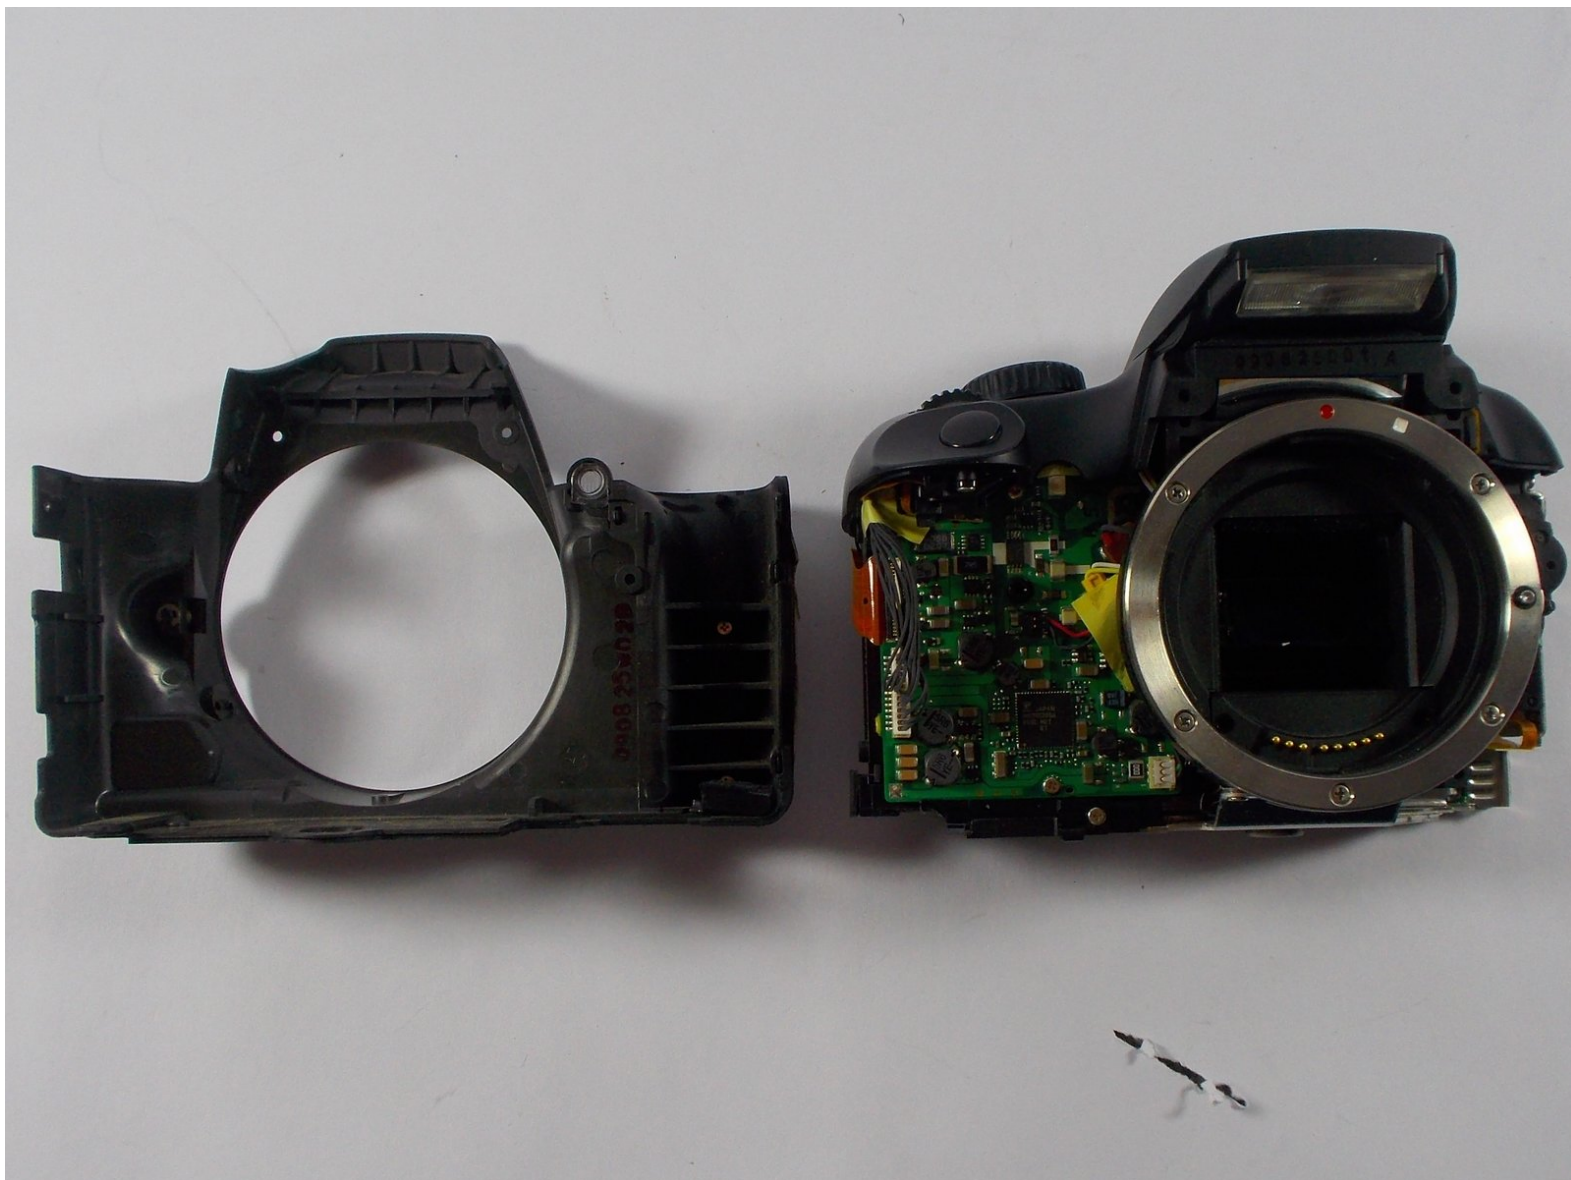

Disassembling Canon EOS Rebel XS Front Cover

Use this guide to replace a damaged front cover or to access the inner parts of the camera.

Written By: Daniel Bussone



INTRODUCTION

Use this guide to replace a damaged front cover or to access the inner parts of the camera.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Latch Side Cover



- Remove the two 3mm (1/8") black screws from the side cover using a #00 Phillips screwdriver.

Step 2

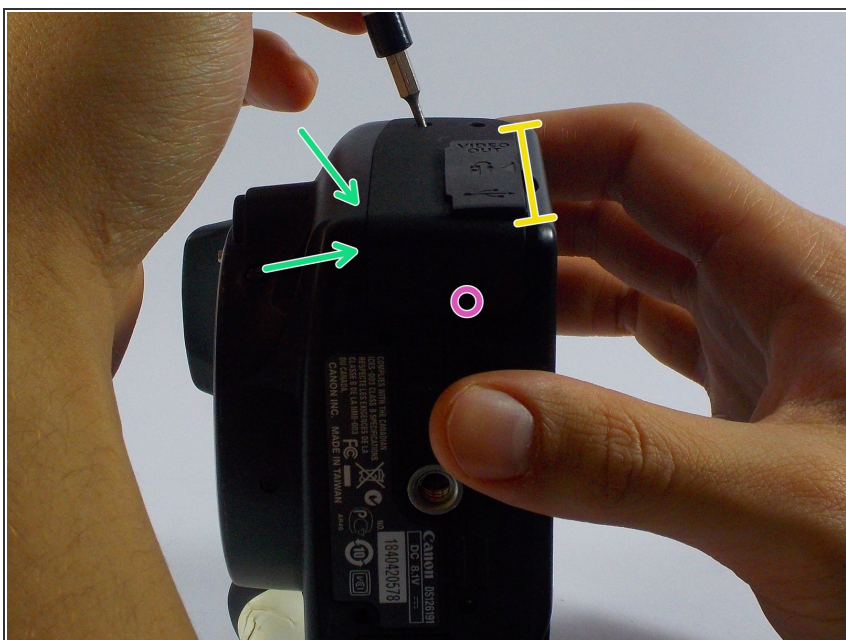

- On the bottom, remove the 6mm (13/64") screw with the #00 Phillips Screwdriver.
- Pry up the panel; starting from the front/bottom corner, as indicated.
- There's a concealed lip, under the opposite edge.

Step 3 — Disassembling Canon EOS Rebel XS Front Cover



- Remove three medium length screws from the bottom of the camera

Step 4



- Remove the two medium length screws on the front panel of the camera above the lens mount.
- Once you done, you may use the Spudger to panel from non-grip side.
- ⓘ If you start on the grip side, it will be more challenging to loosen the panel.

To reassemble your device, follow these instructions in reverse order.