




# Repairing Canon Powershot SD790 IS Stuck Slider Button

Fixing a stuck slider button on your Powershot.

Written By: Stanley

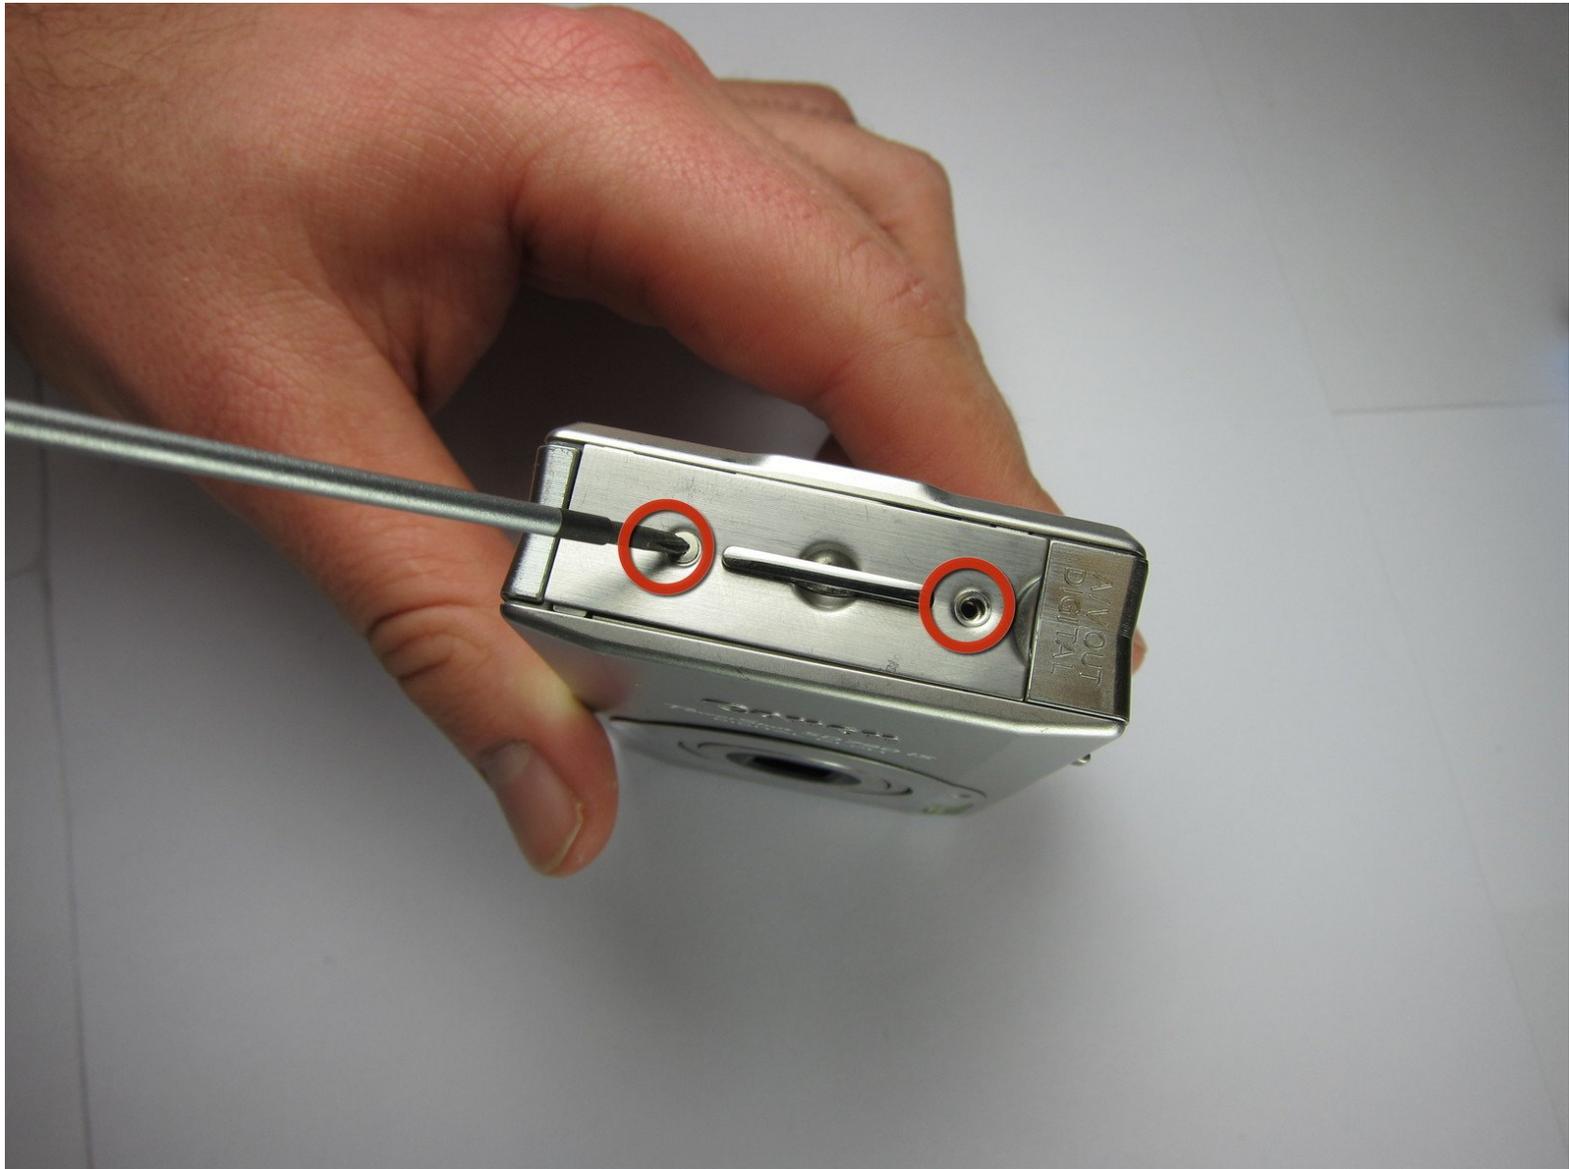

---

## INTRODUCTION


Remove two screws, gently pry away cover and readjust your slider button. Easy!

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Repairing Canon Powershot SD790 IS Stuck Slider Button

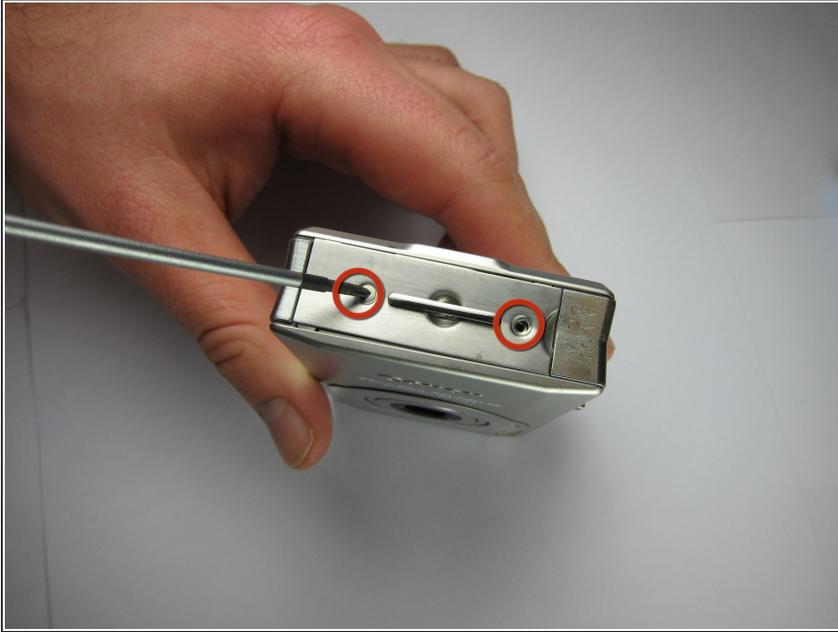

- Remove screws on strap panel of camera.

## Step 2



- After removing the two screws on your strap plate, gently pry away the back cover of your camera.
- Now readjust the slider button so that it is in the correct position. (You will know this works, if the button will freely move once the cover is on)

To reassemble your device, follow these instructions in reverse order.