


HP Envy 23-d060qd TouchSmart Hard Drive Replacement

This guide will demonstrate how to properly replace the hard drive on the HP Envy 23-d060qd TouchSmart.

Written By: Zachary Dicks

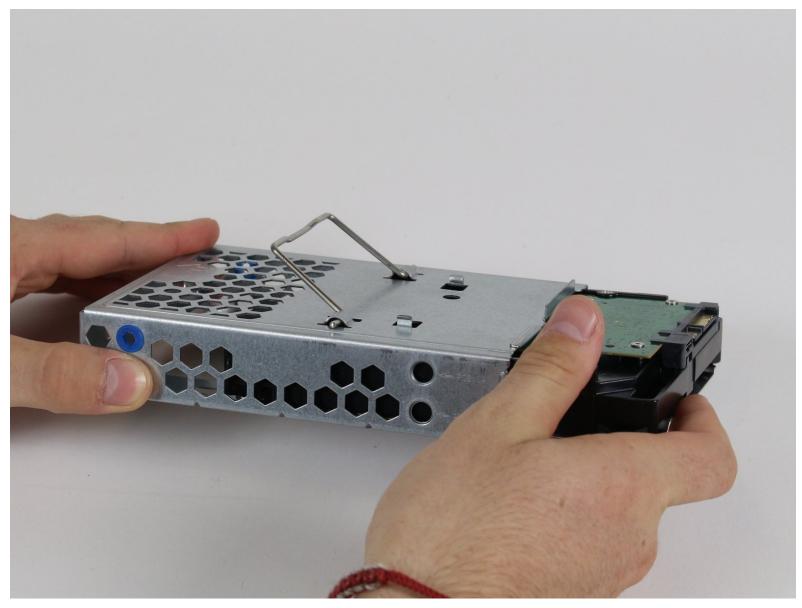

This document was generated on 2020-11-28 04:46:45 AM (MST).

INTRODUCTION

My computer doesn't have enough room anymore for the music and photos that I want to store! I don't want to say good-bye to any files. What can I do so that I am able to store more files on my computer? Replacing the hard drive won't be too hard!



TOOLS:

Phillips #2 Screwdriver (1)

Step 1 — Back Panel



 Use your hands to unclip the plastic snaps on the back panel of the device.

Step 2




- Remove the three 11.5mm PH2 screws from the back panel.
- The screws will not fall out of the back panel, but they will unscrew to release the back panel.

Step 3



 Now, take the back panel off by pulling at it gently with your hands.

Step 4 — Hard Drive

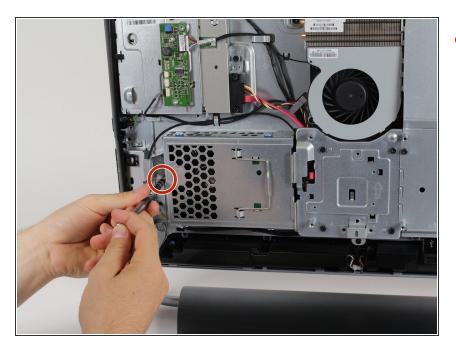

Remove the one 13.5mm PH2 screw.

Step 5



 Unsnap the wire mechanism to release the hard drive.

Step 6





Detach the hard drive assembly by pulling it out of the socket.

Step 7



 Remove the two 8.5mm PH2 screws on each side of the hard drive cover.

Step 8



- Detach the hard drive cover by sliding it off from the rest of the hard drive
- Replace the old hard drive with your new hard drive.

To reassemble your device, follow these instructions in reverse order.