



# Canon EOS 5D Mark III Internal Battery Replacement

Written By: Haris Pylarinos





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Internal Battery



- Lift both I/O rubber flaps.

## Step 2



- Remove bottom Phillips screw.

### Step 3



- Pull internal battery door.

### Step 4



- Replace battery and reassemble.

To reassemble your device, follow these instructions in reverse order.