



# Panasonic DVD-RV31 Player Left Control Board Replacement

Written By: Kevin





## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Outer Case



- Remove the three screws running along the back edge of case cover.
- Remove the two screws from each side of the case cover.


## Step 2



- Grab edges of the cover with your hands. Pull outward slightly, then straight up.



### Step 3 — Front Panel

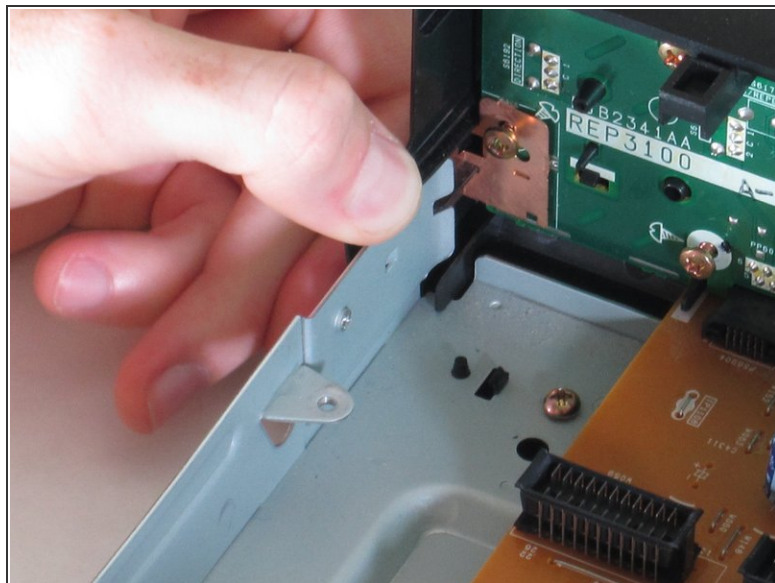


- Lift up the five tabs securing the front panel to the chassis. There are three on the bottom, and two on the inside edges of the panel. Panel should then lift off the player.

### Step 4 — Left Control Board



- Grip jogger dial and lift up. It should come off easily.

## Step 5

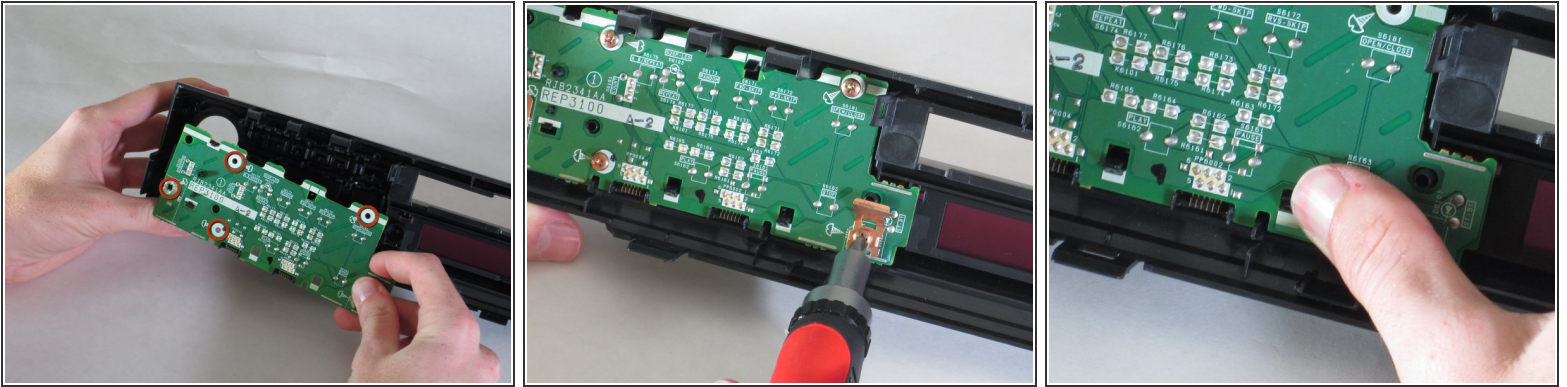

- Remove 4 mounting screws as shown.
- Unscrew and save brass tab.
- Push in 2 plastic retainers and lift out.

To reassemble your device, follow these instructions in reverse order.