



# Dell Inspiron 5100 PP07L Memory Replacement

This guide will demonstrate how to replace the memory on a Dell Inspiron 5100 PP07L laptop.

Written By: May Chauvin



 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Revealing the memory panel



- Flip the laptop on its back, so that the bottom is facing up.

## Step 2 — Screw Removal



- Loosen the single Phillips #1 screw.
  - ⓘ This screw is attached to the panel and cannot be removed.

### Step 3 — Replacing the RAM



- Push the highlighted pin outward until the RAM pops slightly out of its socket.
  - Place the new chip in at a slight angle, and push it in and downward until little or none of the gold contacts are visible.
- ⚠ Not seating the new DIMMs correctly could cause the device to refuse to POST.

To reassemble your device, follow these instructions in reverse order.