




Tagital T7X Camera Replacement

This guide shows the reader how to disconnect and replace the cameras on the Tagital T7X tablet.

Written By: Hanlong Chen

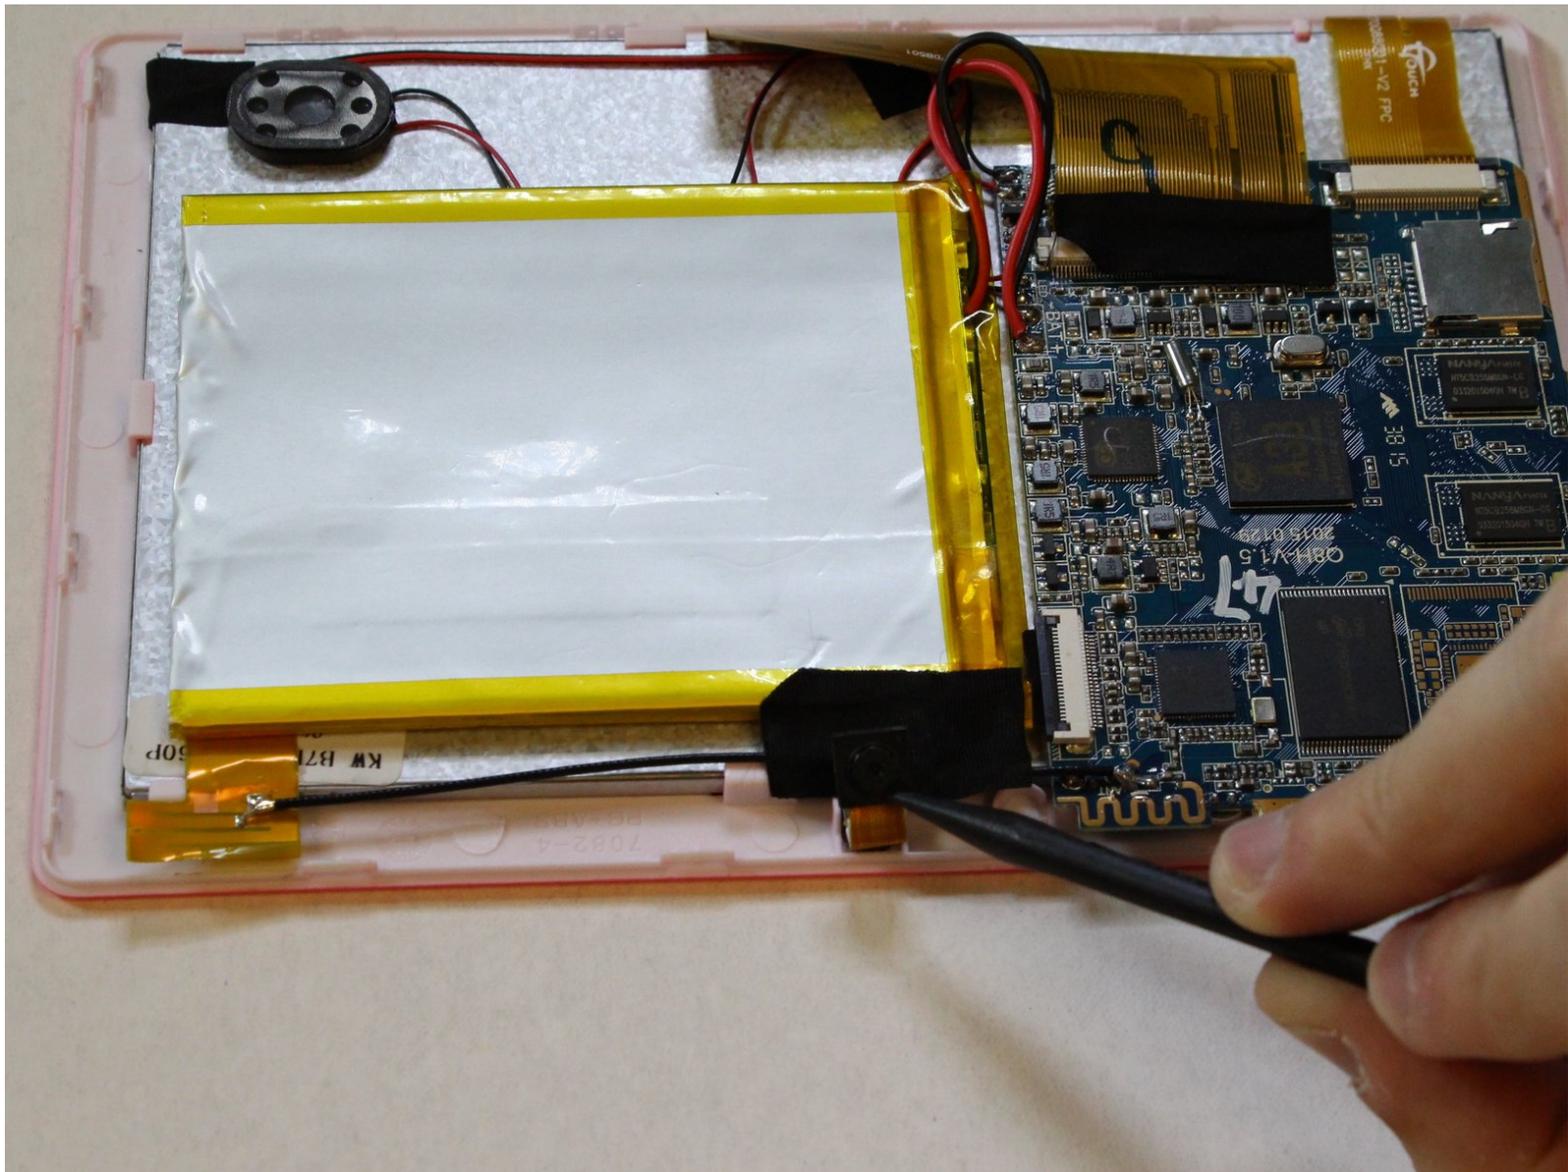

INTRODUCTION

The front and back cameras in this tablet are connected as one piece. Both cameras have to be replaced if either one is broken.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Case




- Place the Tagital T7X on a sturdy surface.
- Insert the plastic opening tool into the crack and pry open the tablet. Move the tool along the edge, while continuing to pry up the casing.

Step 2 — Camera

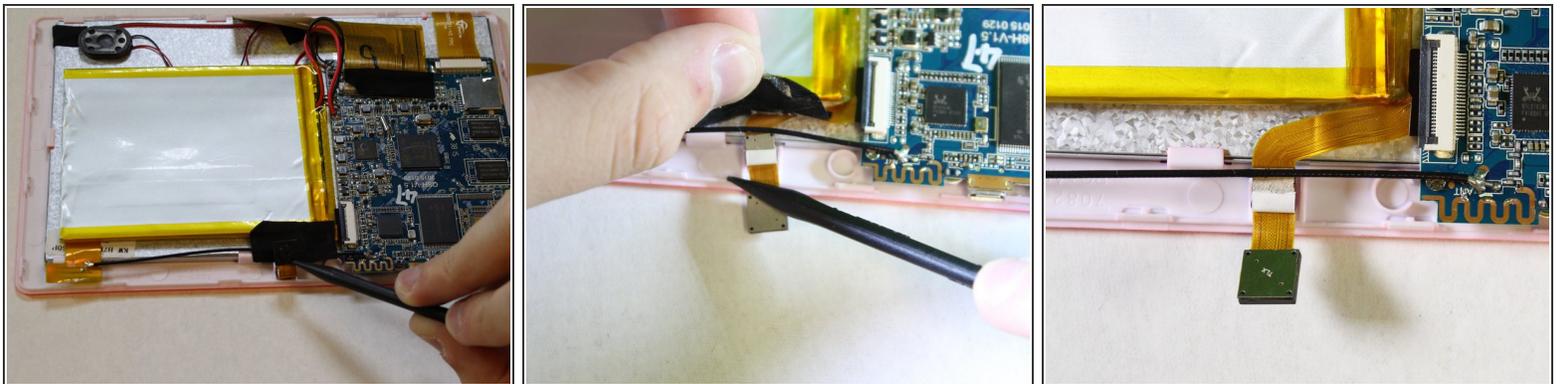


- Use a spudger to hold the cameras in place.
- Gently pull the black tape away using your finger.

Step 3

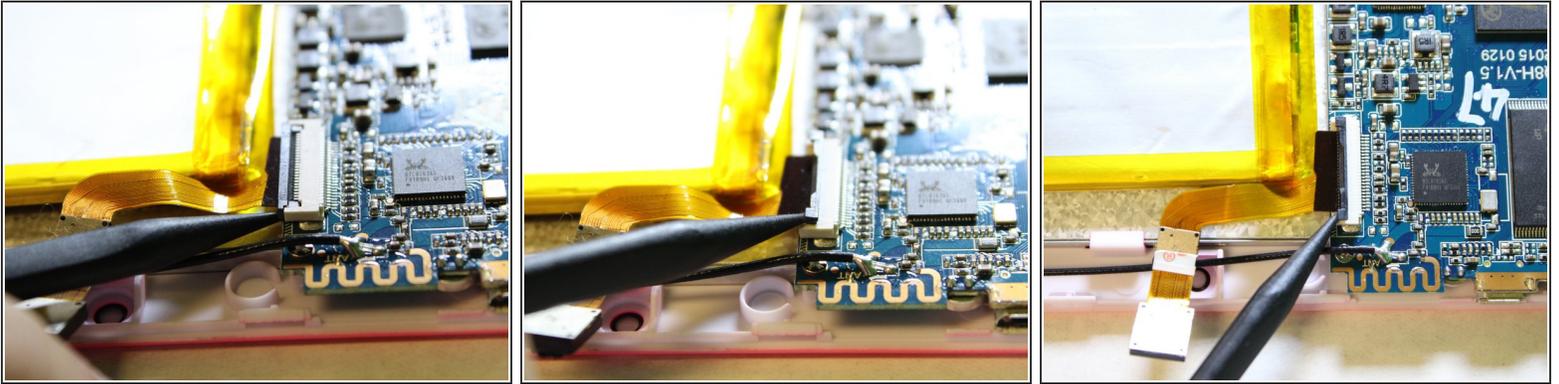

- Remove the ribbon cable from the motherboard.
- Use a spudger to lift the two tabs, freeing the ribbon cable from the socket.

Step 4

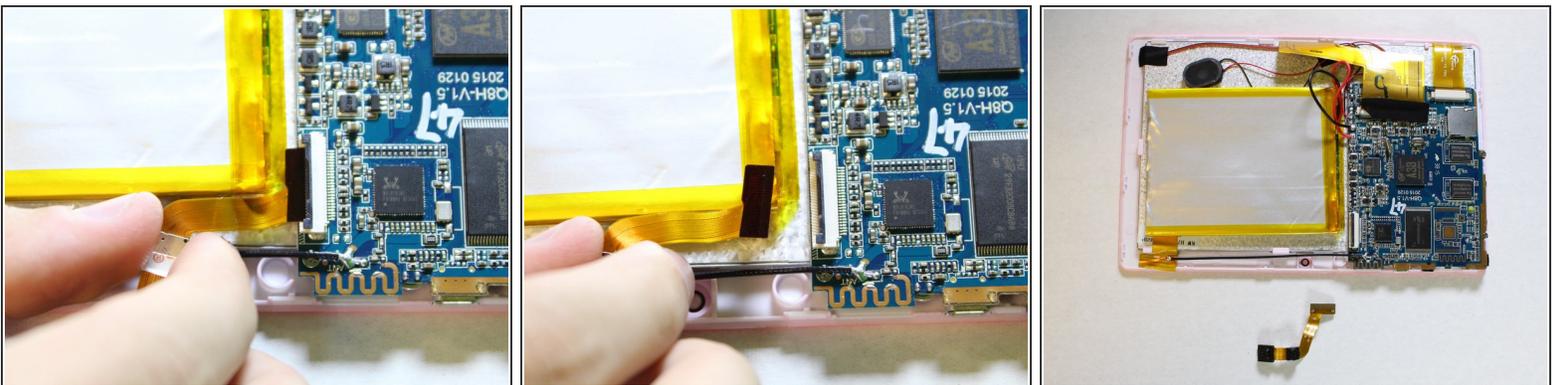

- Gently pull the ribbon cable away from the motherboard.
- ⓘ Don't be afraid to use some force to pull the ribbon cable.

To reassemble your device, follow these instructions in reverse order.