

Nook Tablet Screen Bezel Replacement

Use this guide to replace the screen bezel of...

Written By: Jacob Metzinger



INTRODUCTION

Use this guide to replace the screen bezel of the Nook Tablet. Removing this plastic frame is a prerequisite for accessing most of the Nook's internal components.

TOOLS:

[T5 Torx Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Screen Bezel



- Using the T5 Torx screwdriver, remove the ten T5 screws from around the edges of the silver midframe.

Step 2



- Using a spudger or plastic opening tool, carefully pry the screen bezel away from the silver midframe.

To reassemble your device, follow these instructions in reverse order.