



KitchenAid Professional 600 Top Cover Replacement

Written By: Luke



INTRODUCTION

Outline what you are going to teach someone how to do.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Top Cover



- Take out the screw which holds on the silver band using a Phillips #2 screwdriver.
- Remove the silver band.

Step 2



- Remove the four Phillips #2 screws located around the mixer where the band was removed.
- ⓘ This picture only shows two of the screws that you need to remove. The other two are on the exact opposite side of the mixer.

Step 3



- Remove the top of the mixer to reveal the inner parts.
- ⓘ The top should lift off, but may not if it is stuck. A sharp strike from the back with the hand may unstick it. It will slide forward about a 3/8 of an inch. Push it back again from the front and it should be free enough to lift.

To reassemble your device, follow these instructions in reverse order.