



Nokia C7 - 00 Touchscreen Replacement

Guide to replace touchscreen glass

Written By: Smilzo




Step 1 — Touchscreen and LCD



- With a thin tool insert it in the cover at the bottom and pry up to release it

Step 2

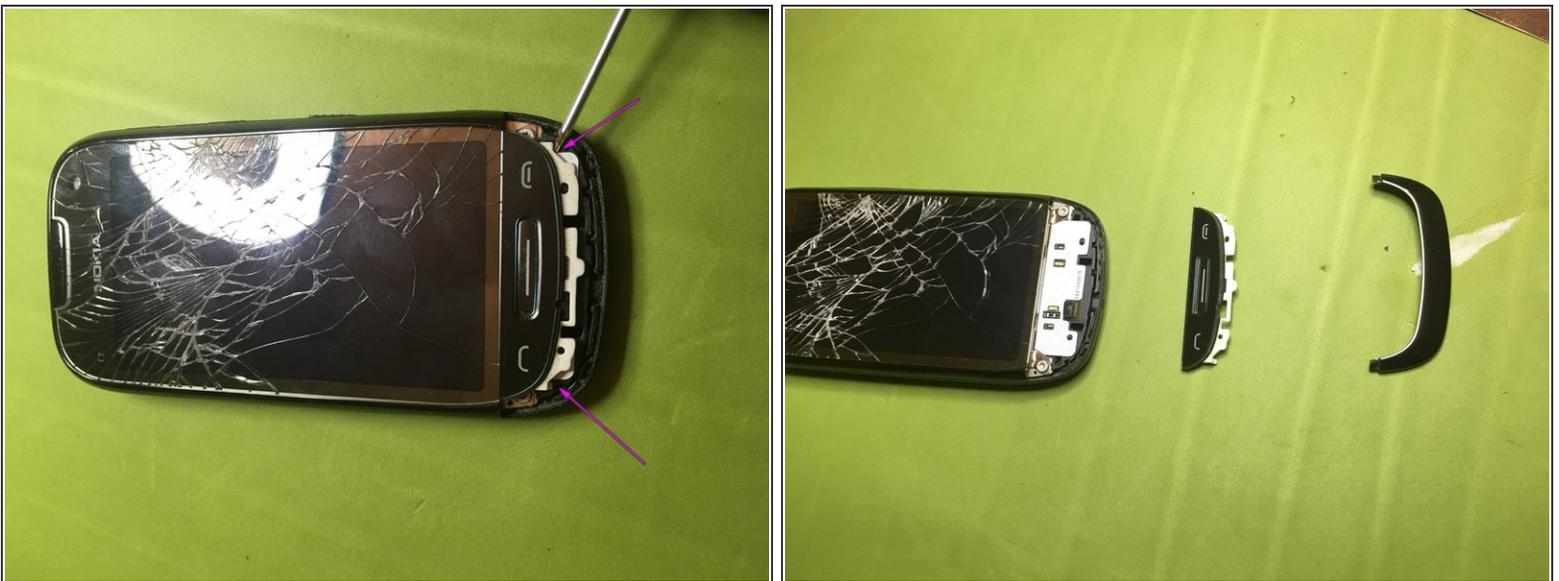


- Pry up the two points indicated by the arrows to release the keyboard

Step 3



- Remove battery and battery cover

Step 4

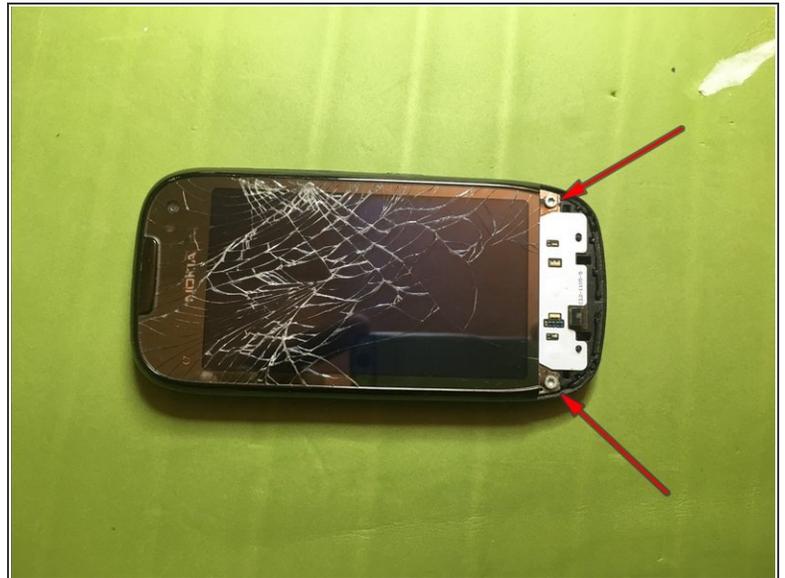

- Unscrew the 2 rear screws
- Unscrew the 2 front screws

Step 5



- Gently lift the front glass and slide it slightly in the direction of the arrow so you can free it

Step 6





- if the display needs to be replaced and then you have no problems if it is broken in the door, proceed with a heat source and a thin tool to be able to break it from underneath
- If the display is as good as in my case to avoid the risk of breaking it, unscrew the two red arrow screws
- Gradually unscrew the purple arrow screw so that you do not lose too much on the back of the display to avoid breaking it, at the same time lift it from the keyboard area and gradually unscrew Dino to the complete lifting of the display and its housing doing Leva also laterally on the releases

Step 7



- Lift up display assembly.

Step 8

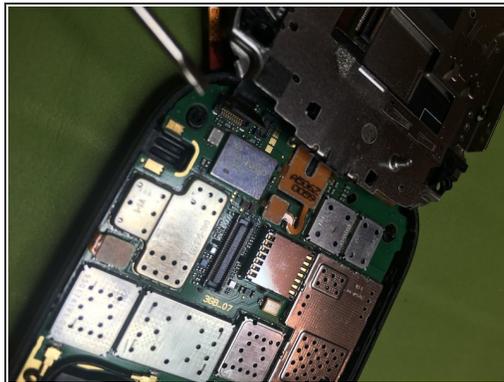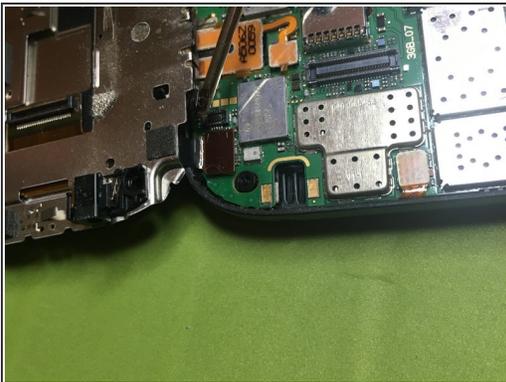

- Disconnect touch screen connector
- Disconnect display connector

To reassemble the device, follow these instructions in reverse order.