



Numark TT1600 Belt Drive Replacement

This guide will assist you in replacing the belt drive for the Numark TT1600.

Written By: Nikolai



INTRODUCTION

Make sure device is unplugged.

Step 1 — Belt Drive



- Remove slip mat from top of the platter.

Step 2



- Remove platter by inserting thumbs in holes and slowly pulling up.
- ⓘ There will be some initial resistance.

Step 3




- Remove damaged belt which will be located below the platter.

Step 4





- Install new belt by securing it around the inner ring, located on the back of the platter.

Step 5

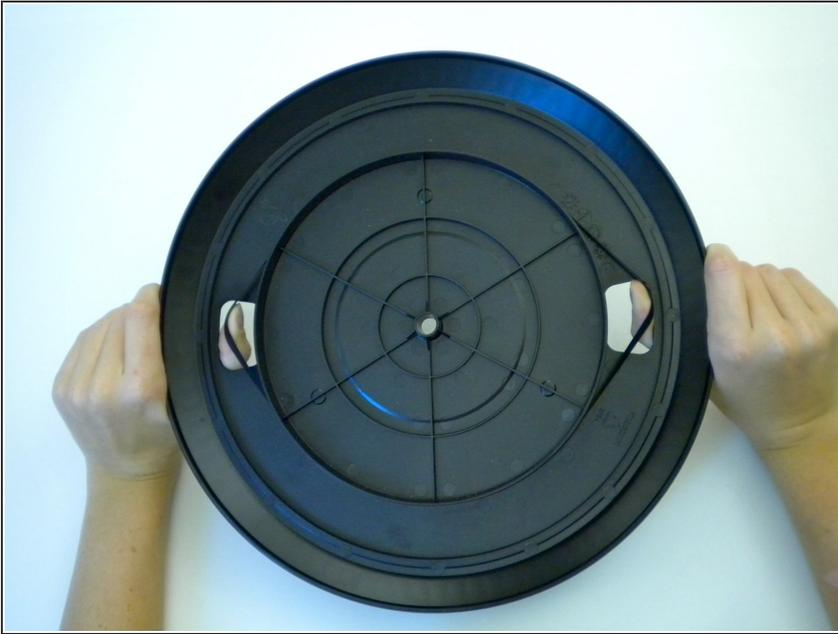

- Place a thumb in each hole.
- ⓘ You should be able to feel the rubber belt.
- Gently pull the belt with each thumb, keeping the belt taut around the inner ring.

Step 6

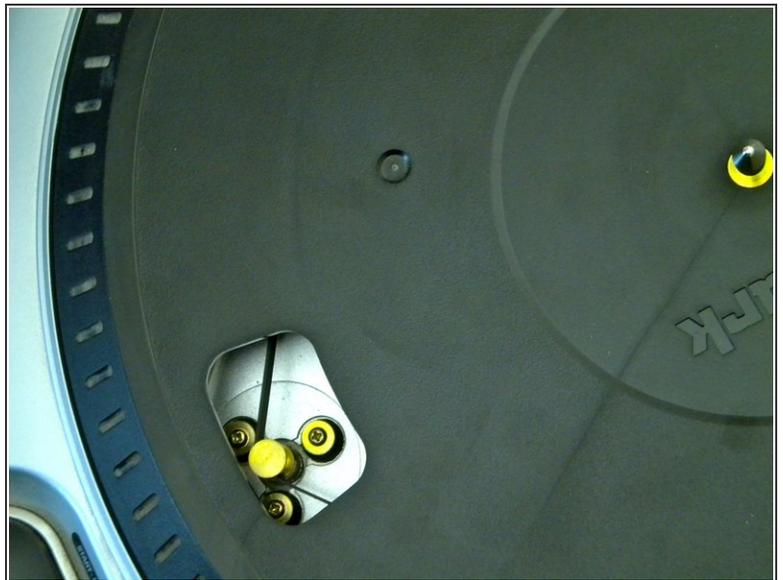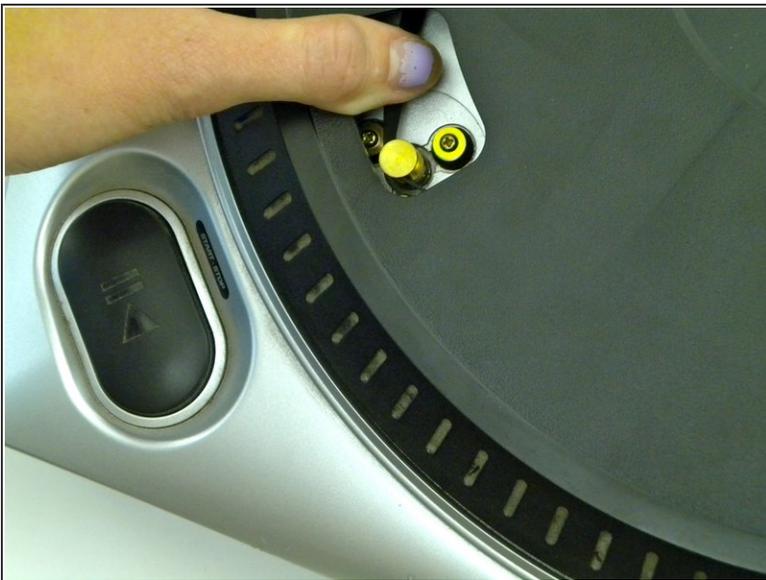

- Secure platter back on turntable while keeping belt taut.
- Pull belt around motor spindle.
- Gently let go of belt.

Step 7



- Test turntable by spinning the platter.
- ⓘ There should be slight tension causing the platter to come to a stop.