




ASUS U52F-BBG6 Hard Drive Replacement

How to replace a hard drive in an ASUS U52F-BBG6.

Written By: Ashley DeHuff

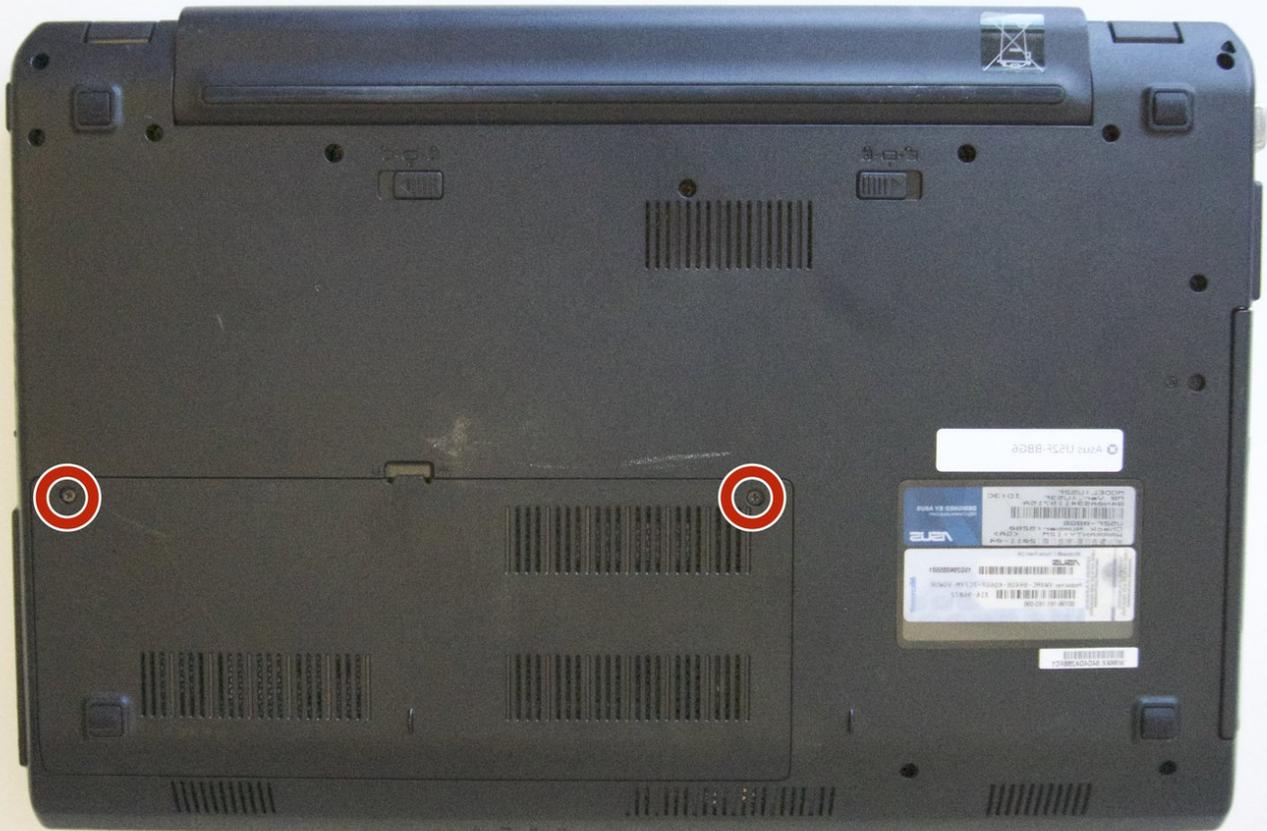


INTRODUCTION

This guide will inform you on how to replace your hard drive. This replacement will be very easy as there are only a few screws that need to be taken out during this guide to access and remove the hard drive.

TOOLS:


- [JIS #1](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Hard Drive

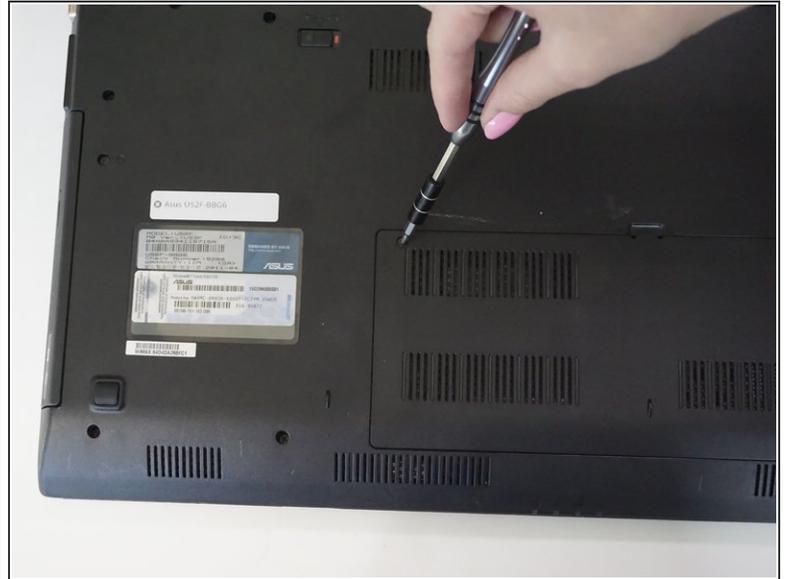


- Turn the laptop over to the back.
- Unscrew the two 3mm Phillips screws using a PH0 screwdriver.
- Lift the small black panel upward by putting your fingernail in the provided slot.

Step 2

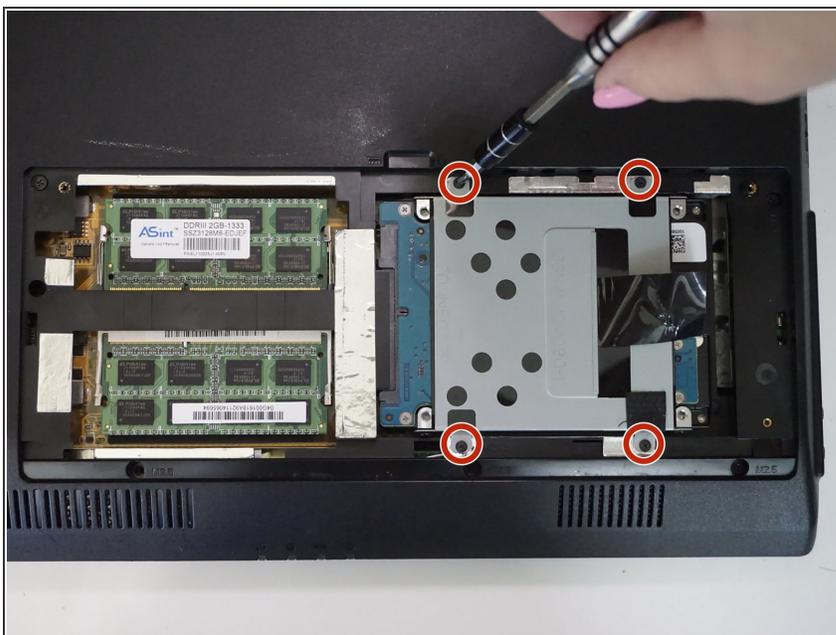

- Use the J1 screwdriver to unscrew the four 3mm Phillips screws on the hard drive.

Step 3

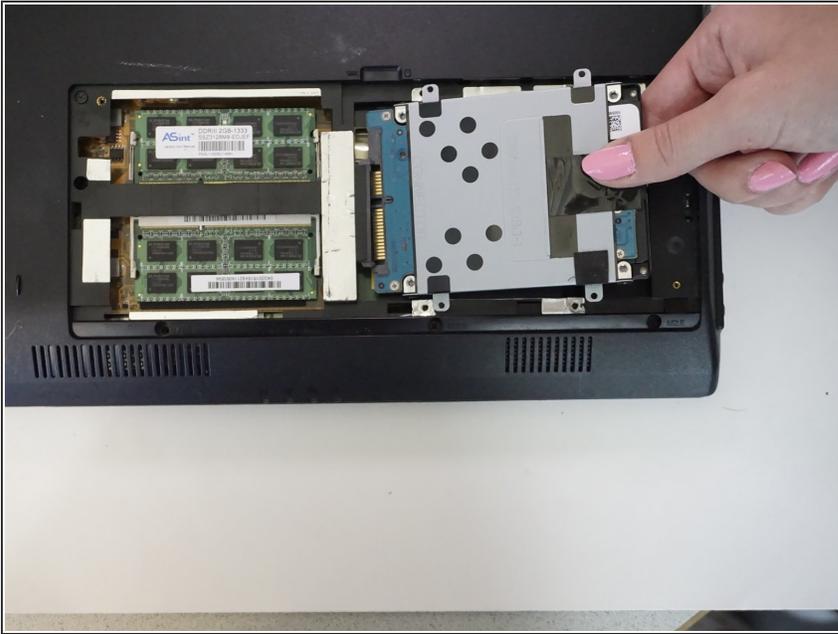

- Slowly pull the hard drive upward with your finger and thumb.

To reassemble your device, follow these instructions in reverse order.