



# ASUS U52F-BBG6 Random Access Memory (RAM) Replacement

Written By: Ashley DeHuff



---

## INTRODUCTION


This guide will help you replace or upgrade your random access memory. This replacement will be very easy and will only require you to remove some screws.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Random Access Memory (RAM)

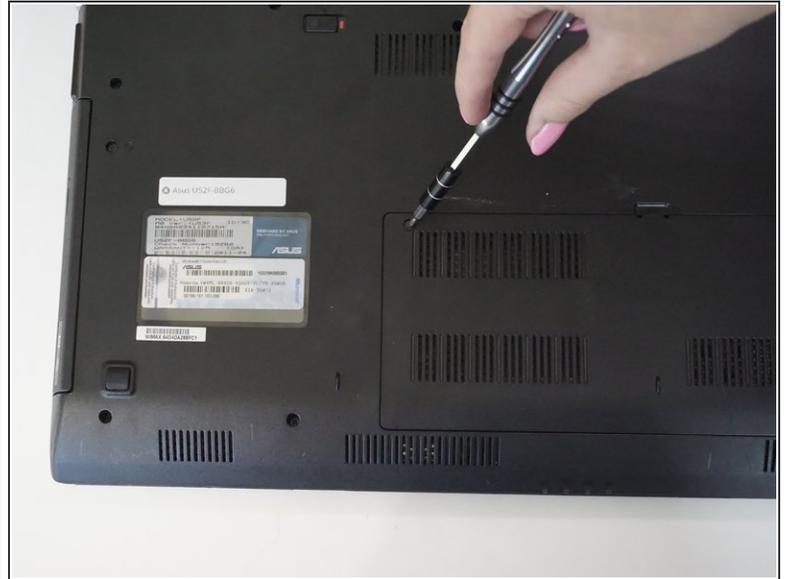

- Unscrew the two 3mm Phillips screws with the PH0 screwdriver.
- Unhook the back panel by inserting your fingernail in the slot provided.
- Lift the panel upward.

## Step 2



- Use both hands to pull the gold prongs outward.
- ⚠ Be careful not to get pinched as the RAM will spring upwards when released.
- Lift the RAM out.

To reassemble your device, follow these instructions in reverse order.