





# Disassembling Ericsson CF 388 Battery

This guide will allow the user to remove and replace the battery.

Written By: Niccolas Tones

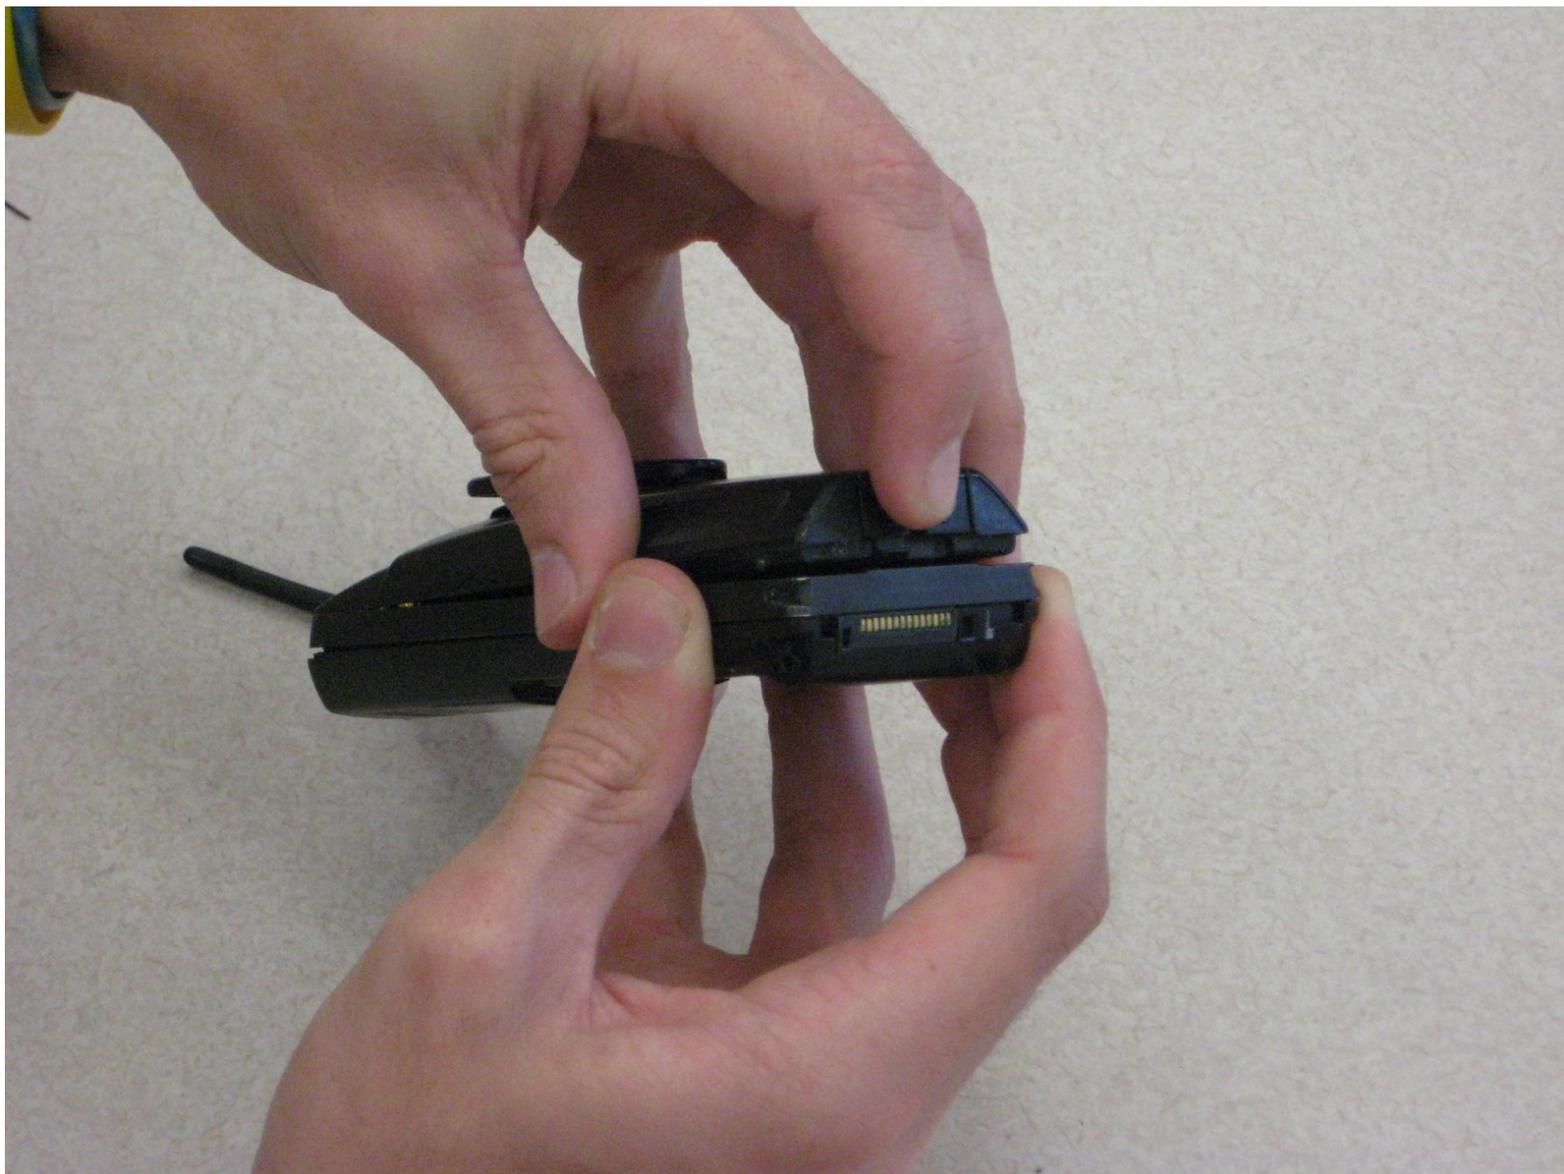

## Step 1 — Disassembling Ericsson CF 388 Battery

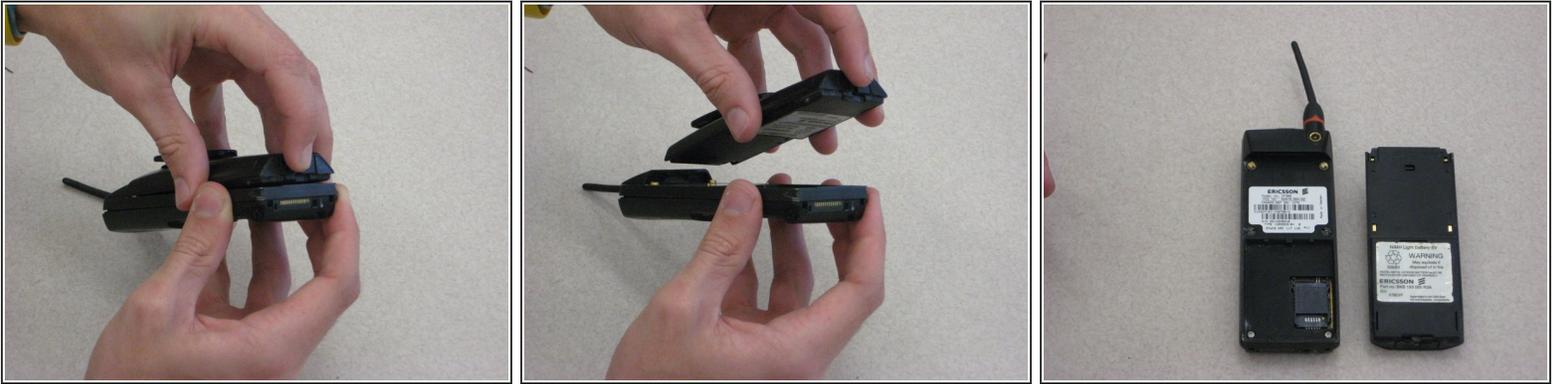

- To remove the battery from the casing, grab the front panel and back panel with opposite hands (as shown). The back panel is the same as the battery.
- With your index finger, push in the button on the bottom of the battery to release it.
- Pull the battery away from the phone.

To reassemble your device, follow these instructions in reverse order.