



# INTRODUCTION

Prerequisite Only



## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)



## PARTS:


- [Acer Chromebook C740 Bottom Cover](#) (1)

## Step 1 — Back Panel



- Power down the Chromebook and disconnect the power adapter.

## Step 2

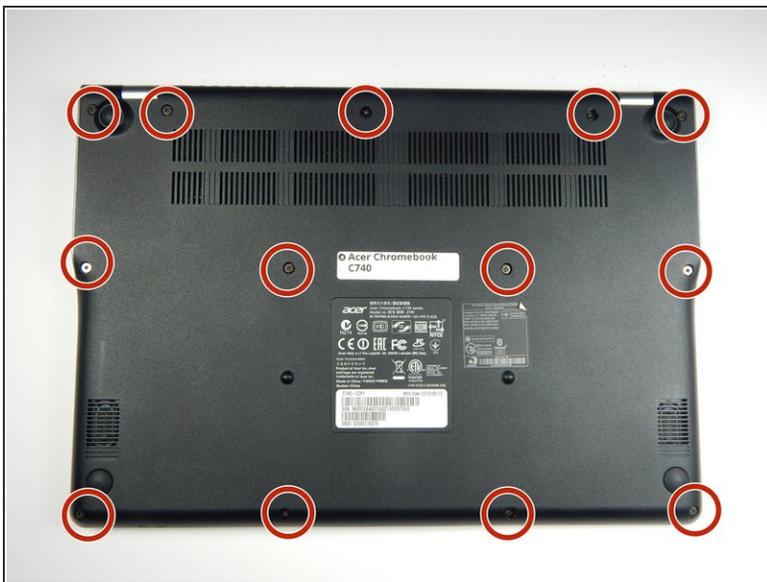

- Place the chromebook bottom side up on a flat surface.
- Remove the thirteen 7 mm screws with a Phillips #0 screwdriver.

### Step 3



- Insert the plastic opening tool into the slit near the hinges and pry upwards to lift the back panel.
  - ⓘ Applying pressure may be necessary. A click indicates the panel is ready to come off.

To reassemble your device, follow these instructions in reverse order.