



Kodak EasyShare C195 Batteries Replacement

How to replace AA batteries

Written By: Alyssa



INTRODUCTION

The guide will show you how to remove and replace the batteries in your camera.



PARTS:

- [AA Batteries](#) (2)
-

Step 1 — Batteries



- First, open the cover to the batteries. This is located on the bottom left of the camera.
- Push the door down and to the left to open. This opens into the batteries and the memory card.

Step 2



- To insert the batteries, place them in the slots provided.
- ⓘ Make sure the positive and negative signs match with the positive and negative sides of the batteries.

Step 3



- When finished, you should have one battery positive side up and the other one negative side up.

To close the door, push the door down and slide to the right