


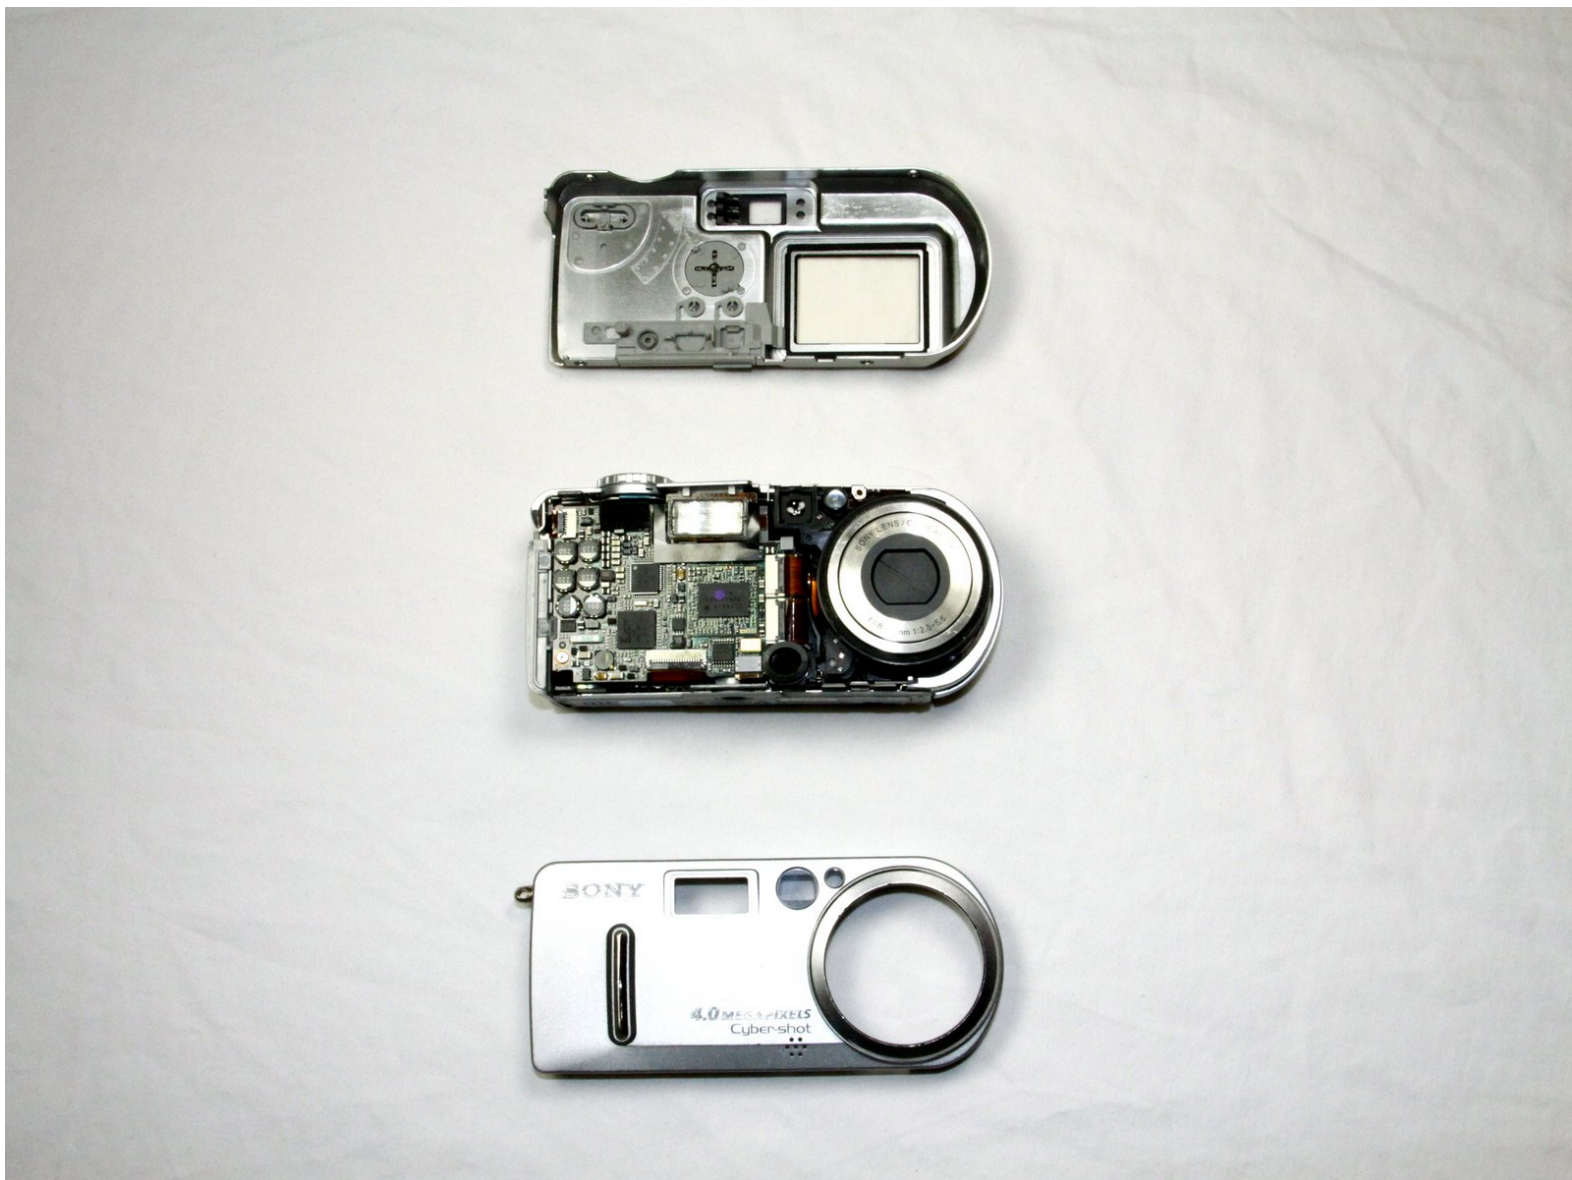

# Sony Cyber-shot DSC-P9 Outer Casing Replacement

Remove the outer casing before you can replace the mother board and flash.

Written By: Jenna Crawford





## TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery



- Slide the battery latch down the side of the camera with your hands.
- The latch will automatically pop open.

## Step 2



- Unlatch the clip over the battery.
- The battery will partially pop out.





### Step 3



- Remove the battery from the camera.

### Step 4 — Outer Casing

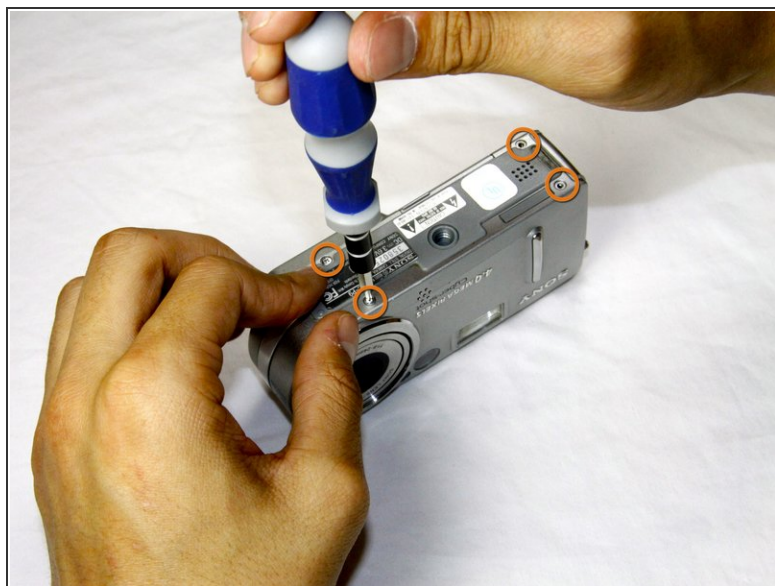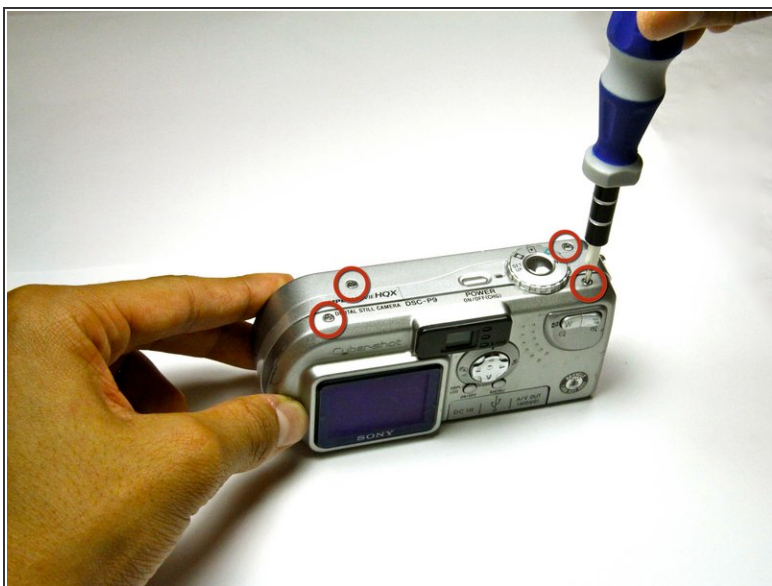


- Remove the four 3.0mm Phillips #000 screws on the top of the camera with the phillips screwdriver.
- Remove the additional four 3.0mm Phillips #000 screws on the bottom of the camera.

## Step 5



- Once the screws are removed, slowly remove the back casing from the rest of the camera.


## Step 6

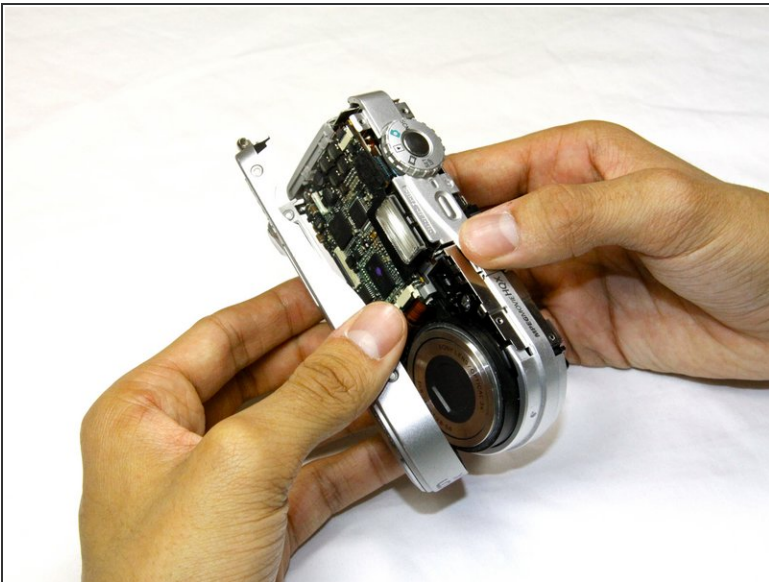

- Then, pull the front case away from the rest of the camera.



## Step 7

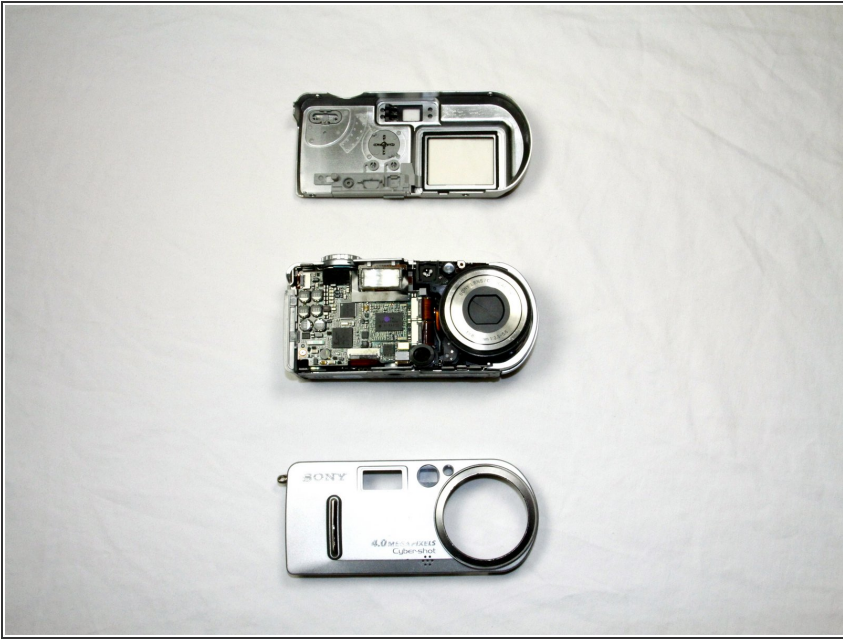

- After the casing is removed, the camera should look as shown.

To reassemble your device, follow these instructions in reverse order.