



iMac G5 17" Model A1144 RAM Replacement

Written By: Walter Galan



INTRODUCTION

Upgrade your RAM for an instant increase in speed!



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [PC2-4200 2 GB RAM Chip \(Desktop\)](#) (1)

Step 1 — Access Door



⚠ Before you work on the computer, unplug the computer and press the power button for 20-30 seconds to drain the stored energy in the power supply.

- Loosen the two Phillips screws securing the access door to your iMac.

i These screws are captive in the access door.

Step 2




- Remove the access door from your iMac.

Step 3 — RAM



- Insert your fingers into the two RAM arms and pull both arms toward yourself to eject the RAM chip.

Step 4

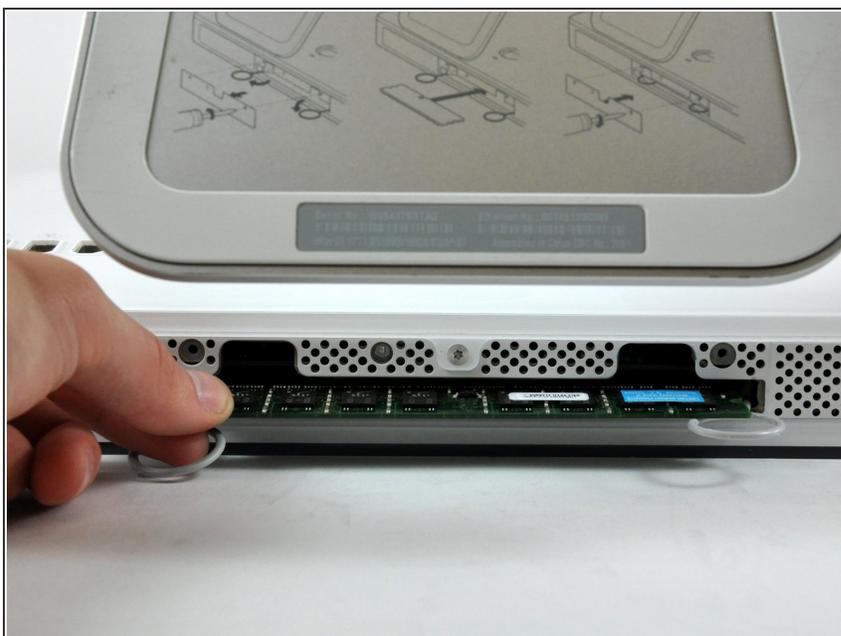

- Slide the RAM chip straight out of its socket.
- ⓘ Make sure both RAM arms are fully rotated outward before reinstalling your RAM chip.

To reassemble your device, follow these instructions in reverse order.