



2009-2015 Toyota Prius Oil and Oil Filter Replacement

A video tutorial on how to change the oil and oil filter on a 2009-2015 Toyota Prius.

Written By: eCuration



INTRODUCTION

The engine oil and oil filter should be replaced every 5,000 miles.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the change yourself.



TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stands](#) (1)
- [Wheel Chocks](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [14 mm socket](#) (1)
- [Oil Filter Wrench](#) (1)
- [Oil Drain Pan](#) (1)
- [Paper Towels](#) (1)
- [Torque Wrench](#) (1)



PARTS:

- [Oil Filter](#) (1)
- [0W-20 Motor Oil](#) (1)
- [Oil Drain Plug and Gasket](#) (1)

To reassemble your device, follow these instructions in reverse order.