



Written By: Jay Shah



---

## INTRODUCTION

In this guide you will learn how to replace the motherboard and the speaker assembly. Both the motherboard and speaker are connected.

---

### TOOLS:


- [Prying and Opening Tool Assortment](#) (1)
-

## Step 1 — Battery



- Remove the back cover by prying it open with the metal spudger tool.

## Step 2

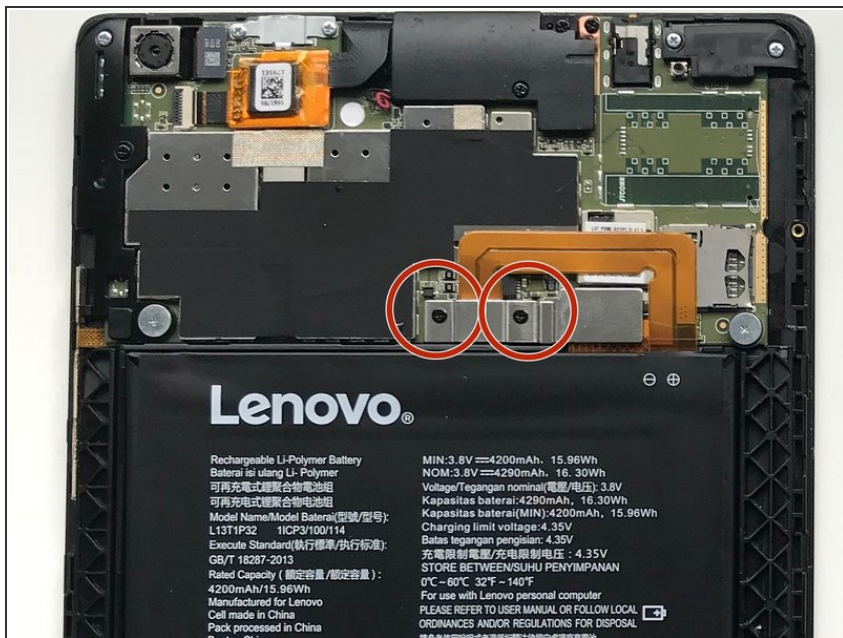

- Remove the two screws with a PH000 head screwdriver.
- ☑ Keep all your screws in one place.



## Step 3




- Remove the metal piece.
- ☑ Keep this piece safe, as you will need it to reassemble the device again.

## Step 4



- Remove the battery by lifting it up using a plastic spudger.

## Step 5

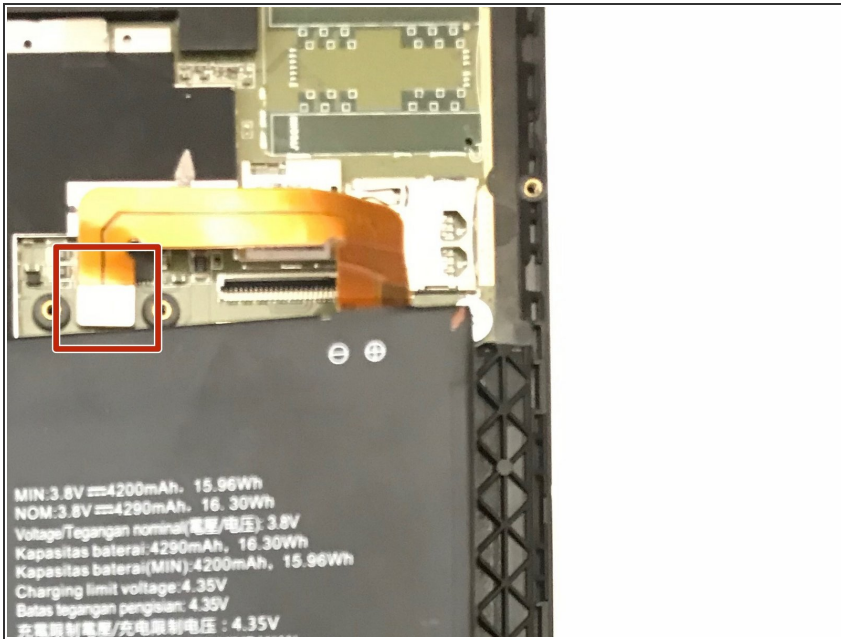

- Disconnect the cable from the connection.

⚠ Be careful not to tear or bend the cable.



## Step 6 — Motherboard and Speaker



- Unscrew the 5 black screws, and the 9 silver screws with a PH000 head screwdriver.

★ Set aside carefully.


## Step 7

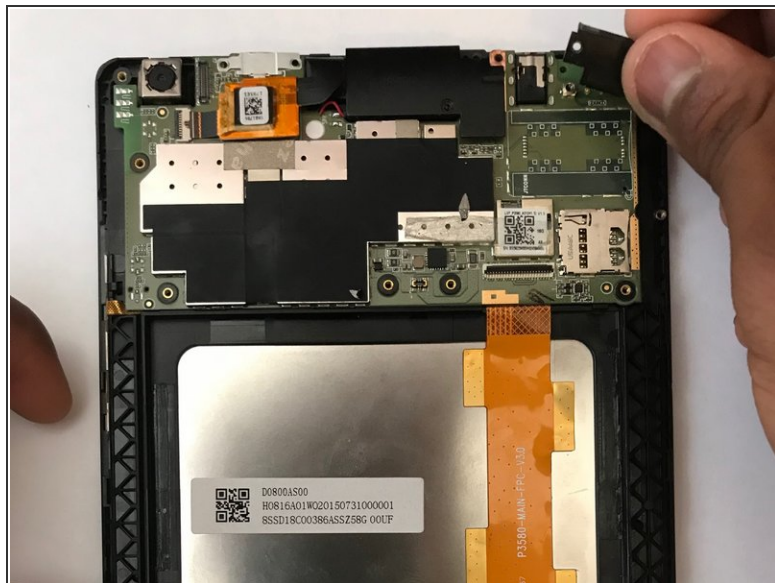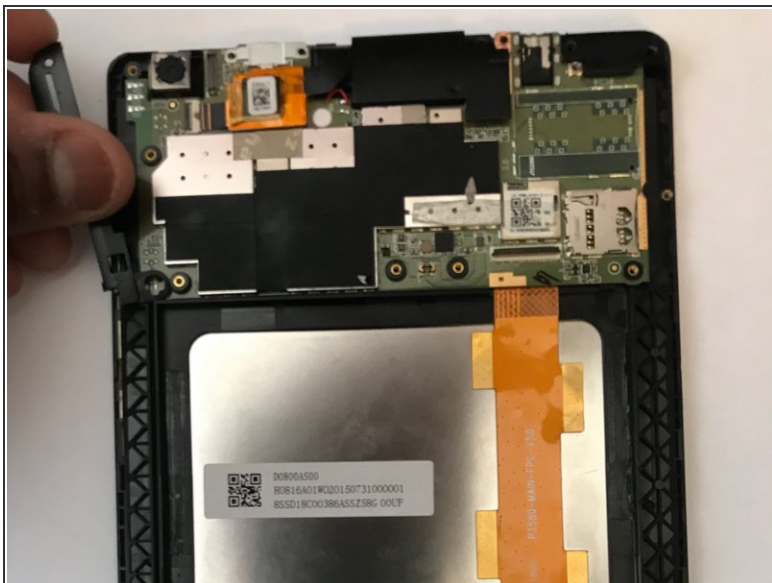

- Remove the two black panels and the clear circle piece.

☞ Set aside carefully.


## Step 8

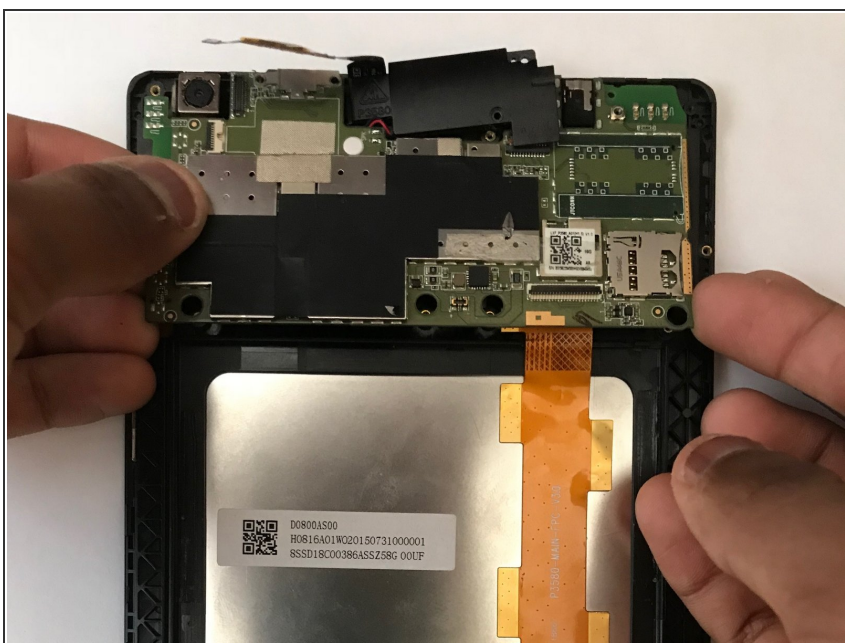

- Lift up the motherboard carefully, ensuring that you lift the speaker housing and the motherboard together



## Step 9

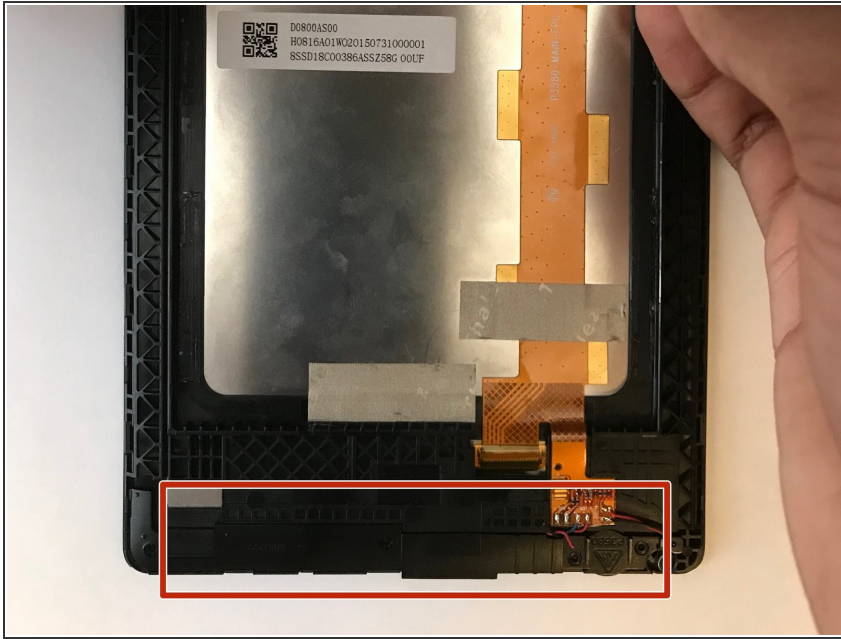

- Lift the bottom speaker piece up carefully

To reassemble your device, follow these instructions in reverse order.