



# Fujitsu Lifebook Stylistic Q584 Battery Replacement

Remove the battery of the Fujitsu Lifebook Stylistic Q584.

Written By: Connor Stanton



---

## INTRODUCTION

If you need to replace your Battery for the Fujitsu Lifebook Stylistic Q584 this guide will provide step-by-step instructions. In addition, it's important to remove the battery prior to replacing parts.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Case




- Remove the white sticker covering the screws *(if applicable)*.
- Use the PH1 screwdriver to remove the four 2 mm screws from the the backside of the device.

## Step 2




- Insert the plastic opening tool along the seam of the back case.
- Gently slide the plastic opening tool along the entire seam popping the clips free.

### Step 3

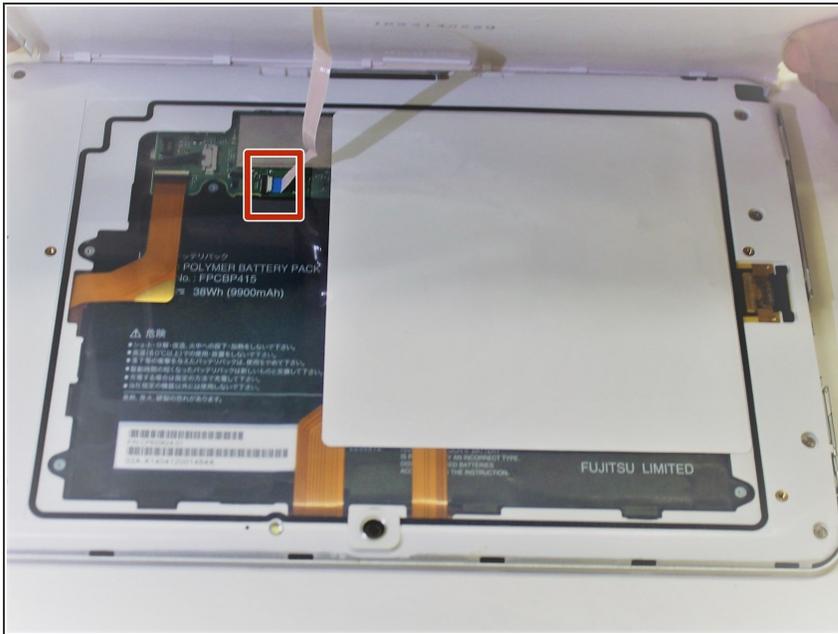


- Carefully lift the back case and remove the smartcard ribbon from the motherboard.

### Step 4 — Inner Back Shield

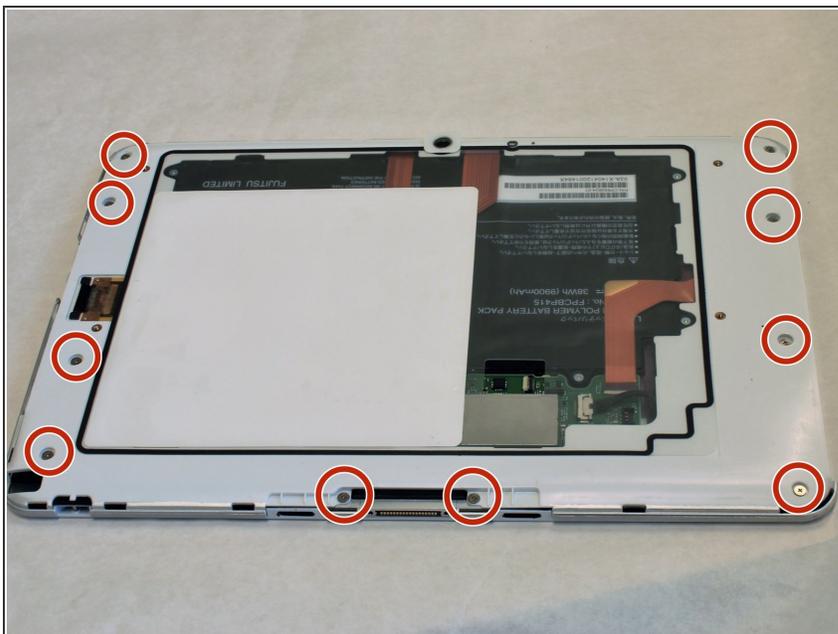


- Remove the ten 3mm screws with a PH00 screwdriver from the shield.

## Step 5

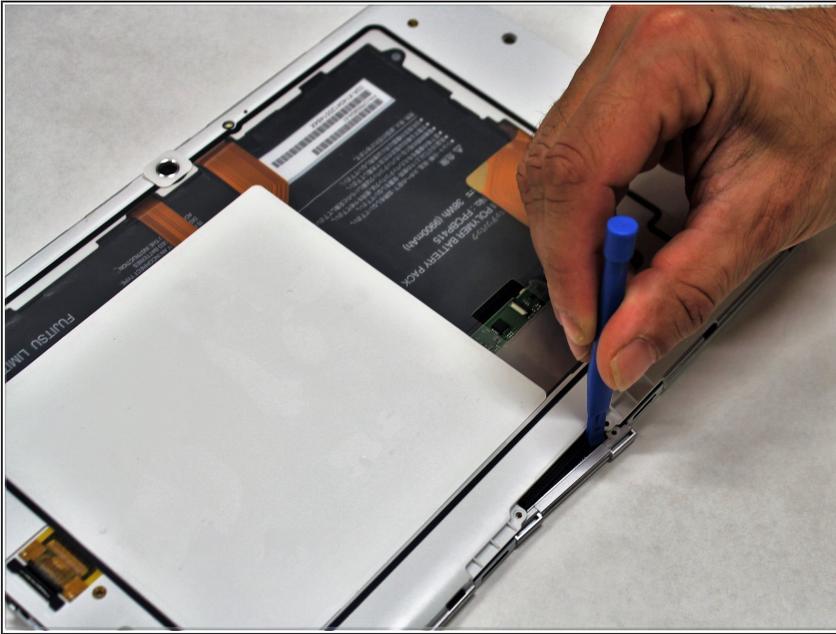

- Remove the grey docking station port cover.

## Step 6

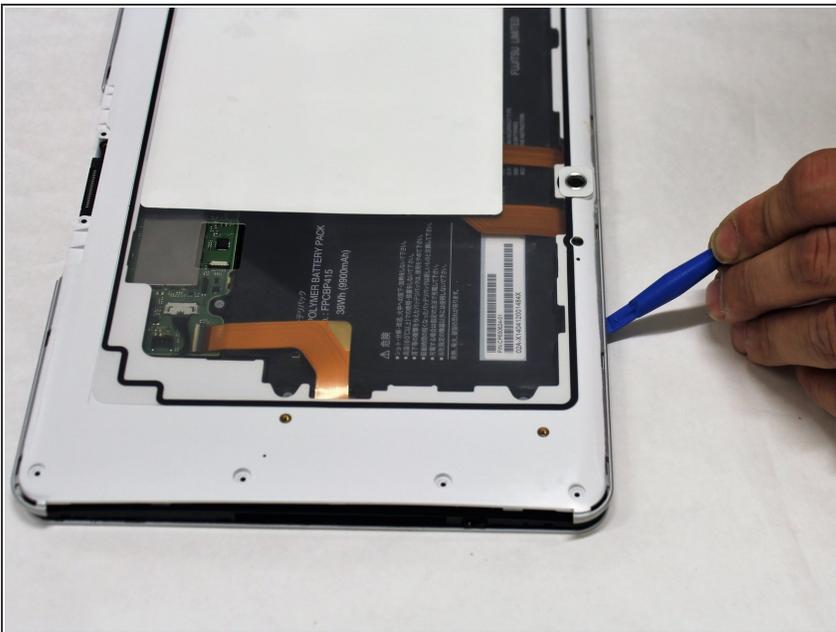

- Gently slide the plastic opening tool along the entire seam popping the clips free.

## Step 7




- Lift the shield away from the device and remove the fingerprint scanner's ribbon from the motherboard.

## Step 8 — Battery




- Pull up the cord that connects the battery to the motherboard

## Step 9

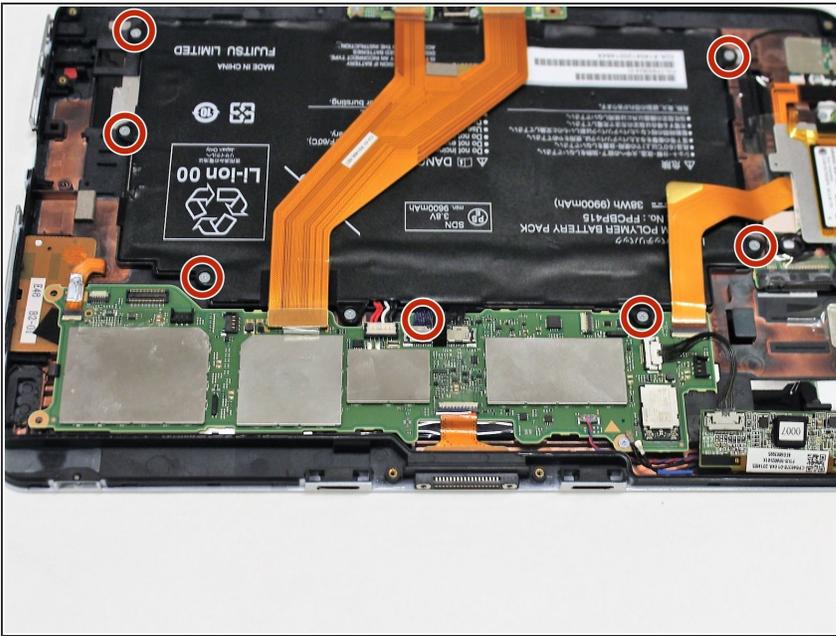

- Remove seven 1mm screws using a PH00 screwdriver.

## Step 10

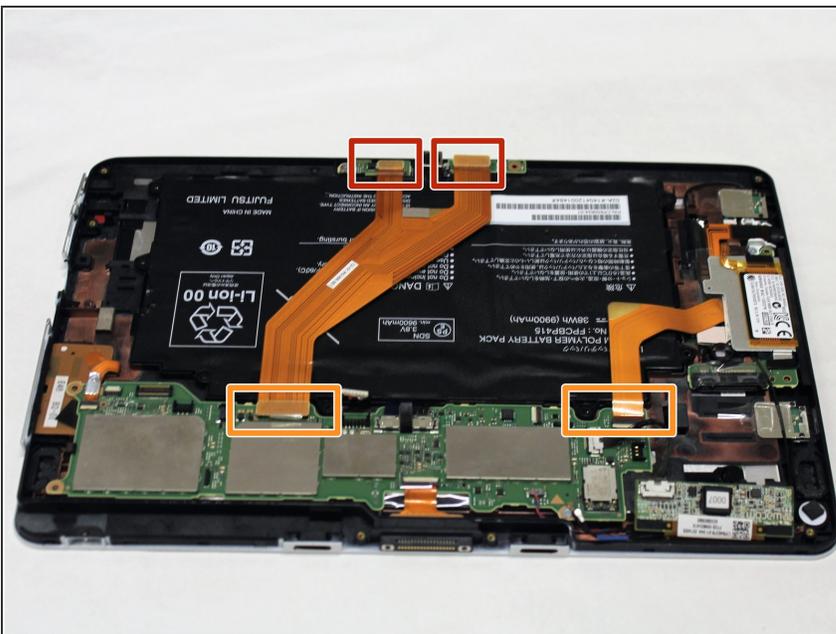

- Disconnect upper peripheral ribbons from motherboard.
- Disconnect left peripheral ribbon from motherboard.

## Step 11



- Gently lift the battery from the casing.

To reassemble your device, follow these instructions in reverse order.