

# Lenovo ThinkPad Yoga 260 Repair RAM Replacement

RAM or Random Access Memory, is a type of...

Written By: Daniel Fernandez



# INTRODUCTION

RAM or Random Access Memory, is a type of memory that temporarily stores information. If you have a faulty RAM or you are upgrading it, this guide will help you replace it.

## TOOLS:

[Phillips #1 Screwdriver](#) (1)  
[iFixit Opening Tool](#) (1)

## PARTS:


[01AG843 - Lenovo Laptop Memory - Genuine](#) (1)

## Step 1 — Back Cover




-  Ensure the device is off and unplugged.
- Remove the stylus from its port and set aside.

## Step 2

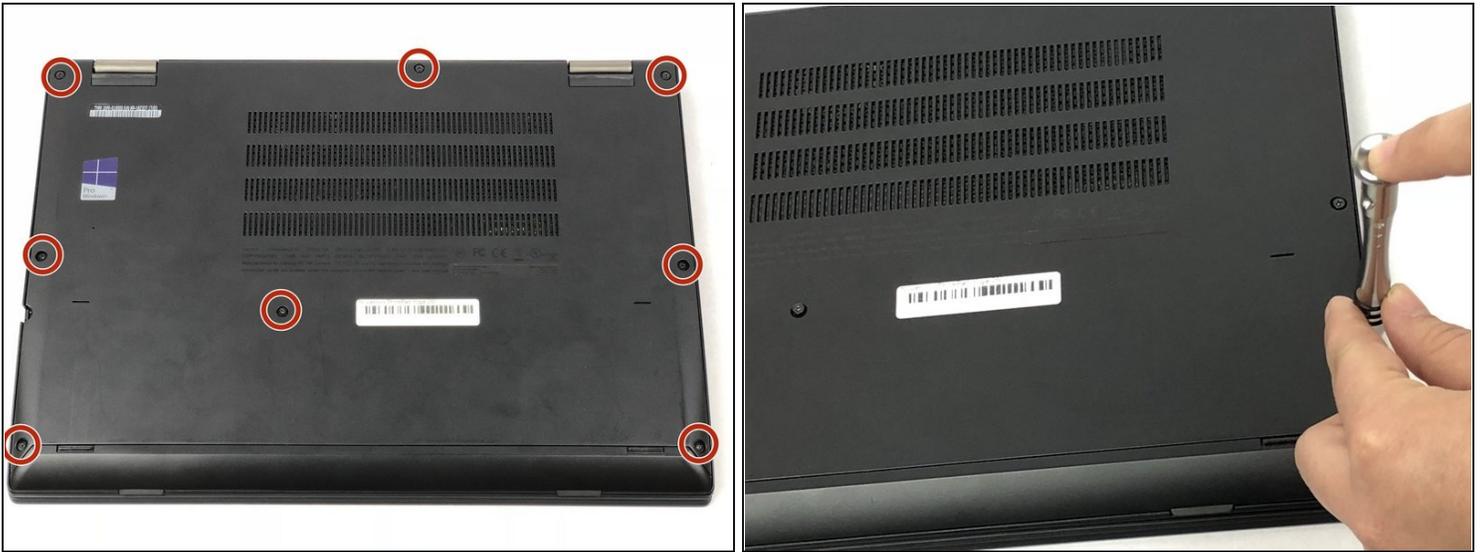


- Using a Phillips #1 screwdriver, gently unscrew the eight 1.3 mm Phillips #1 screws until you hear an audible click.
- ⓘ The screws will not separate from the bottom cover when loose.

### Step 3

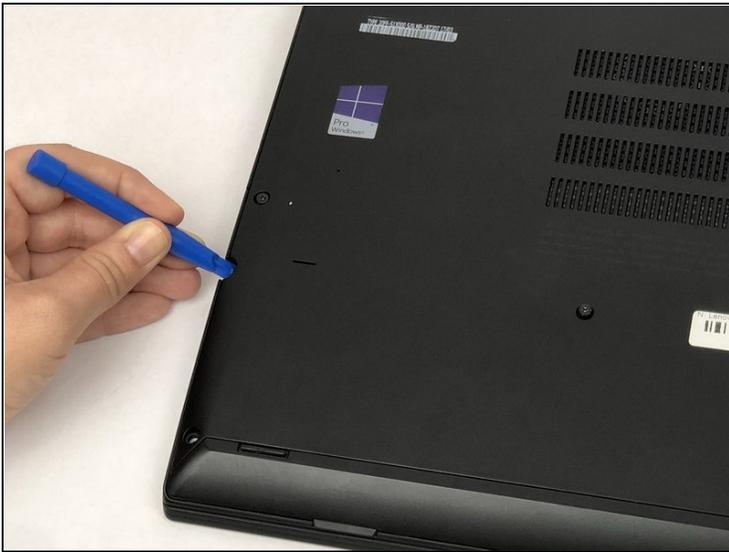

- ① The bottom cover is attached via several plastic clips located around the edges of the bottom cover.
- Using a plastic opening tool, gently pry the bottom cover from the laptop.
  - Work the plastic opening tool around the edges of the bottom cover undoing all of the plastic clips, as shown in the picture.

### Step 4

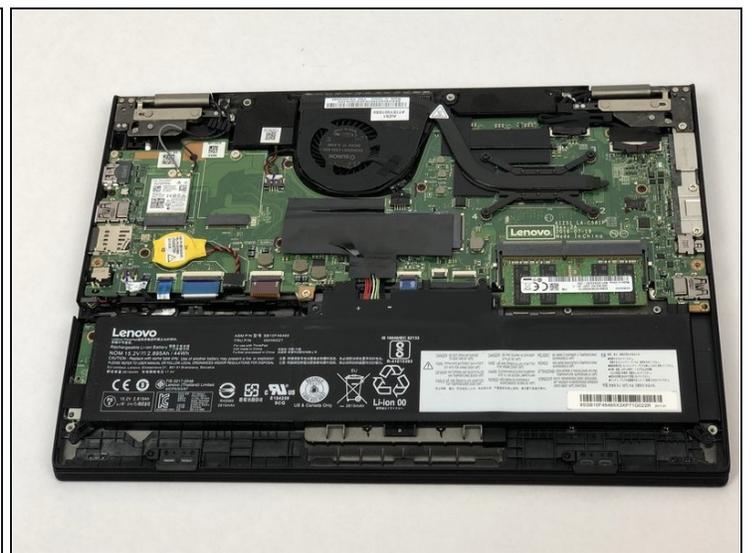

- Place your fingers around the edges of the cover and remove it.


## Step 5 — RAM



- Using both thumbs, pinch the RAM's mounting clips outward.

ⓘ The RAM module will spring up on its own.

## Step 6

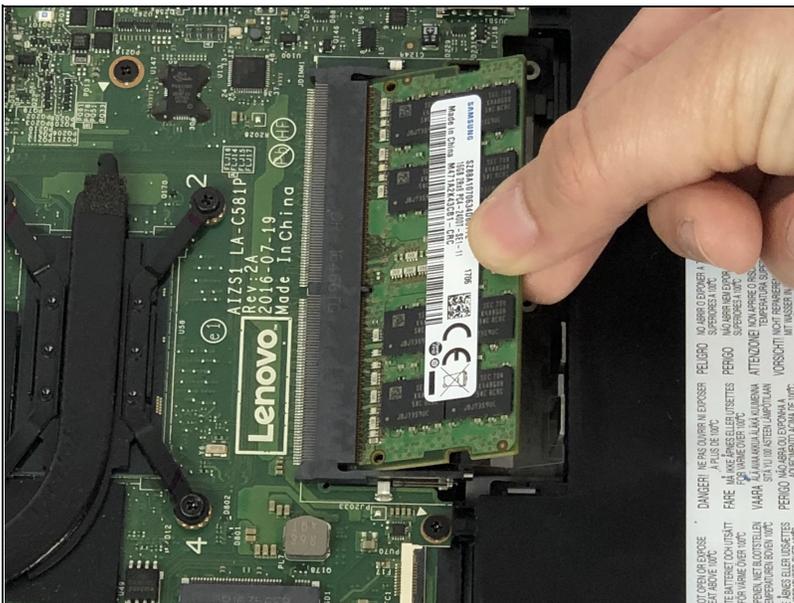

- Gently remove it from its mounting.

To reassemble your device, follow these instructions in reverse order.