




# Lenovo Yoga 710-11ISK Trackpad Replacement

This guide will show you how to replace the trackpad in the Lenovo Yoga 710-11ISK laptop.

Written By: Richard

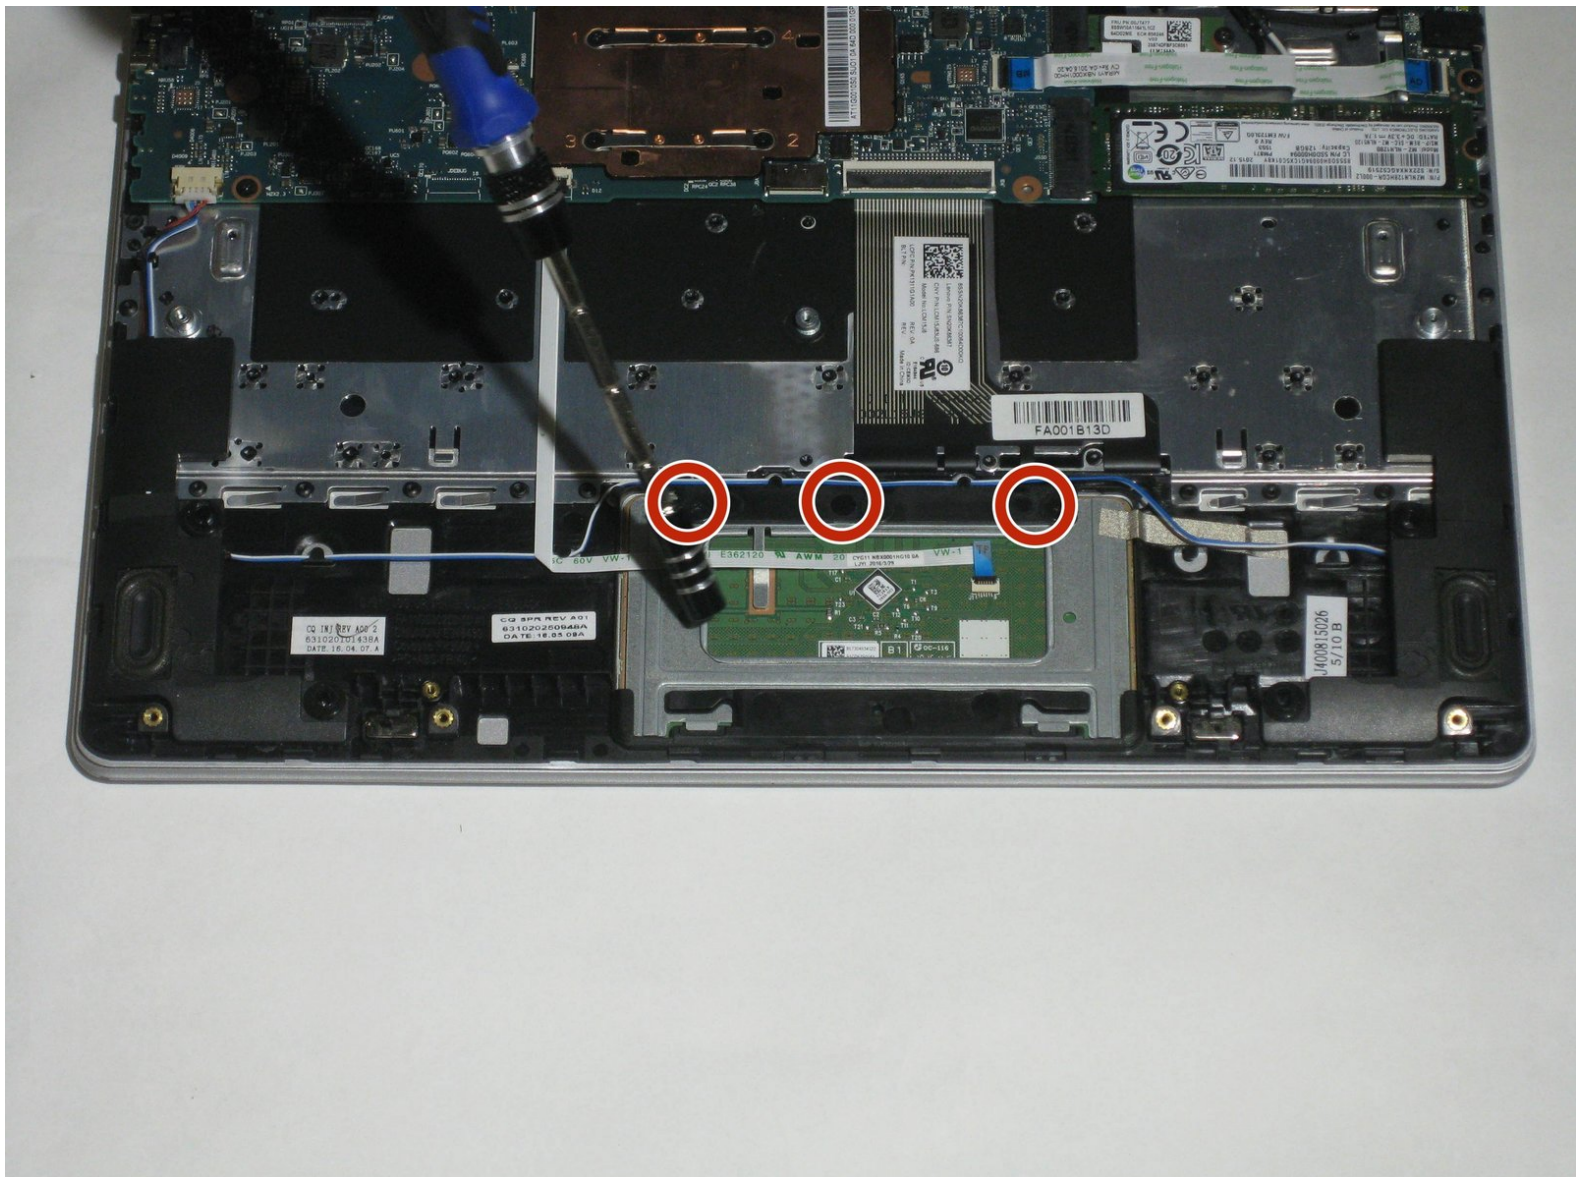

## INTRODUCTION

If your device isn't properly registering clicks or cursor movements, the trackpad may be faulty. Follow these instructions to remove and replace the trackpad in your Lenovo Yoga 710-11ISK.

---

### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Flip the device having the bottom panel facing you.
- Remove the eleven 5mm Torx T5 screws from the back panel.



## Step 2 — Removing back cover

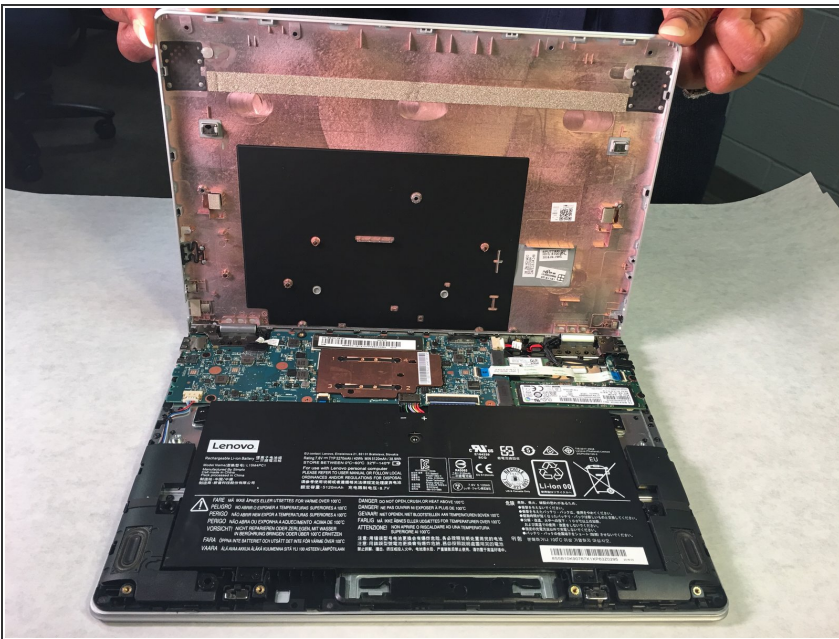

- Remove the back panel carefully.
- i* To remove the back cover, there are 5 plastic snap hooks that must be dislodged with a spudger or plastic pick tool.
- i* Lay the device upside down with hinges away from you. Tilt it at 45 degree angle, leaving hinges down and open the screen slightly. Apply a little pressure on one corner to see where it separates. Then work from side to side to separate the back case from the top case. The back case is a shell with no components in it.




## Step 3

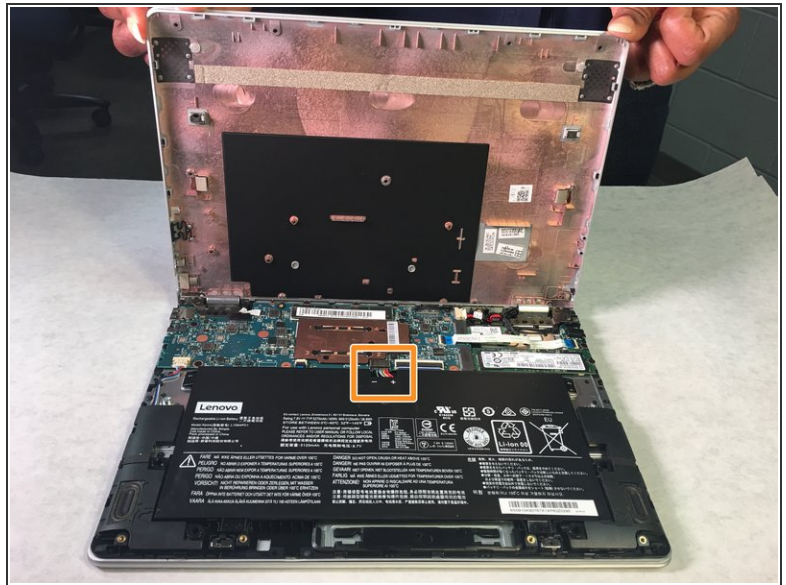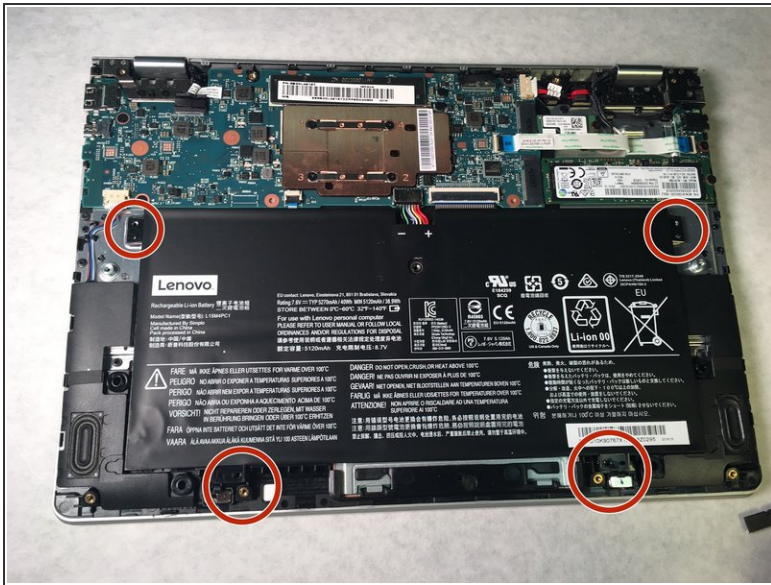


- Remove the two 3mm Phillips #1 screws that are holding the battery to the device.
- Hold the bundled cable connector on each side and carefully pull the connector to release it from the motherboard.

## Step 4

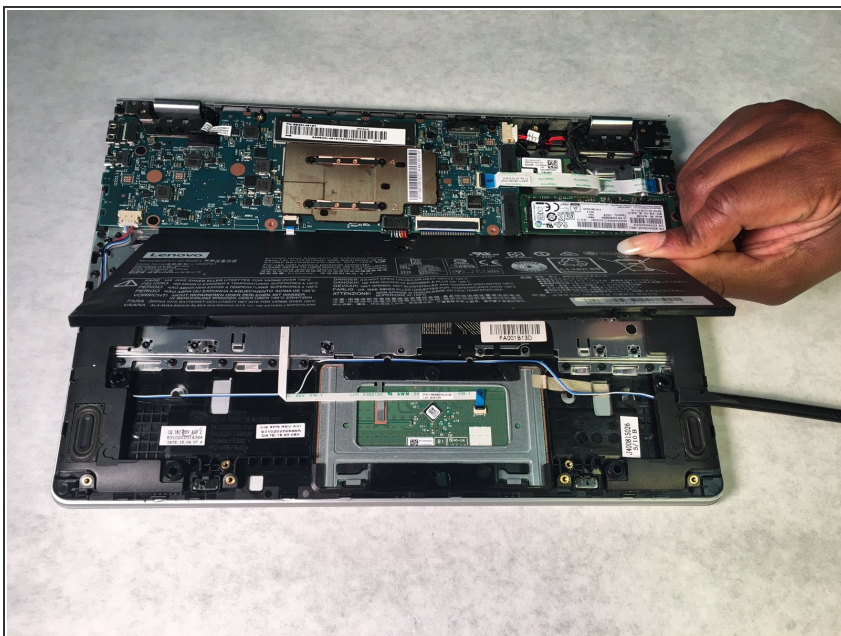


- Remove the battery carefully from the device by lifting up the edge nearest you and then gently pull toward you to disconnect the power wires.

## Step 5 — Trackpad

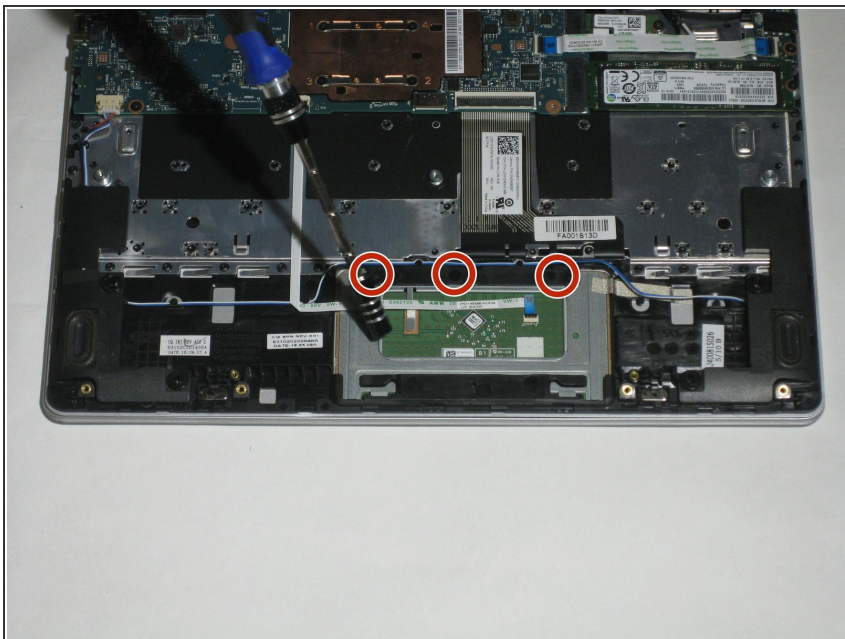

- Using a Phillips #00 screwdriver, remove the three 3mm screws located at the top of the trackpad.

## Step 6

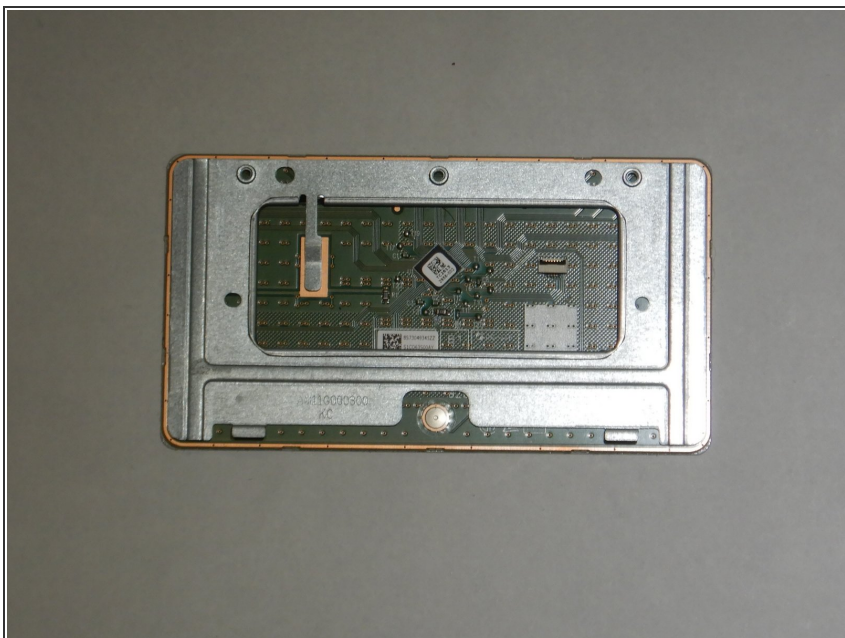

- Remove the trackpad from the device.

To reassemble your device, follow these instructions in reverse order.