




Lenovo IdeaPad 110-15IBR Optical Drive Replacement

This guide can be used to replace the optical drive

Written By: Saddam Alsinai

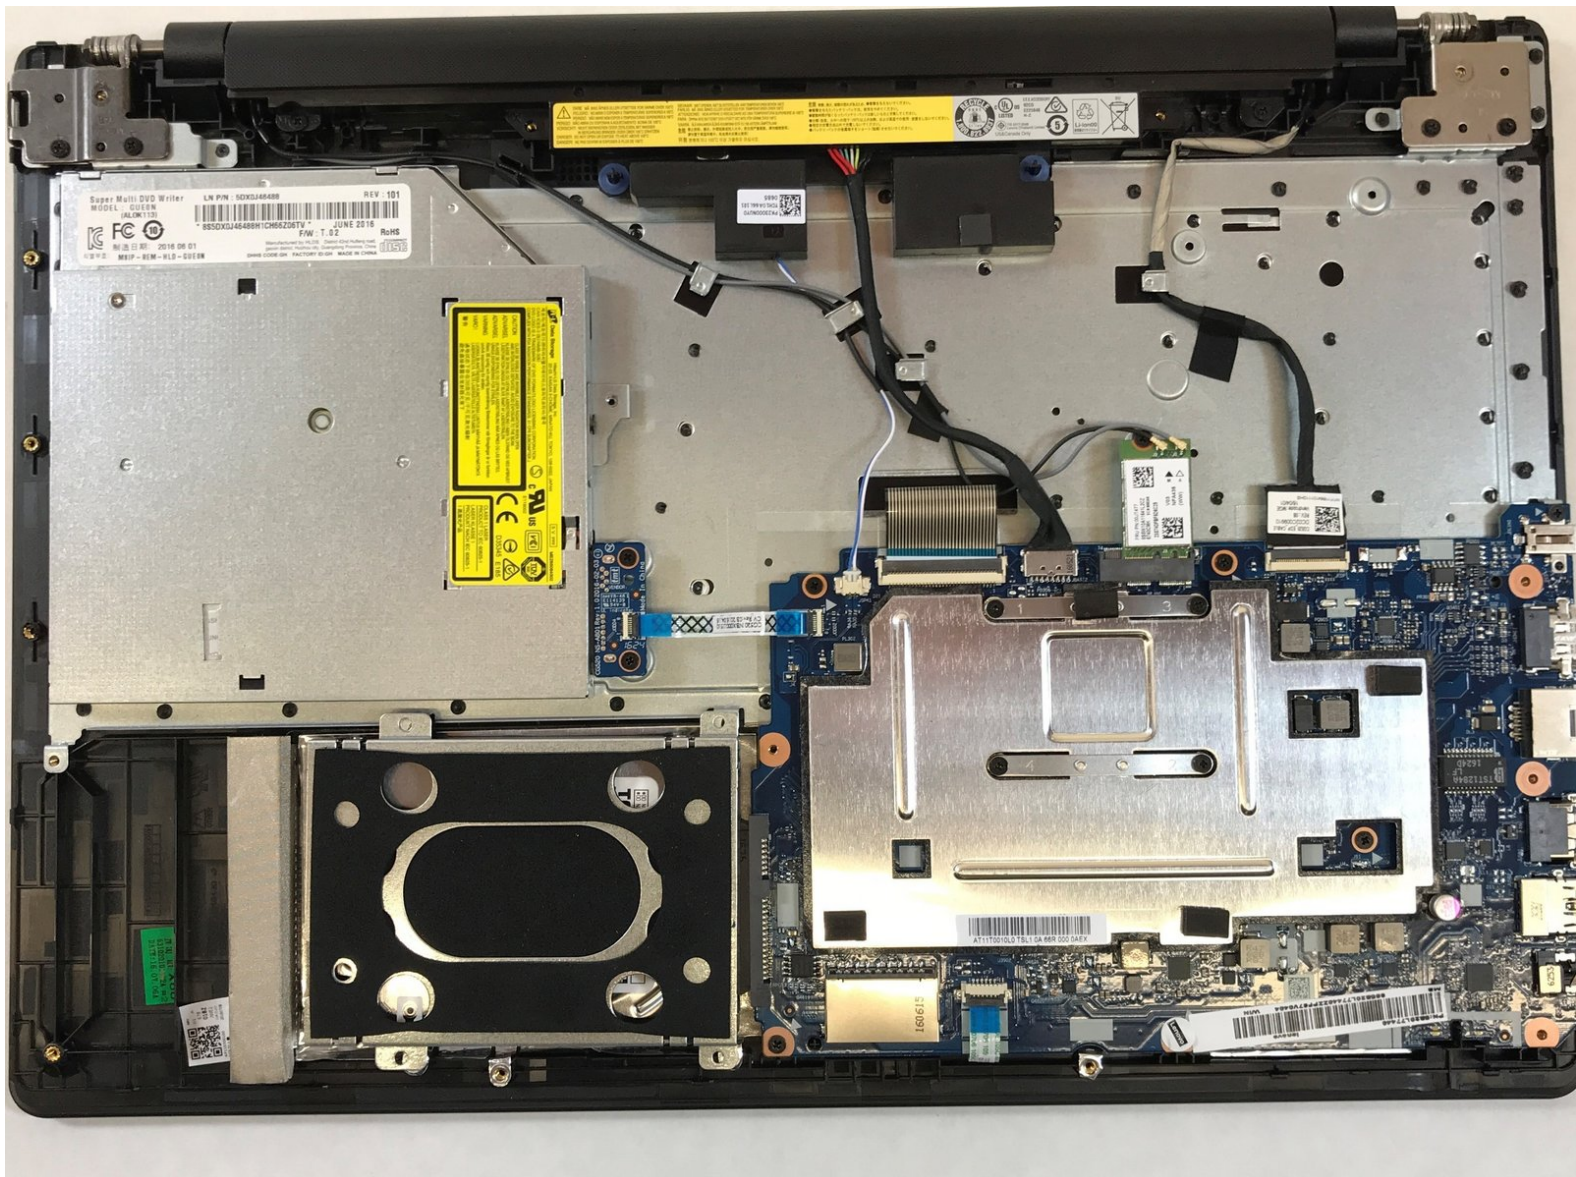

INTRODUCTION

This guide shows how to replace the optical drive for the Lenovo IdeaPad 110-15IBR. The guide shows how to remove the back panel, remove the screws holding the drive in place, and removing the optical drive from the docking port.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:

- [Lenovo IdeaPad 330 and Miix 320 Optical Drive](#) (1)
- [Lenovo IdeaPad 110-15 ODD Board](#) (1)


Step 1 — Optical Drive

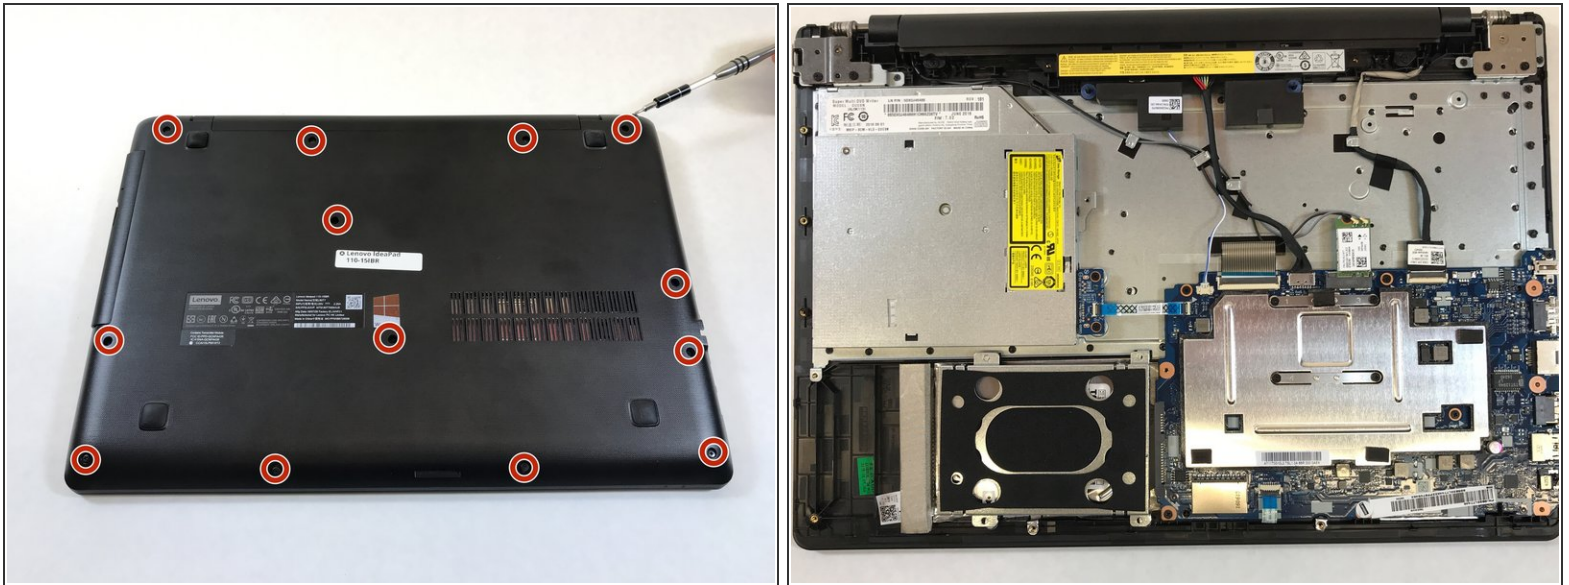

⚠ Before you proceed, make sure your computer is turned off and it's not connected to any power source.


- Using #1 Phillips screwdriver remove the 13 (9mmx6mm) screws holding the back.
- Gently pry the back off using a plastic opening tool, starting from one of the corners.

Step 2

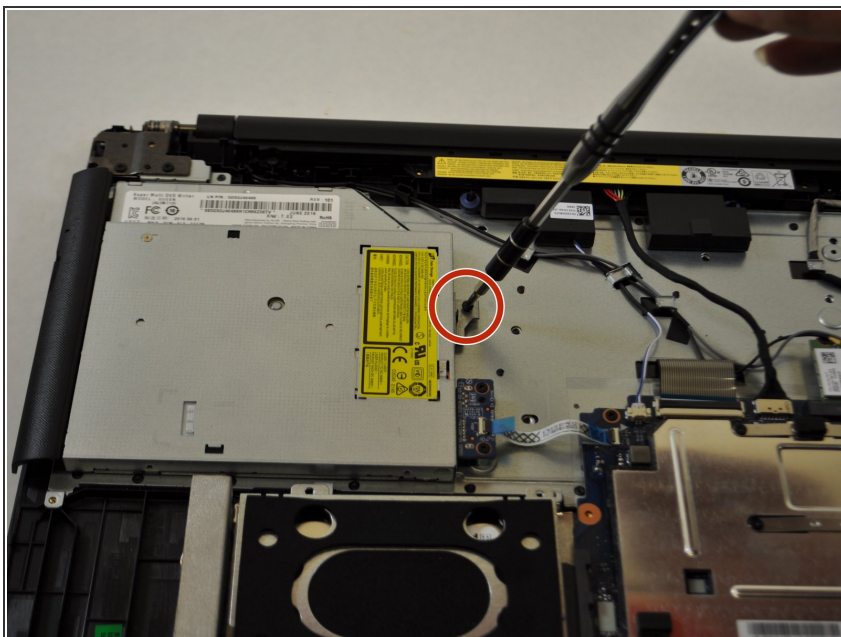

- Using #1 Phillips screwdriver remove the 1 (9mmx6mm) screw holding the disk drive in place.

Step 3

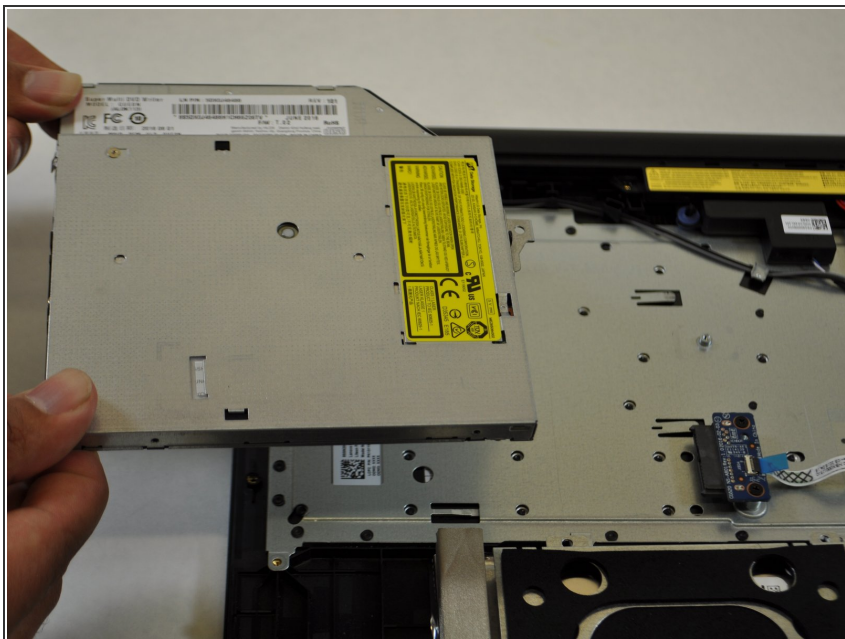

- Pull the optical drive away from device to slide out of dock.

⚠ Careful not to pull the drive straight up or towards the device, otherwise damage might be done to the drive connector.

To reassemble your device, follow these instructions in reverse order.