


Apple TV 2nd Generation Bottom Cover Replacement

This guide will help you to replace the bottom cover of your Apple TV

Written By: Areej Bashawiri

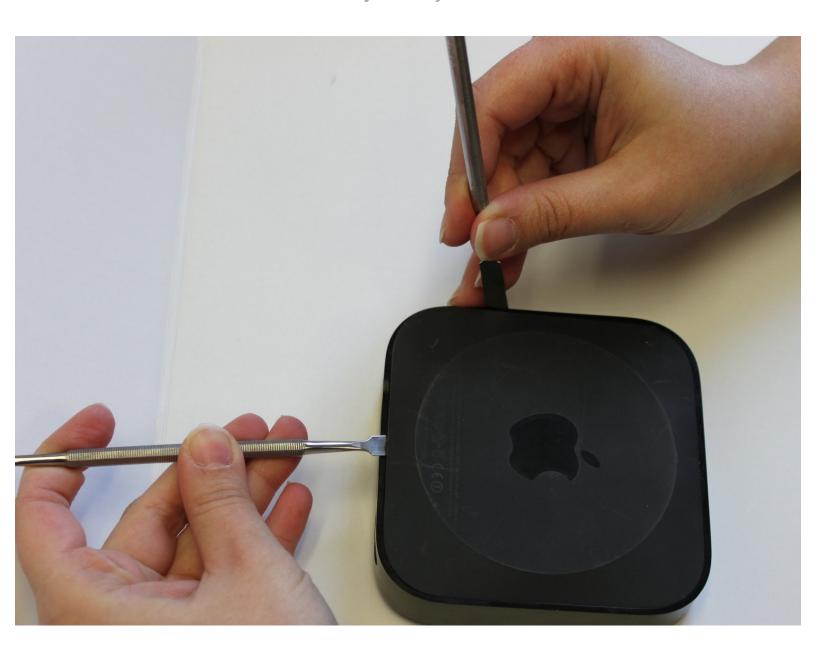

This document was generated on 2020-11-24 10:17:14 AM (MST).

INTRODUCTION

Time and general wear and tear of the Apple TV can cause damage to the bottom cover. This guide will show how to replace the bottom cover on the Apple TV 2nd generation device.



TOOLS:

Metal Spudger Set (1)

Step 1 — Bottom Cover



 As the Apple TV doesn't have any visible screws or points of entry, the first step is to use a couple of metal spudger to carefully loosen and remove the rubber base/bottom cover from the upper case.

Step 2



 Position the replacement base over the exposed interior of the Apple TV.
Gently press the cover down into the Apple TV until the interior tabs snap into place and the base is attached securely to the upper case.

To reassemble your device, follow these instructions in reverse order.