




Written By: Scott Santiago

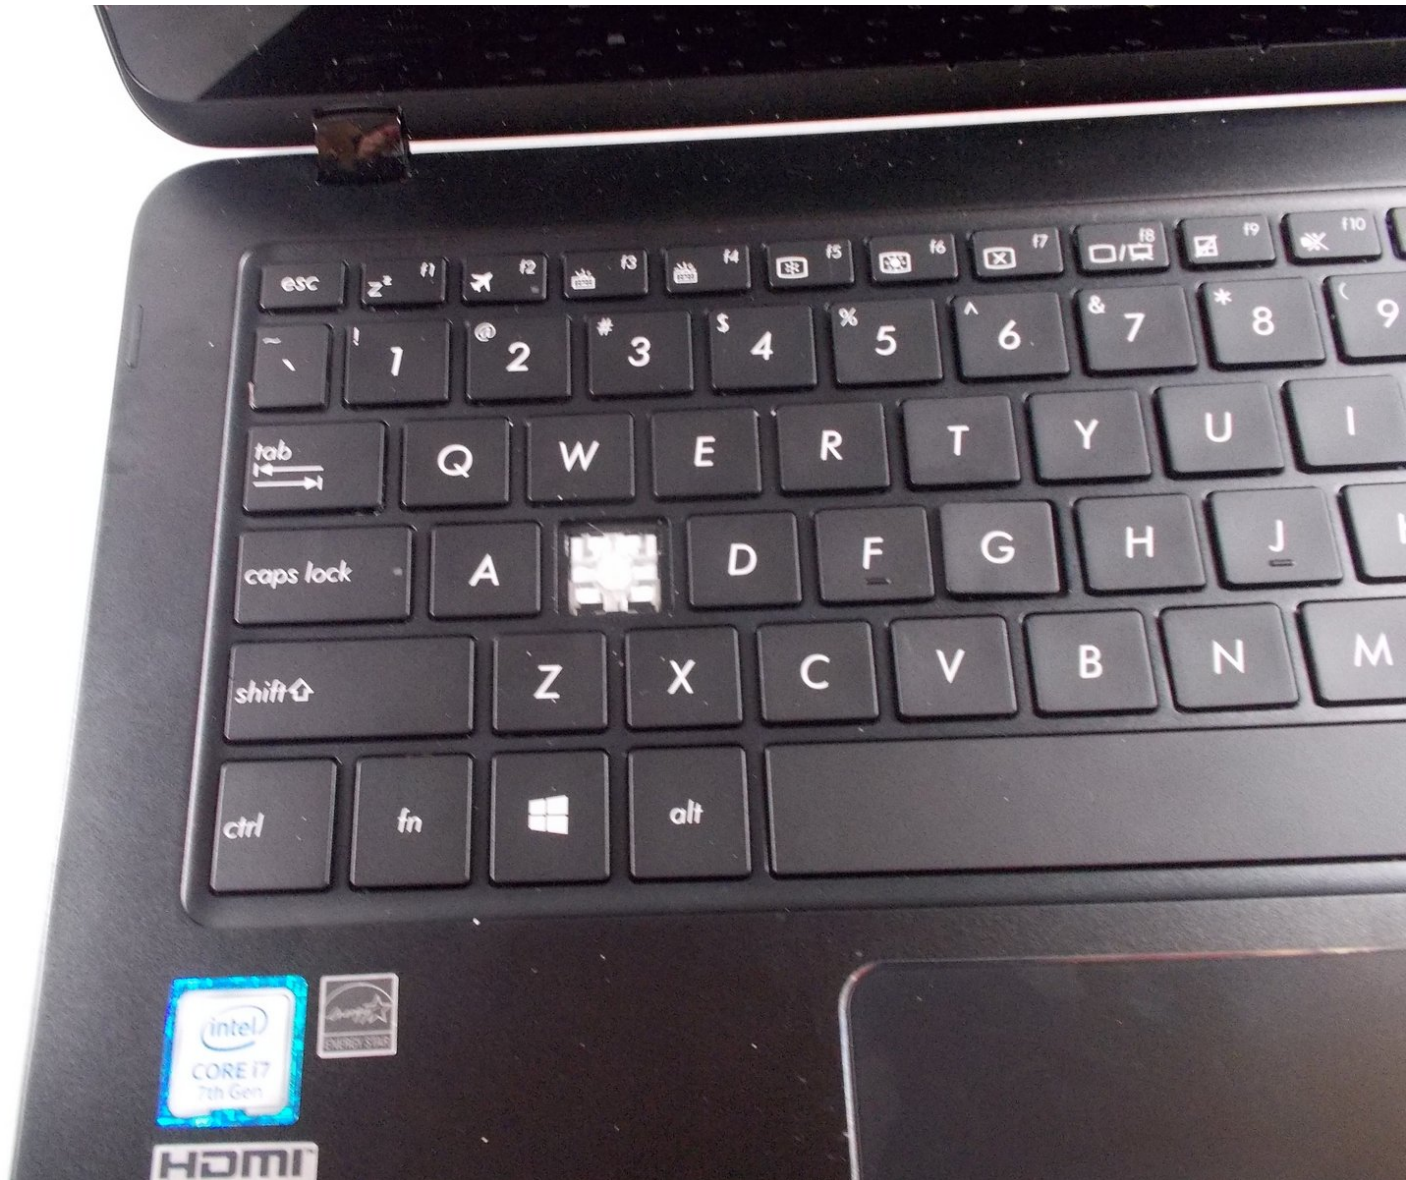

## INTRODUCTION

Over time a laptop keys will be pushed a good amount, therefore it is no surprise that certain keys begin to stop working. Keyboard keys are easy to find on the market, and once a replacement key is bought follow these steps to replace that certain key.



### TOOLS:



- [iFixit Opening Tools](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)



### PARTS:

- [Asus K55 Replacement Keyboard Keys](#) (1)


## Step 1 — Keyboard Keys

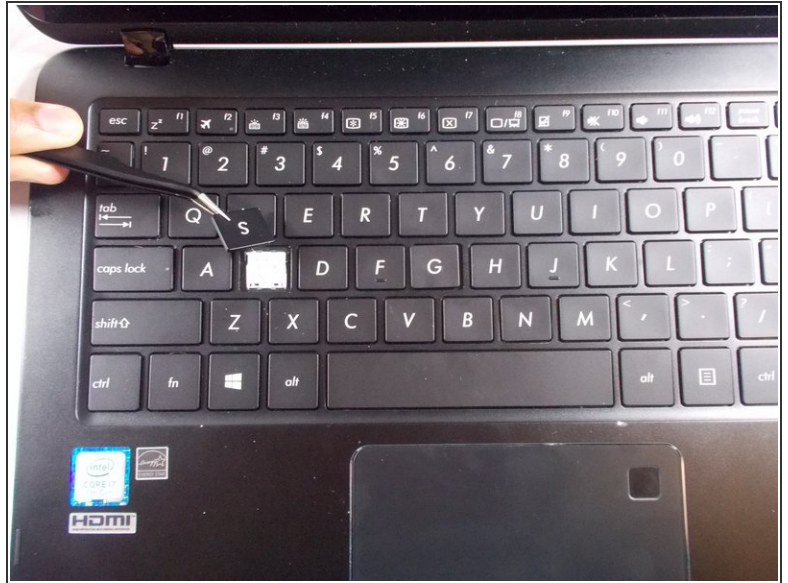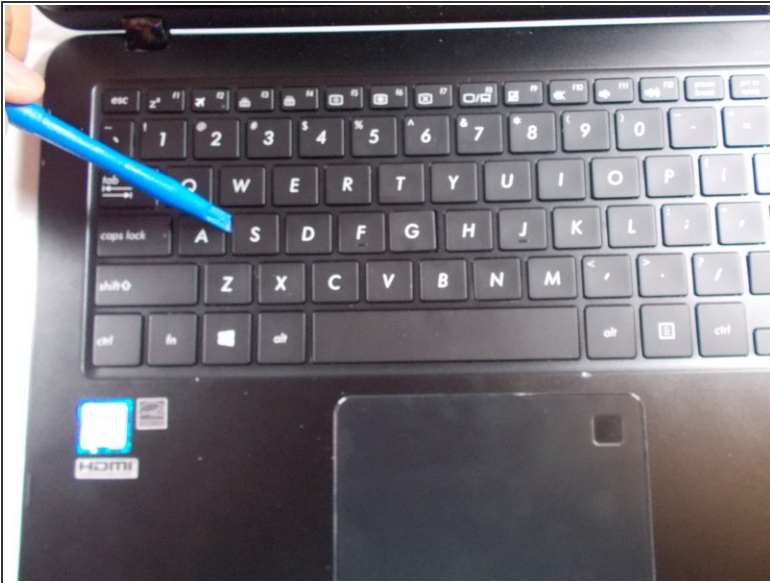

- First, insert the opening tool, between the key cap and the hinge and push up gently.
- ⓘ The key should pop out easily.





## Step 2

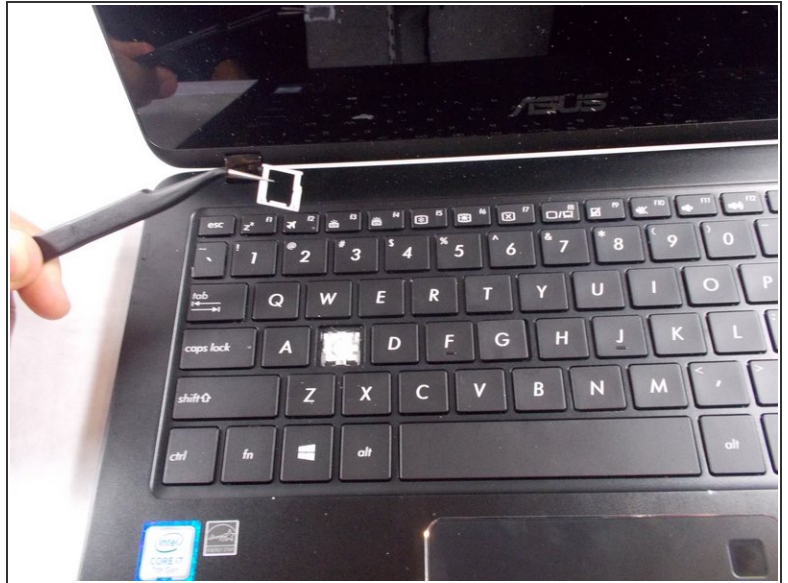

- Place the flat head screwdriver between the two parts of the plastic hinge, and turn it a little so the first part pops out.
- ① You can start on either side, either the right or the left it does not matter, just make sure to do both sides.

## Step 3

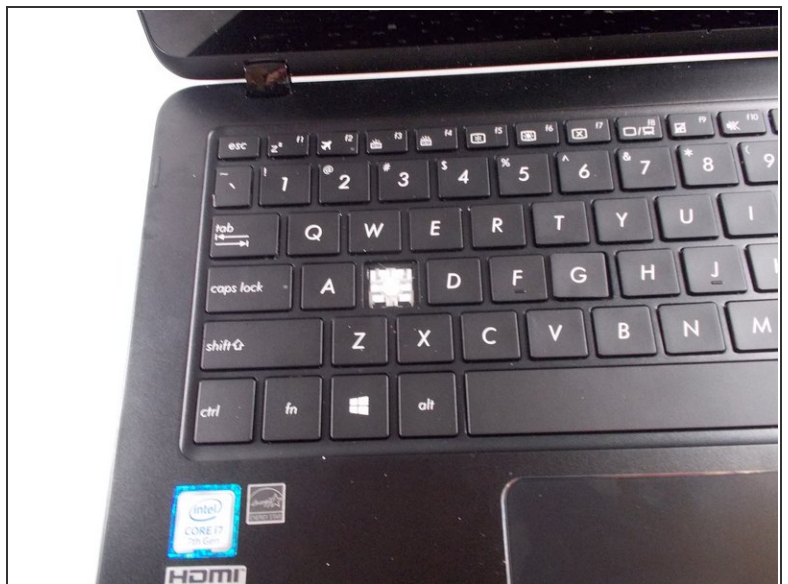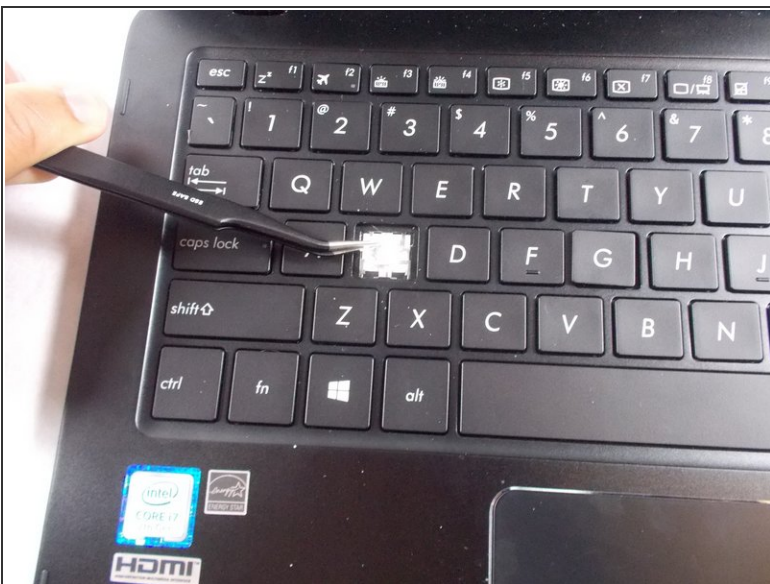

- Next remove the last plastic piece from the keyboard, and properly dispose of all three parts.

This document was generated on 2020-11-28 06:21:03 AM (MST).

To reassemble your device, follow these instructions in reverse order.