



# Shark Steam Pocket Mop Power Cable Replacement

This guide will inform users how to remove and replace the Shark Steam Pocket Mop power cable.

Written By: Jacob Howe



---

## INTRODUCTION

This guide will inform users how to remove and replace the Shark Steam Pocket Mop power cable.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Wire Stripping/Crimping Tool](#) (1)
-

## Step 1 — Back Panel



- Begin by removing the 8 quarter inch phillips head screws found along the back panel
- Once all 8 screws have been removed, gently remove the back panel from the rest of the mop's body

## Step 2 — Power Cable

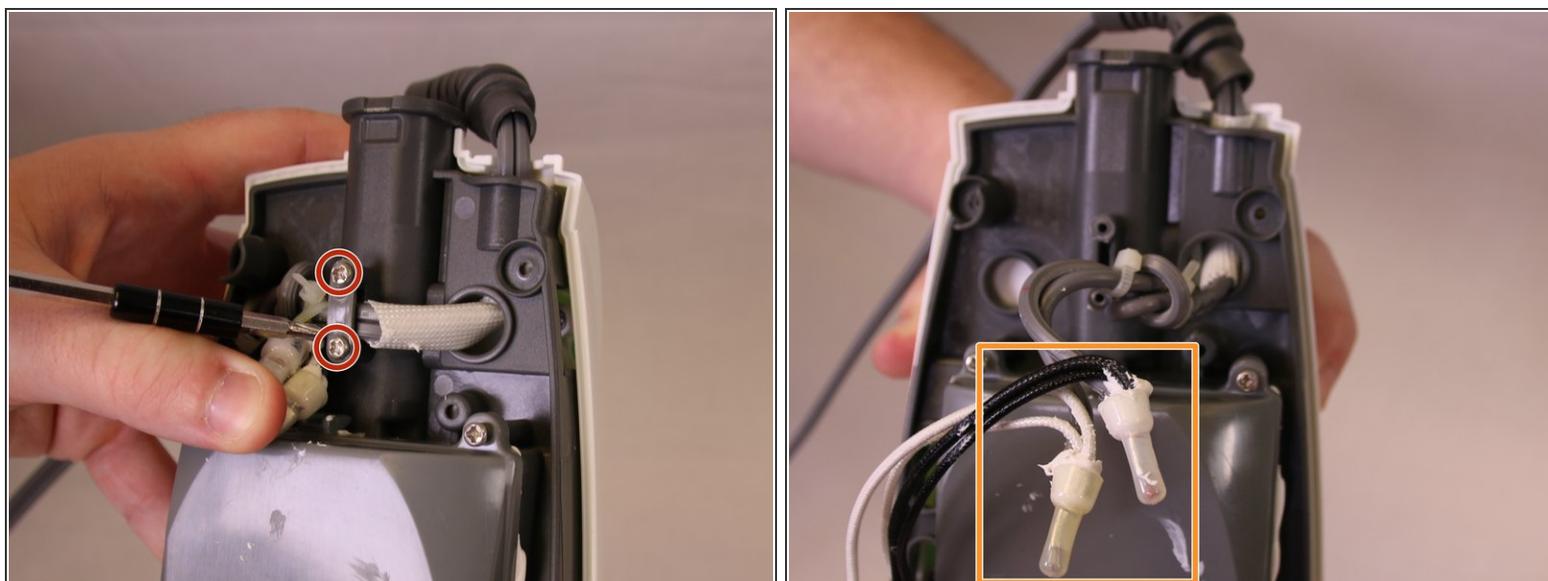

- Start by removing the two 1/8th inch Phillips head screws with your Phillips head screwdriver.
- Gently remove the small plastic piece holding the wires against the plastic midframe of the mop.
- Next use your wire cutters to remove the two plastic connectors and replace those wires with your new ones.

To reassemble your device, follow these instructions in reverse order.