



Dell Inspiron 15-3543 Disk Drive Replacement

Replace your disk drive so that your disks play properly and/or your device doesn't overheat.

Written By: AJ Morgan



INTRODUCTION


Is the disk drive in your Dell Inspiron 15-3543 not reading disks correctly or causing your computer to overheat? If so, here is the guide to fix the problem by simply replacing your disk drive. All you need is the standard #0 Phillips Screwdriver head in order to remove the one screw involved with this replacement.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Disk Drive

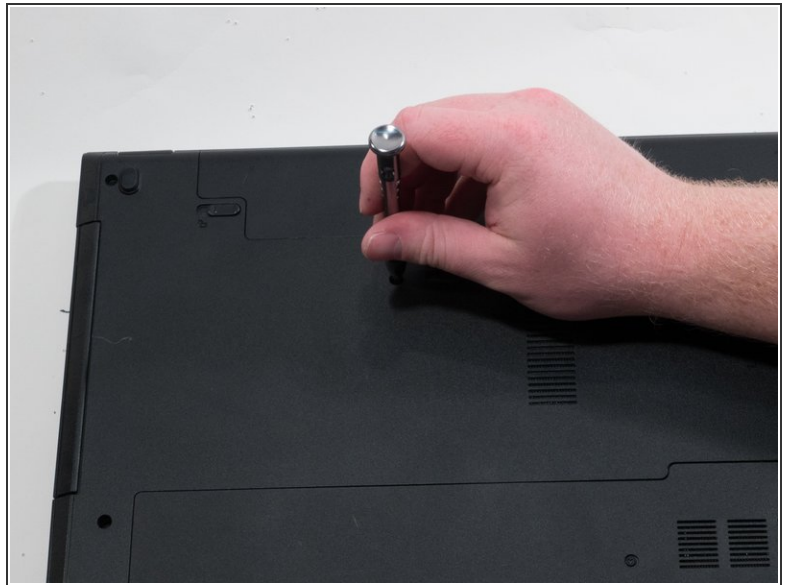

- Flip the device over so the bottom is facing up.
- Using a #0 Phillips screwdriver, remove the 4.0mm screw to the right of the disk drive.

Step 2

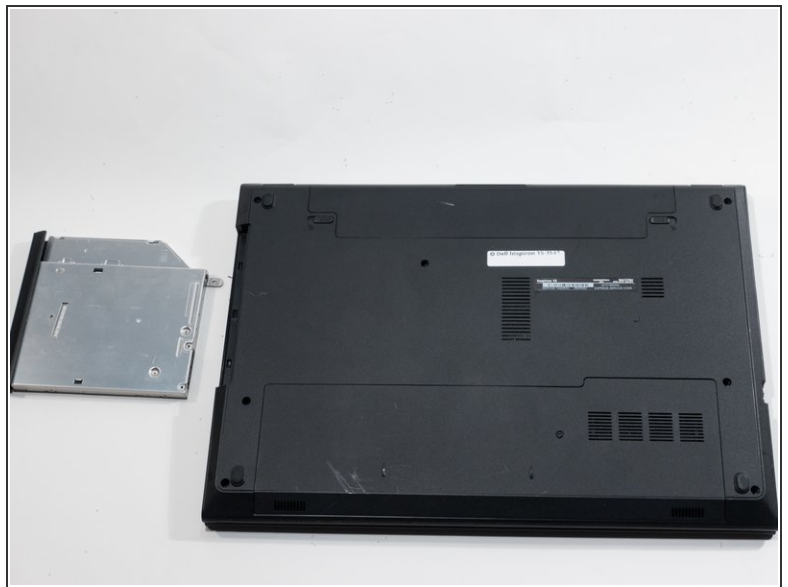

- Pull the disk drive out.

To reassemble your device, follow these instructions in reverse order.