

Lenovo Touch Y70-70 Hard Drive Replacement

Hard drive replacement of the Lenovo Touch Y70-70

Written By: Ean Hobbs



INTRODUCTION

This guide will help you replace the hard drive of your device. You'll need to spend some time unscrewing a numerous amount of schools from the device.



TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Back Cover



- Flip the device so the back is facing you.
- Using the Phillips #0 screwdriver, unscrew the fourteen screws from the device.

Step 2




- Use the blue Opening Tool to pryopen the back cover.
- Slide it around the perimeter of the PC freeing the back cover.
- Remove the back cover from the device.

Step 3 — Hard Drive




 Use the Phillips #0 screwdriver to unscrew the four screws.

Step 4

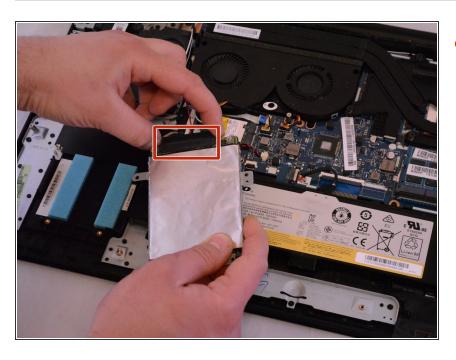

 Disconnect the hard drive from the motherboard.

Step 5

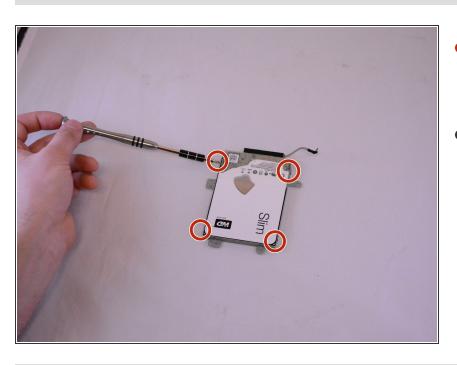

- Use the Phillips #0 screwdriver to unscrew the four screws on the sides of the hard drive frame.
- Remove the hard drive from the frame.

To reassemble your device, follow these instructions in reverse order.