


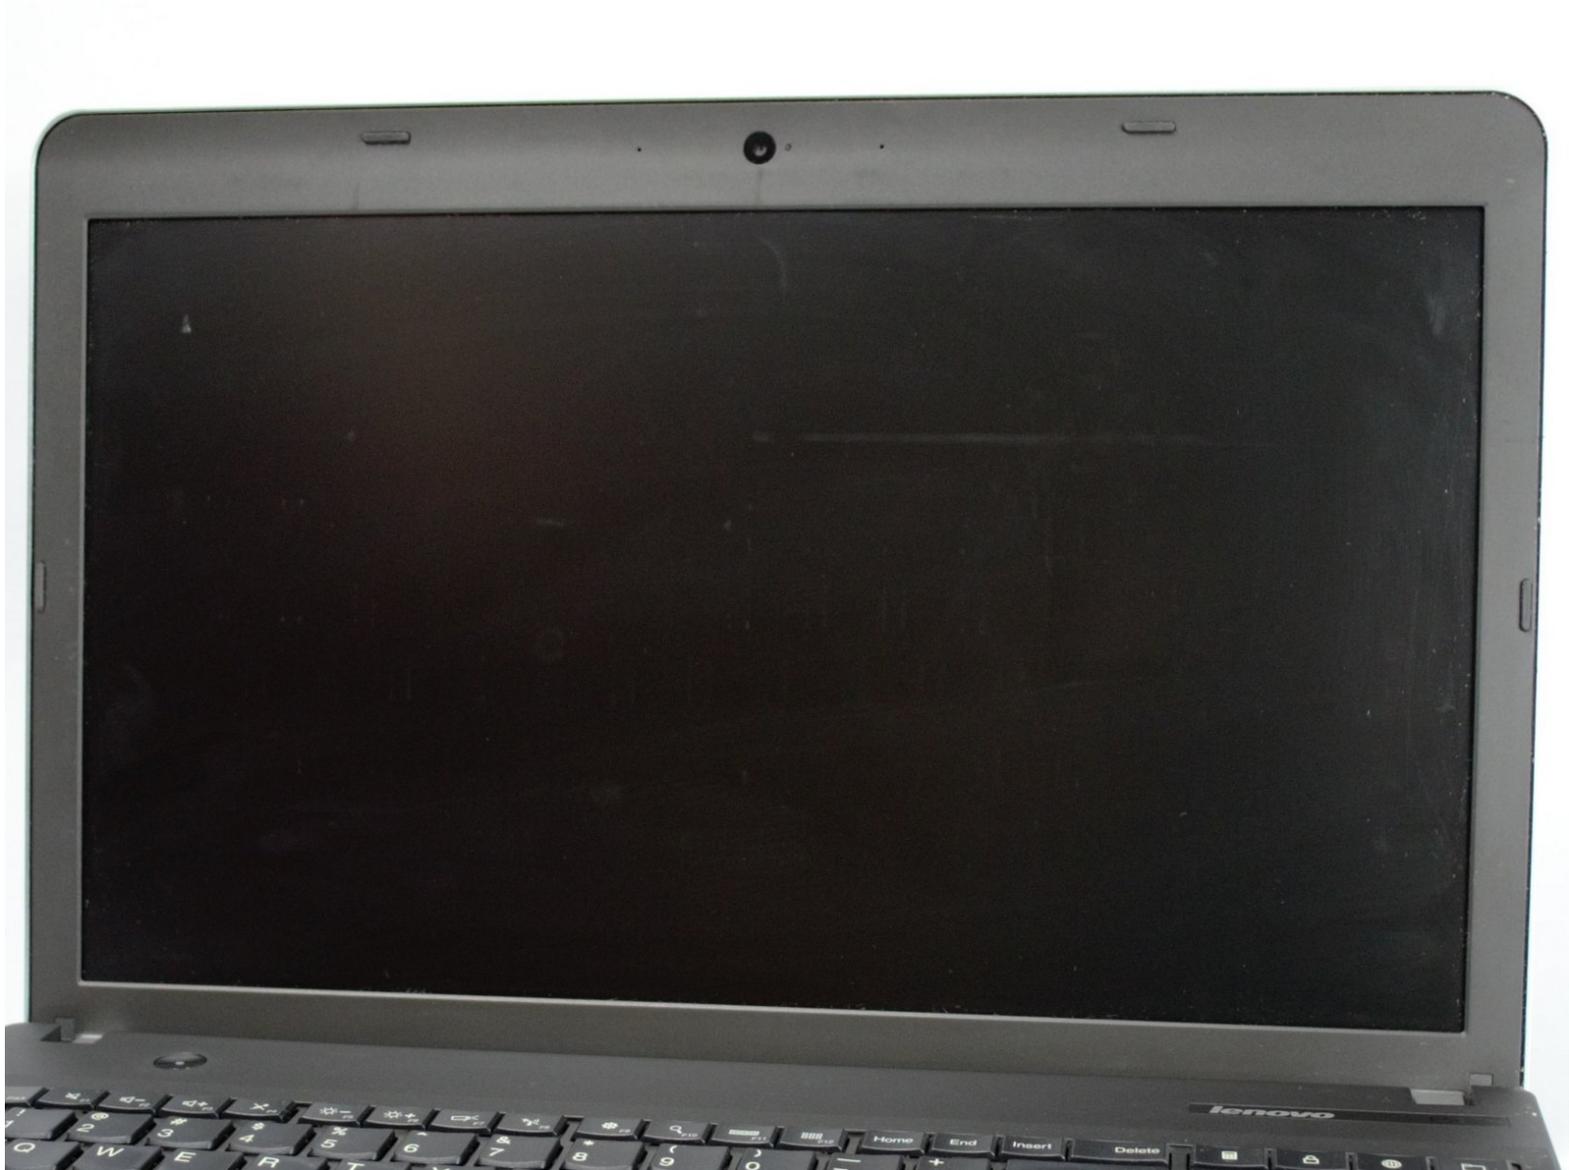

Lenovo Thinkpad E540 Display Screen Replacement

A guide on how to replace the scree on a Lenovo ThinkPad E540 laptop.

Written By: Timothy Sumner



INTRODUCTION

A guide on how to replace the scree on a Lenovo ThinkPad E540 laptop.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery



- Push the battery release switches away from each other.

Step 2



- Remove the battery.

Step 3 — Display Screen



- Remove the two stickers at the bottom corners for the screen to reveal the screws.
- Remove the two 1mm Phillips #00 screws from underneath the stickers.

Step 4




- Slide your finger underneath the plastic and pry gently to release the clips around the display bezel.

Step 5



- Remove the six 1.3mm Phillips #00 screws from around the display.

Step 6

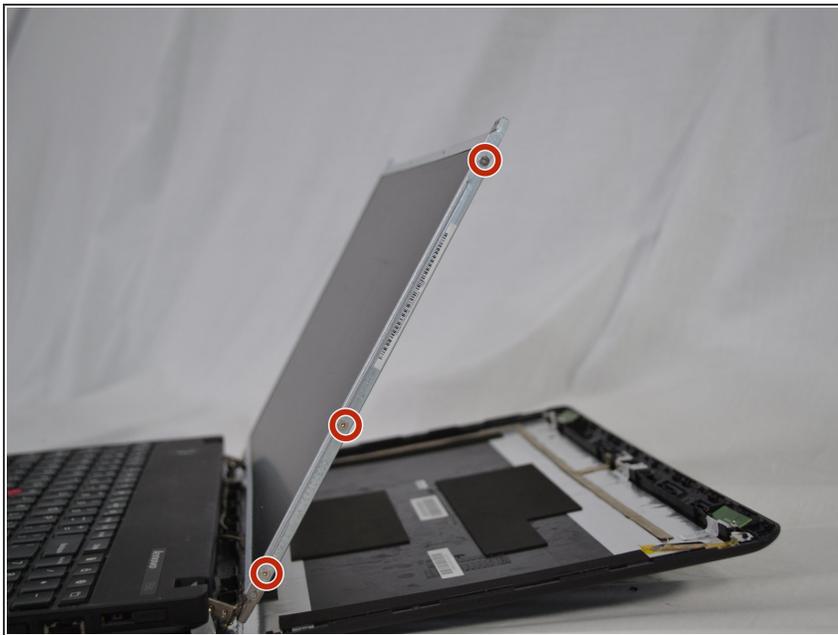

- Remove the plastic covering and six 1.3mm Phillips #00 screws from both sides of the display.

Step 7



- Remove the orange tape covering the display connector.
- Disconnect the display's ribbon cable by lifting up the latch and flipping it over 180 degrees.

To reassemble your device, follow these instructions in reverse order.