

Dell Alienware 13 R3 Memory Modules Replacement

In this guide, we will show you how to remove and replace the memory module.

Written By: Terrence15




INTRODUCTION

In this guide, we will show you how to remove and replace the memory module.

TOOLS:Pro Tech Toolkit (1)

Step 1 — Loosen the Screws

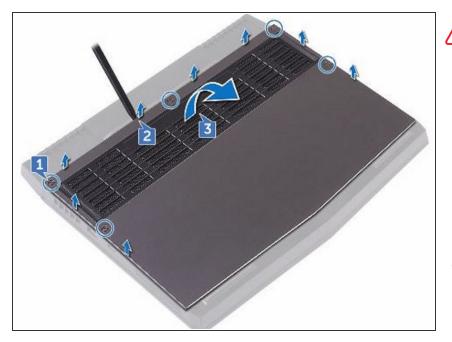


- WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before Working Inside Your</u> <u>Computer</u>. After working inside your computer, follow the instructions in <u>After Working Inside Your</u> <u>Computer</u>.
 - Loosen the five captive screws that secure the base cover to the computer base.

Step 2 — Pry the Base Cover



 Using a plastic scribe, gently pry the base cover to release the tabs on the base cover from the slots on the computer base.

Step 3 — Lift the Base Cover

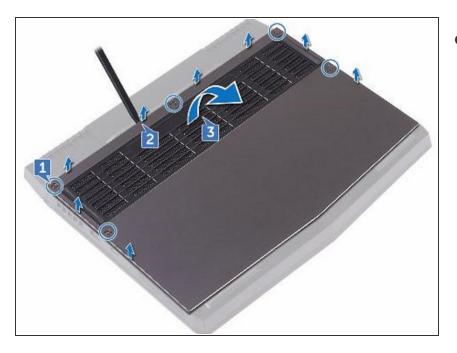


• Lift the base cover off the computer base.

Step 4 — Disconnect the Battery Cable




• Using a plastic scribe, disconnect the battery cable from the system board.

Step 5 — Press and Hold the Power-Button

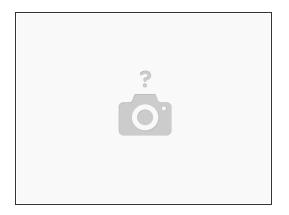


• Press and hold the power button for five seconds to ground the system board.

Step 6 — Connect the Battery Cable

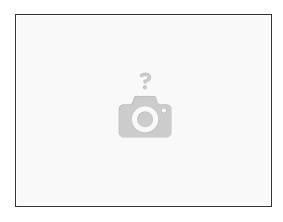


• Connect the battery cable to the system board.

Step 7 — Slide the Tabs

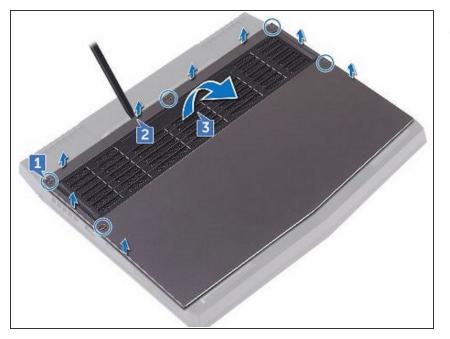


 Slide the tabs on the NEW base cover into the slots on the computer base and snap the base cover into place

Step 8 — Tighten the Five Captive Screws

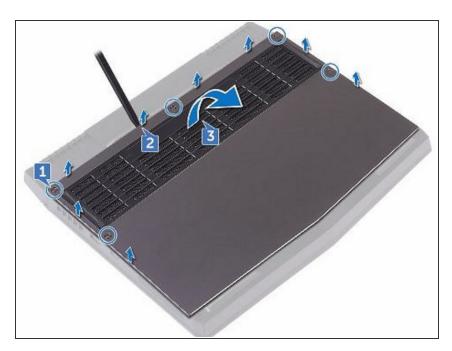

• Tighten the five captive screws that secure the base cover to the computer base.

Step 9 — Popping up the Memory Module

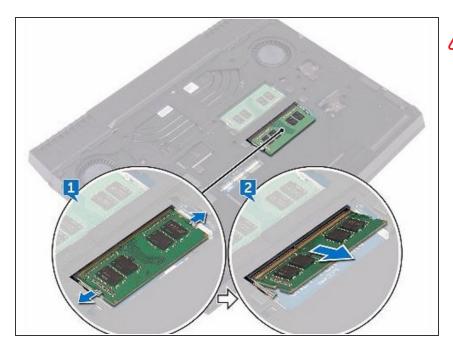


- WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before Working Inside Your</u> <u>Computer</u>. After working inside your computer, follow the instructions in <u>After Working Inside Your</u> <u>Computer</u>.
- Using your fingertips, carefully spread apart the securing clips on each end of the memory-module slot until the memory module pops up.

Step 10 — Remove the Memory Module




 Slide and remove the memory module from the memory-module slot.

Step 11 — Align the Notch

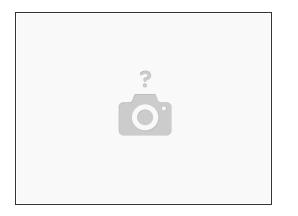

• Align the notch on the **NEW** memory module with the tab on the memory-module slot and slide the memory module firmly into the slot at an angle.

Step 12 — Press the Memory Module Down

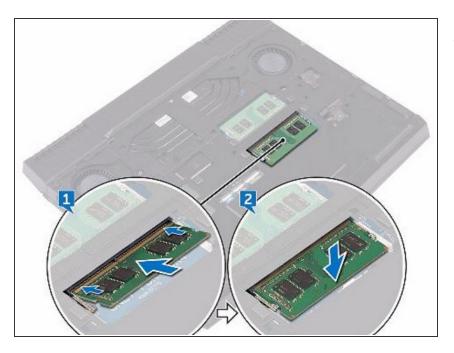

• Press the memory module down until it clicks into place.

To reassemble your device, follow these instructions in reverse order.