



Lenovo Edge Thinkpad E431 Battery Replacement

This guide will show how to replace the small 3 volt internal lithium battery for the Lenovo ThinkPad Edge E431 laptop.

Written By: Nathan Behan



INTRODUCTION

This guide will show how to replace the small 3 volt internal lithium battery for the Lenovo ThinkPad Edge E431 laptop.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [CR 2016 3V Lithium Batteries](#) (1)

Step 1 — Battery



- Remove the 2mm Phillips #00 screw from the battery cover.
- Lift the battery cover out of its slot.

Step 2

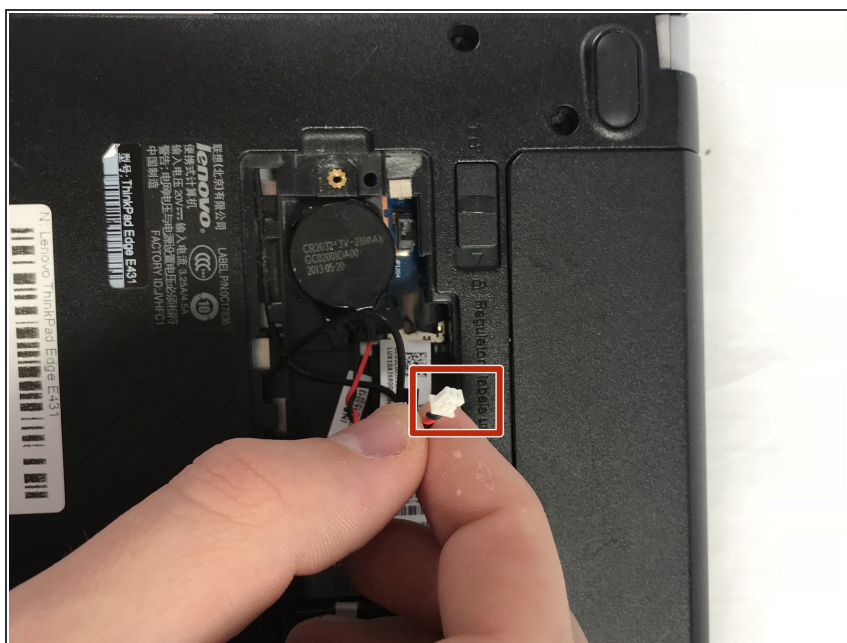

- Disconnect the battery cable.

To reassemble your device, follow these instructions in reverse order.