



# Nikon Coolpix S800c Battery Replacement Guide

This guide is meant to help owners correctly replace the battery for the Nikon Coolpix S800c without damaging the camera.

Written By: Ilyasah Muhammad



# INTRODUCTION

This guide will teach owners how to replace their battery if it is defective or exhibits signs of a declining battery life.



## TOOLS:

- [iFixit Opening Tools](#) (1)



## PARTS:



- [Nikon Coolpix S800c Battery](#) (1)

## Step 1 — Battery



- Using plastic tool, open battery cover located on the bottom, left of the camera, if the camera lens were facing you.

## Step 2

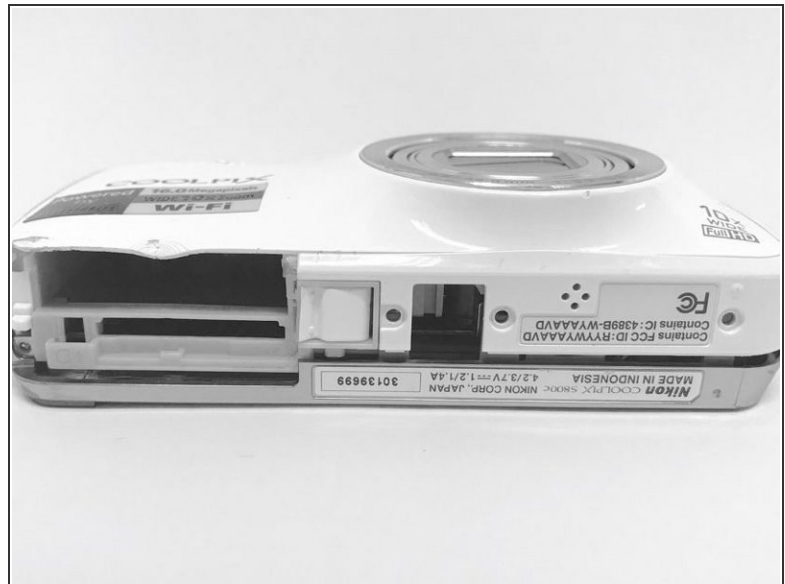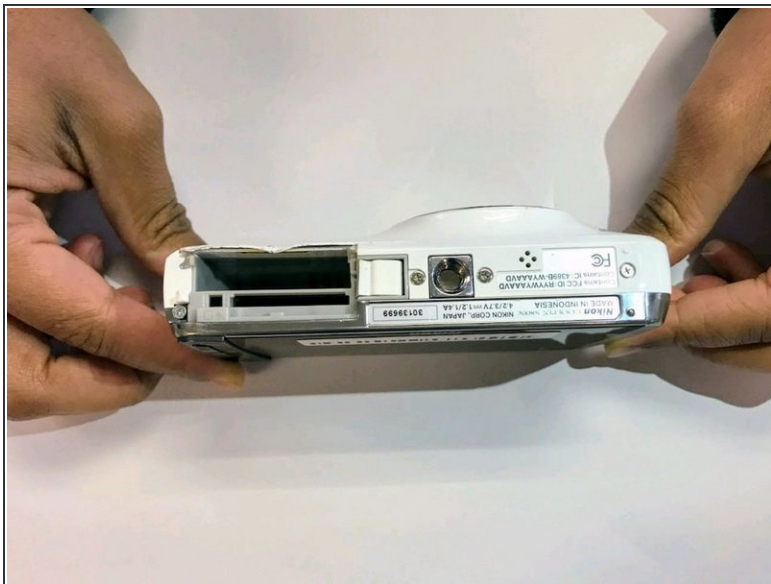

- Remove battery from battery slot.
- Place new battery in slot and make sure the negative side is on the left side.
- ❗ Battery Access Door was unavailable

To reassemble your device, follow these instructions in reverse order.