


Dell XPS M1730 Memory Replacement

Written By: Johnathan Hammond

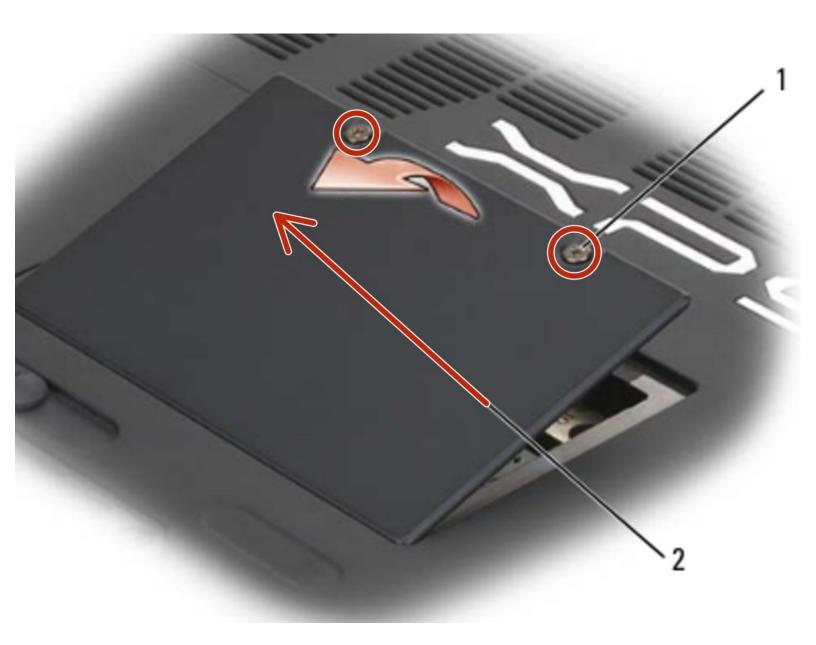

INTRODUCTION


Replace Memory



TOOLS:


• Phillips #0 Screwdriver (1)

Step 1 — Remove memory Cover

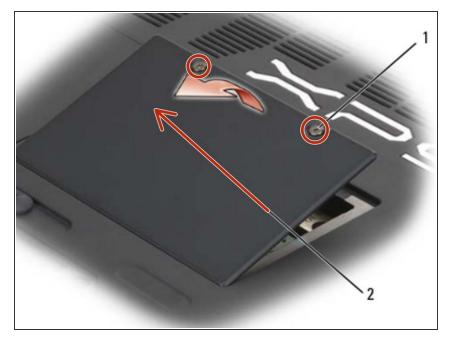

 Turn the computer over, loosen the captive screws on the memory module cover, and then remove the cover.

Step 2 — Remove Memory

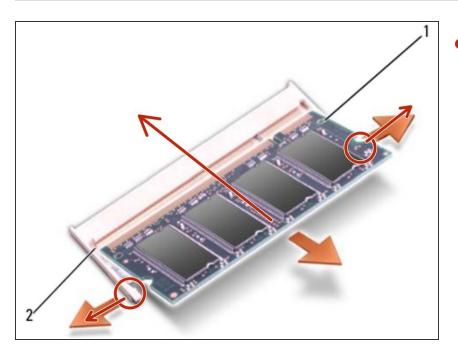

- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.
 - Remove the module from the connector.

To reassemble your device, follow these instructions in reverse order.