




Dell XPS 11 9P33 Battery Replacement

In this guide, we will show you how to remove...

Written By: Johnathan Hammond

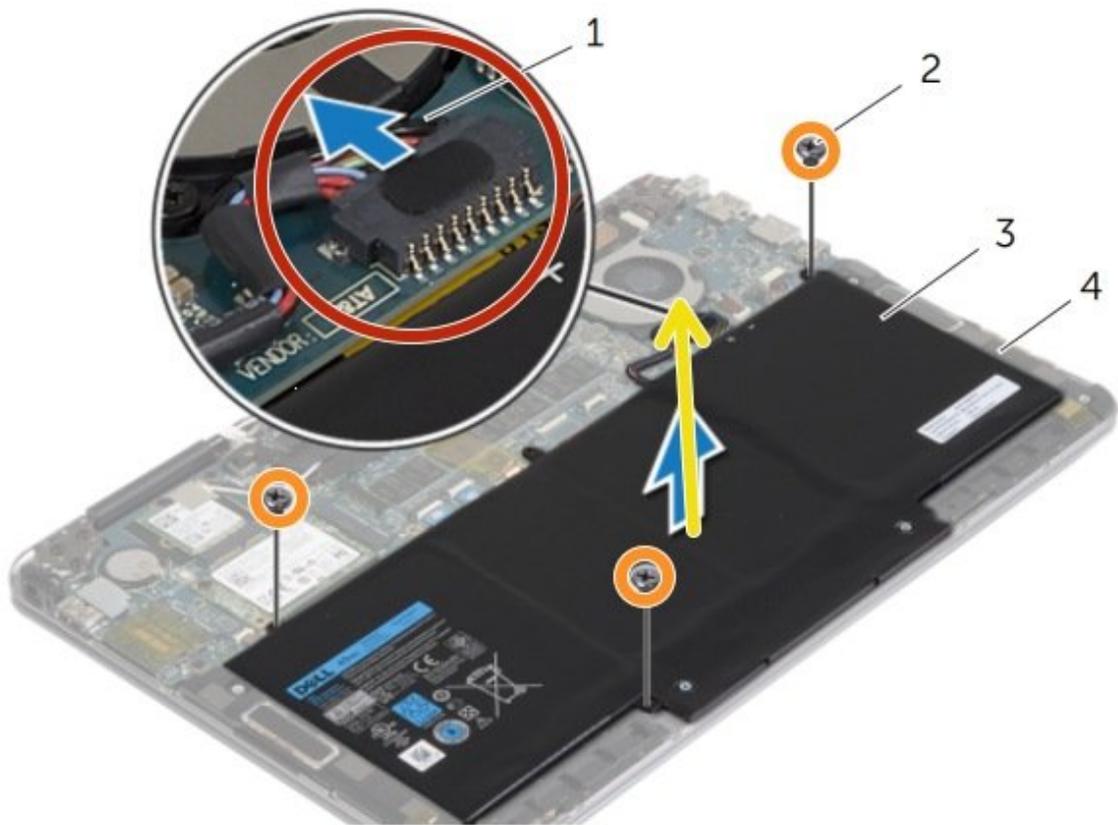


INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Removing the Battery

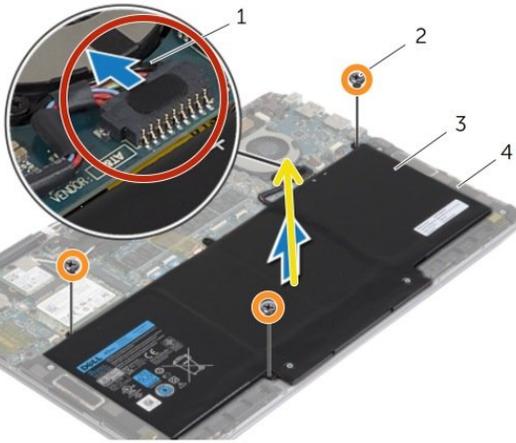

- Disconnect the battery cable from the system board.
 - Remove the screws that secure the battery to the palm-rest assembly.
 - Lift the battery, along with its cable, off the palm-rest assembly.
- i** Turn the computer over, open the display, and press the power button for about five seconds to ground the system board.
- ★** If this is all you are doing Follow Step In Reverse if not Go to Next Step.