




# Vizio CT15 Display Replacement

This guide provides instruction to replace a broken or nonfunctional Vizio CT15 display screen.

Written By: Brian Patino

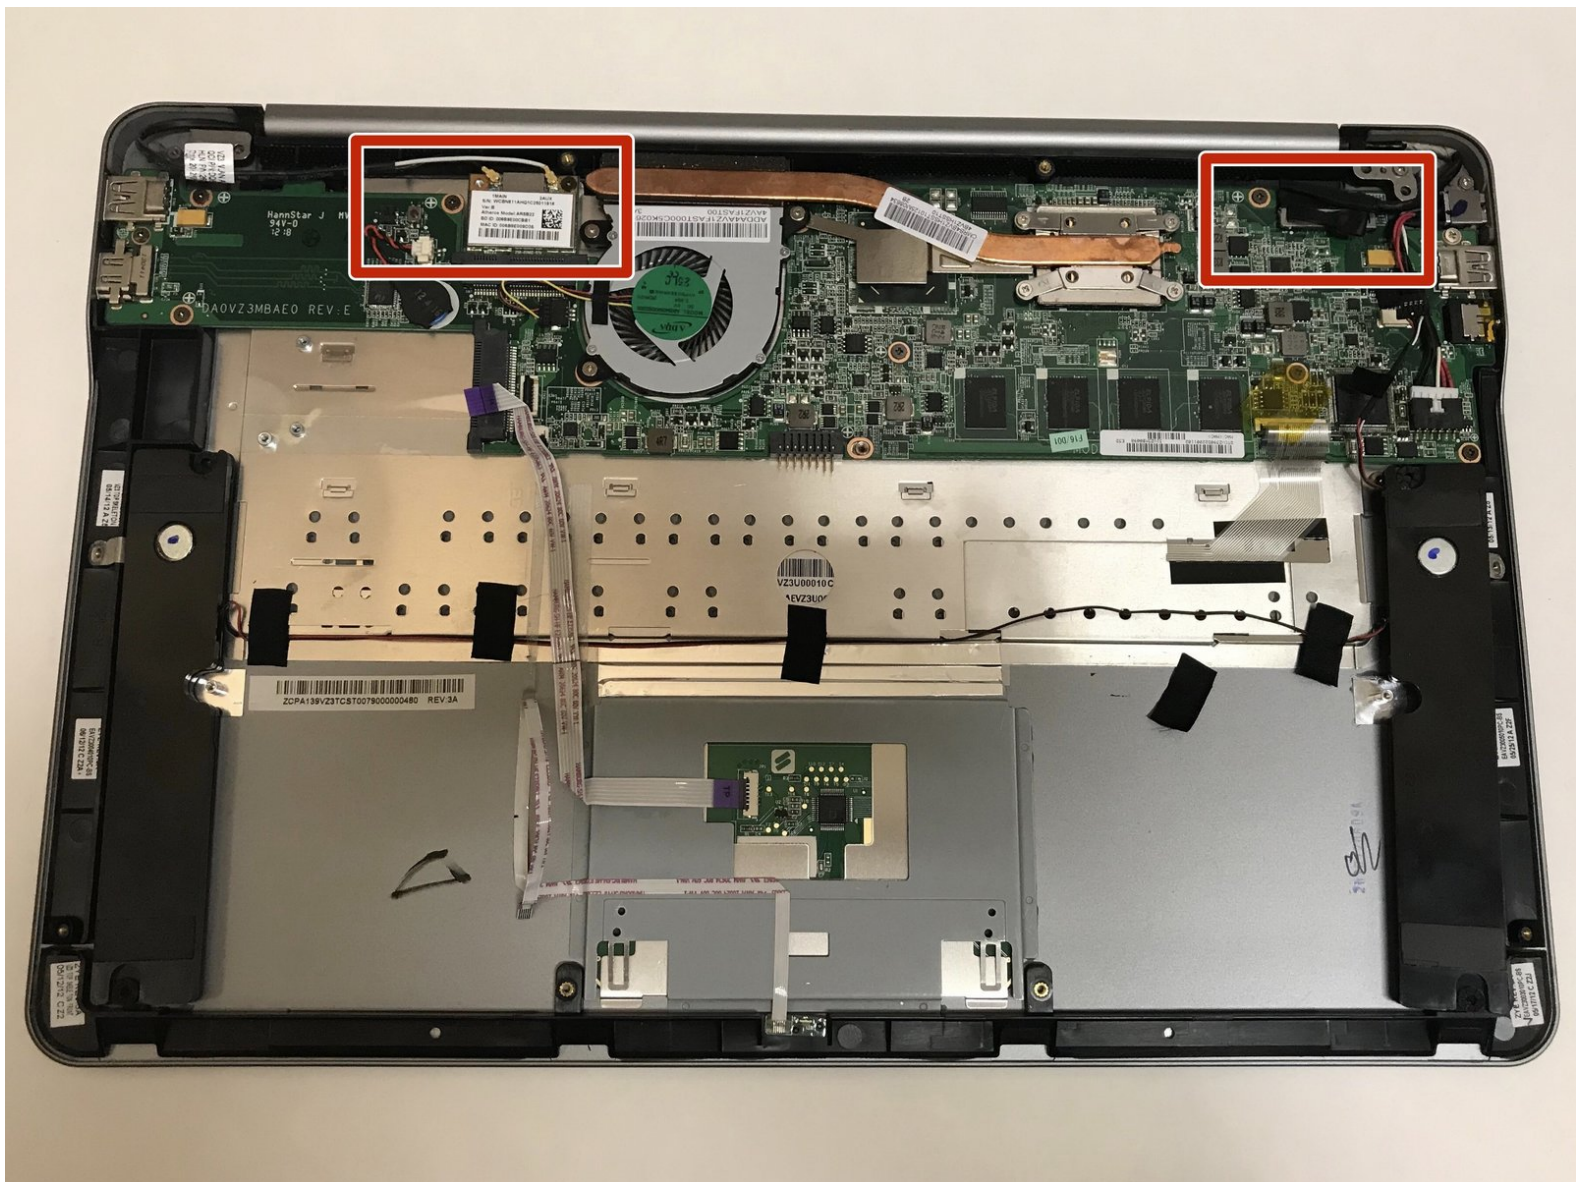

---

## INTRODUCTION

This guide will help users remove a broken Vizio CT15 display screen.



### TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Vizio CT15 Back Panel Removal



- Turn the laptop off and remove all power cables.
- Remove the six Phillips #0 screws.
- Pull the back cover off.

## Step 2 — Battery



- Remove the six Phillips #0 screws.





### Step 3





- Use the plastic opening tool or your fingers to pry the battery up and pull it from the laptop.

### Step 4 — Display

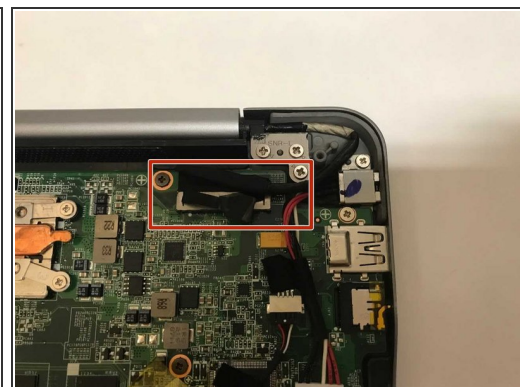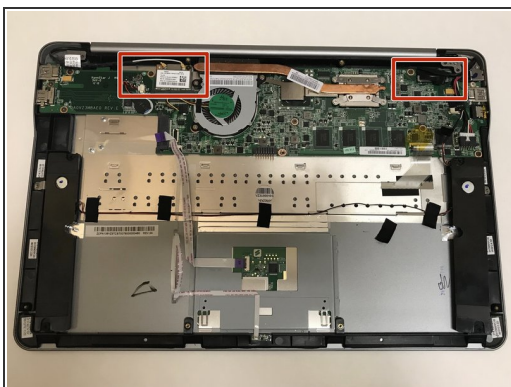

- Using your fingers, unplug the wires.

## Step 5

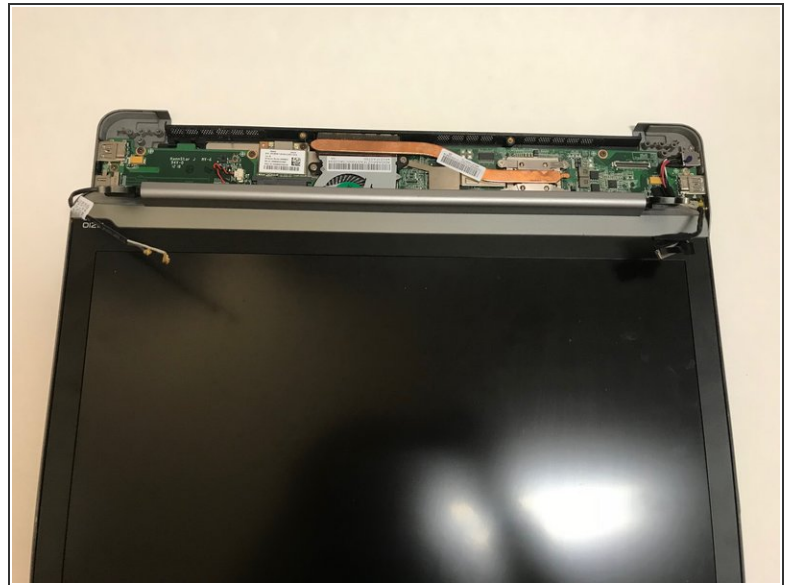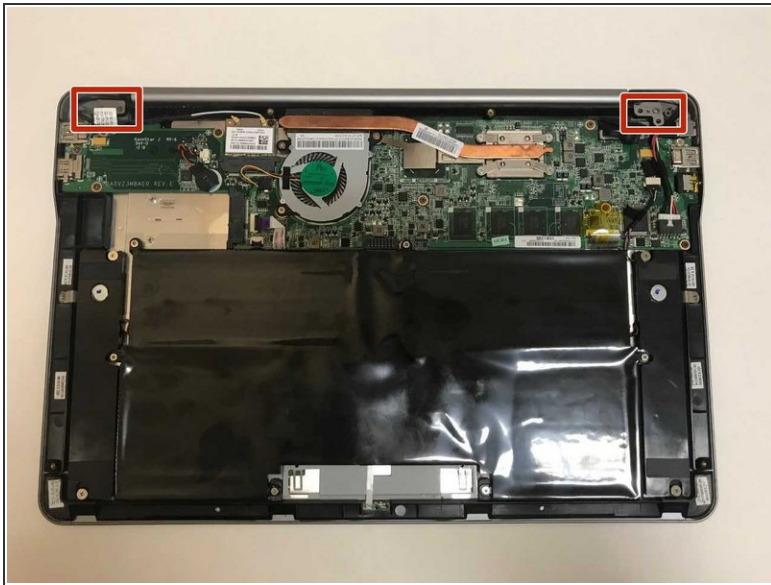

- Remove the six Phillips #0 screws.
- Disconnect the display from the laptop base by pulling the two apart from each other.

To reassemble your device, follow these instructions in reverse order.