




Dell Vostro 5480 Memory Module Replacement

Written By: Johnathan Hammond

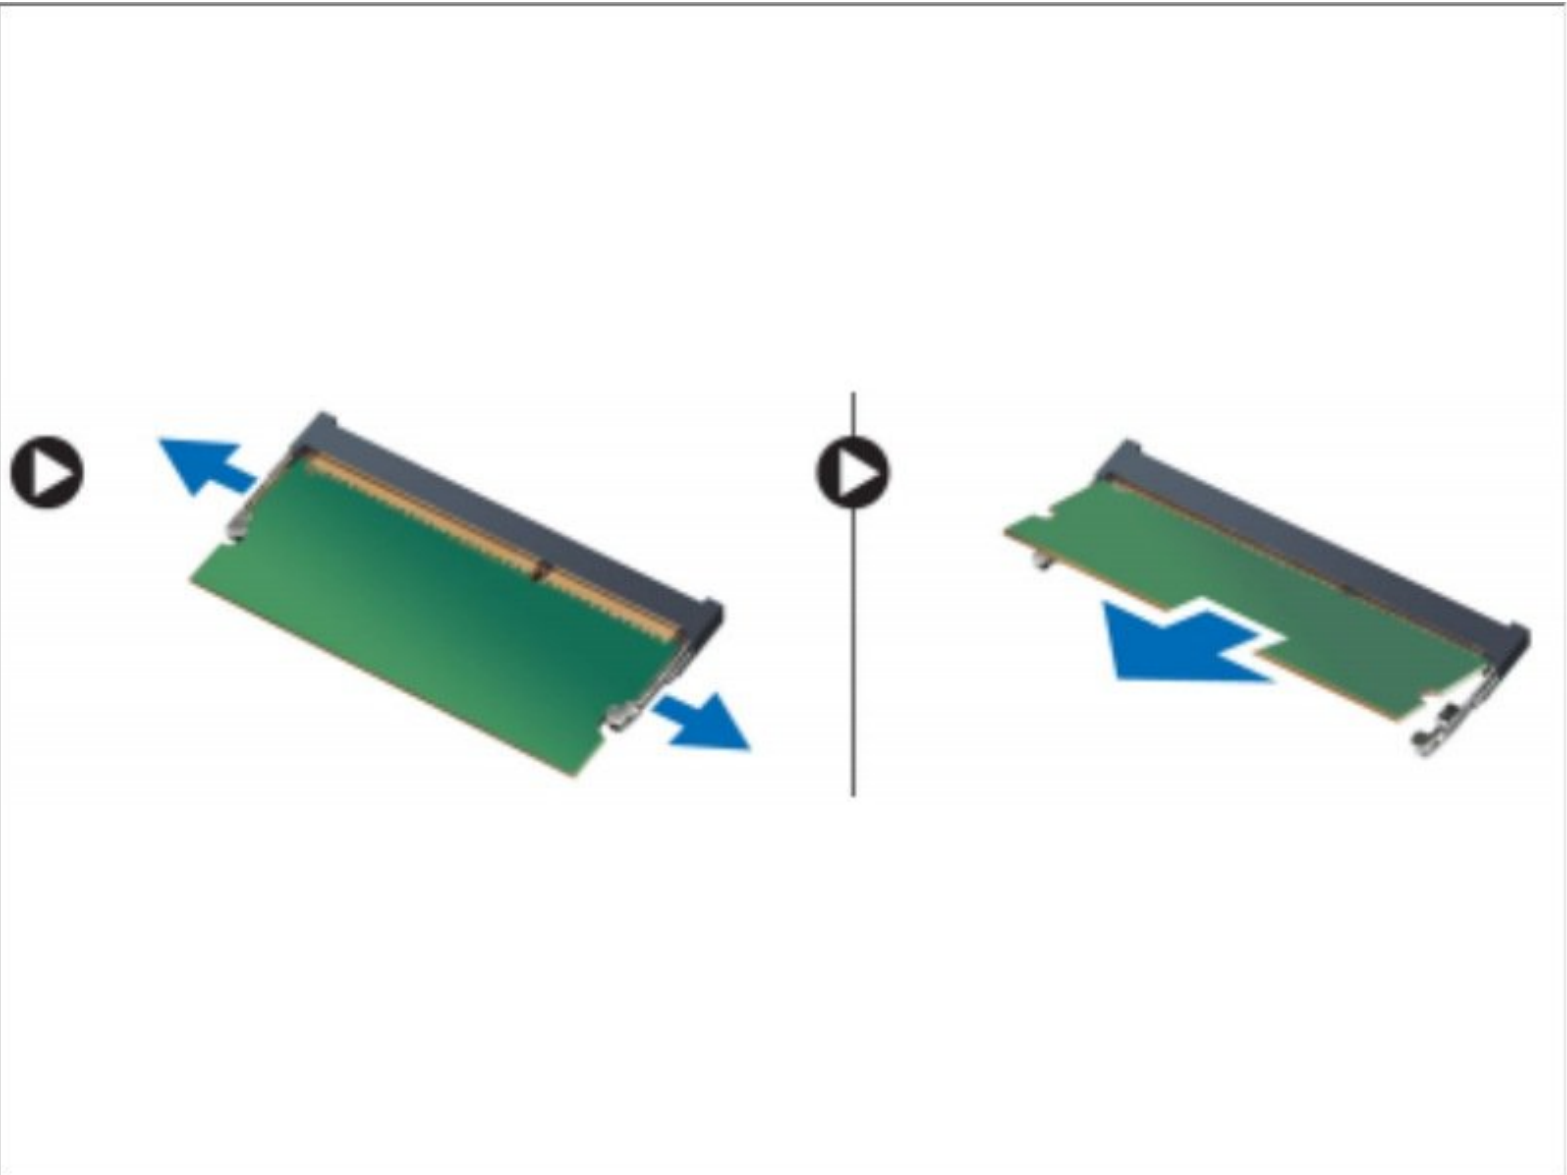




TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove the Screws

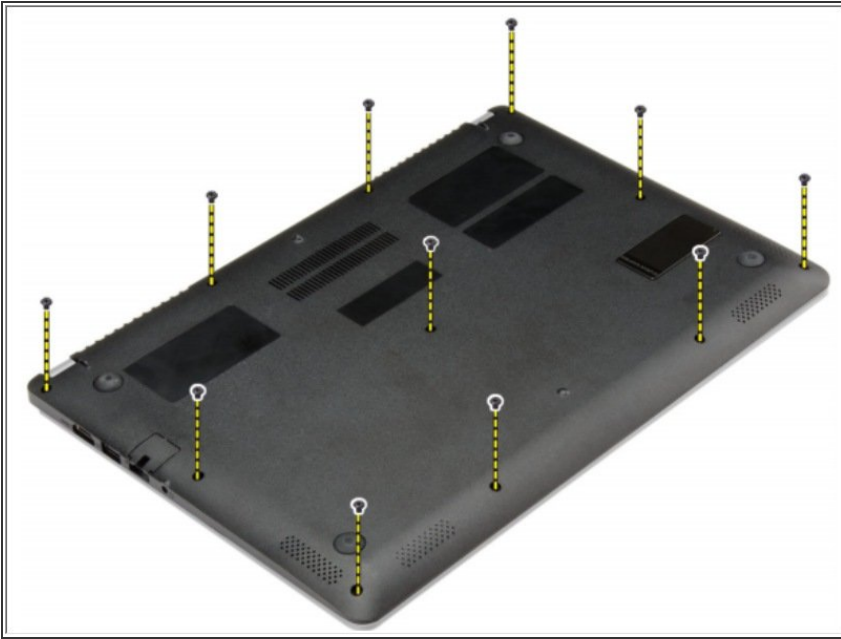

- Remove the screws that secure the base cover to the computer.

Step 2 — Pry the Cover

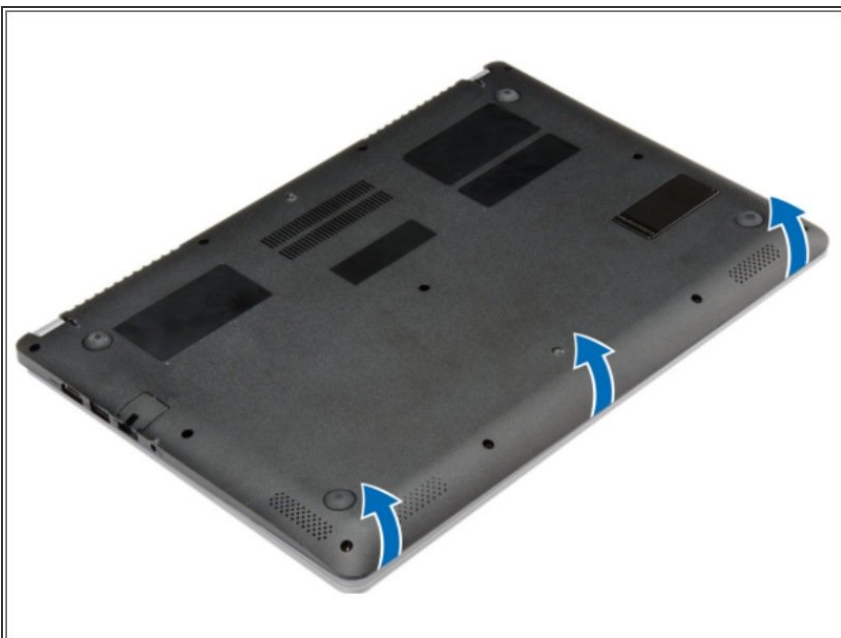


- Pry the base cover along the edges to loosen it.

Step 3 — Removing the Base Cover




- Lift and remove the base cover from the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 4 — Disconnecting the Battery Cable

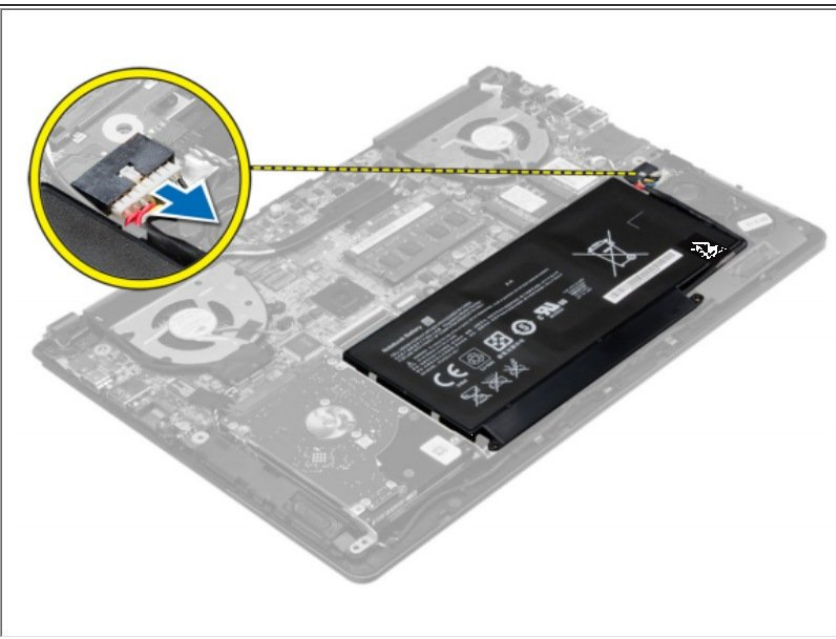


- Disconnect the battery cable from its connector on the system board.

Step 5 — Release the Tabs

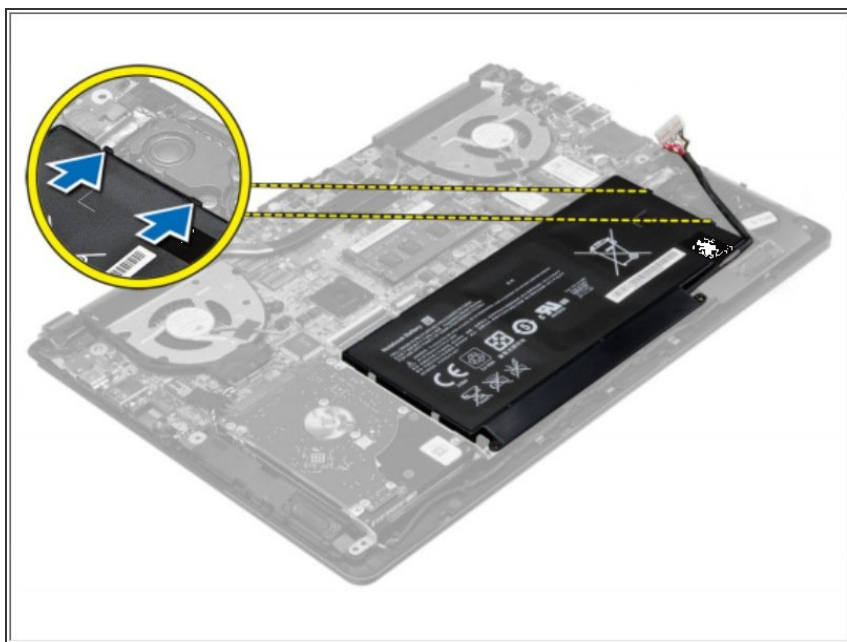


- Release the tabs that secure the battery in the battery bay.

Step 6 — Removing the Battery

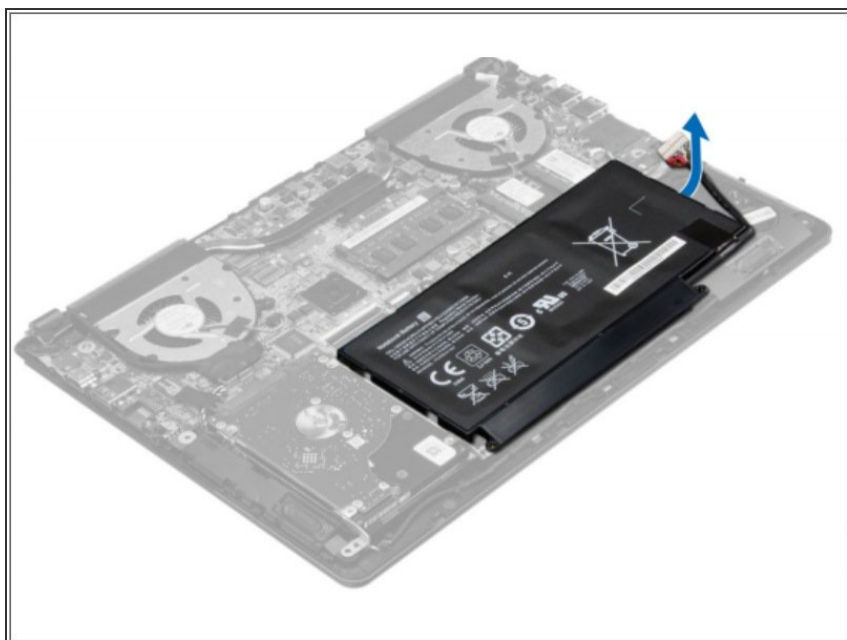

- Lift and remove the battery from the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 7 — Memory Module

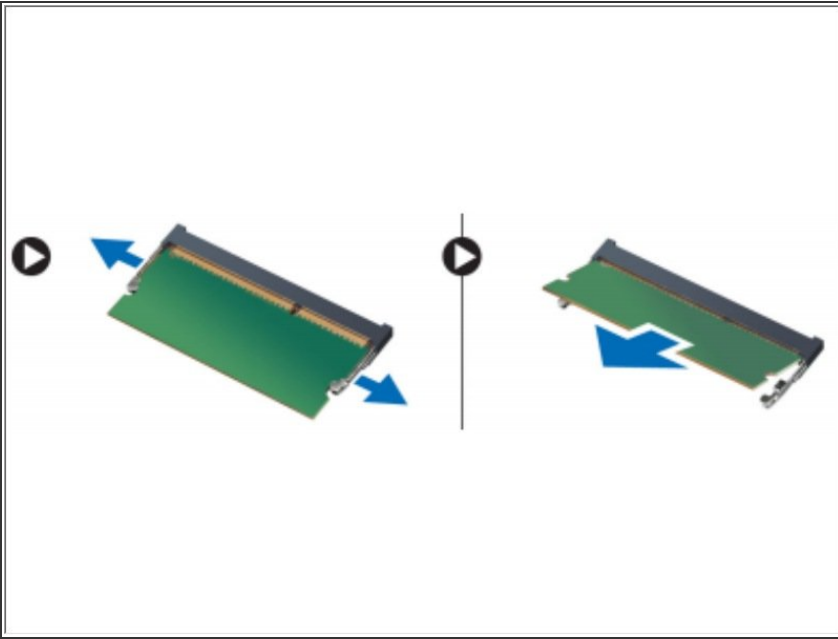

- Pry the retention clips away from the memory module until it pops up. Remove the memory module from its connector on the system board.

To reassemble your device, follow these instructions in reverse order.