

Dell Vostro 5459 Battery Replacement


Written By: Johnathan Hammond






- iFixit Opening Tools (1)
- Phillips #1 Screwdriver (1)
- Phillips #0 Screwdriver (1)

Step 1 — Removing the Base Cover

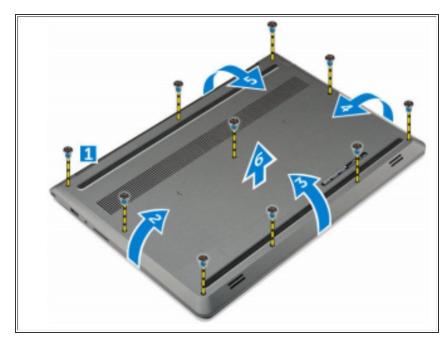

- Remove the screws that secure the back cover to the computer.
 - Pry the edges of the back cover from all sides, to release the back cover.
 - Lift the back cover from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 2 — Removing the Battery

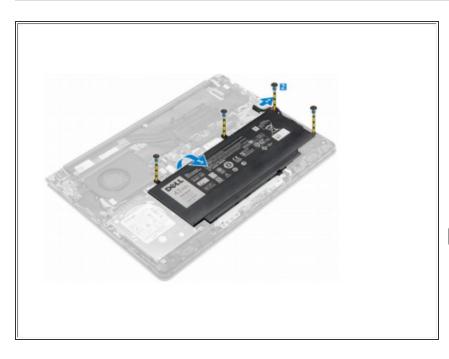

- Disconnect the battery cable from the connector on the system board [1].
 - Remove the screws that secure the battery to the computer [2].
 - Lift and remove the battery from the computer [3].
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.