



Dell Vostro 3561 Memory Module Replacement

Written By: Johnathan Hammond



INTRODUCTION

In this guide, we will show you how to remove and replace the Memory Module.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Sliding the Battery Release Latch




- Flip the computer over.
- Slide the battery release latch to the unlock position.

Step 2 — Slide the Battery Release Latch

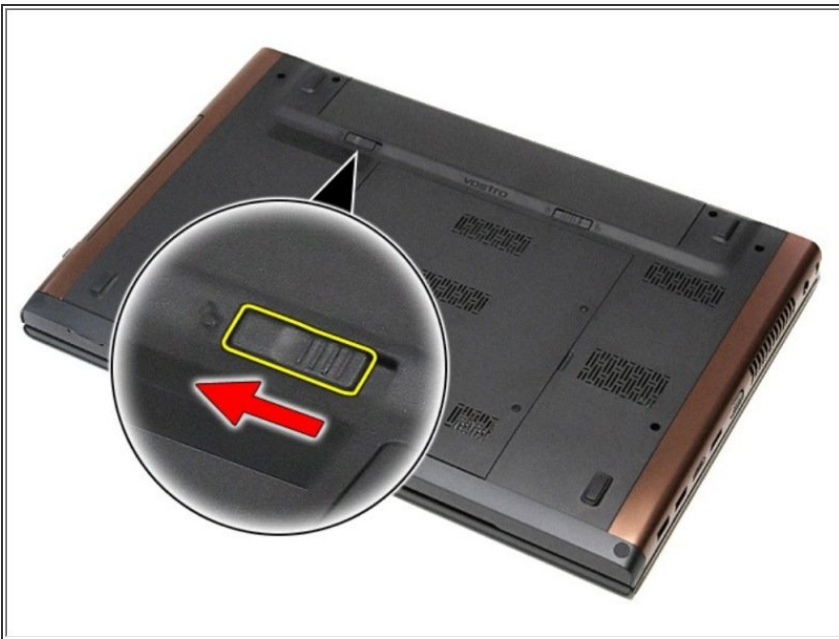

- Slide the other battery release latch to the unlock position.

Step 3 — Removing the Battery

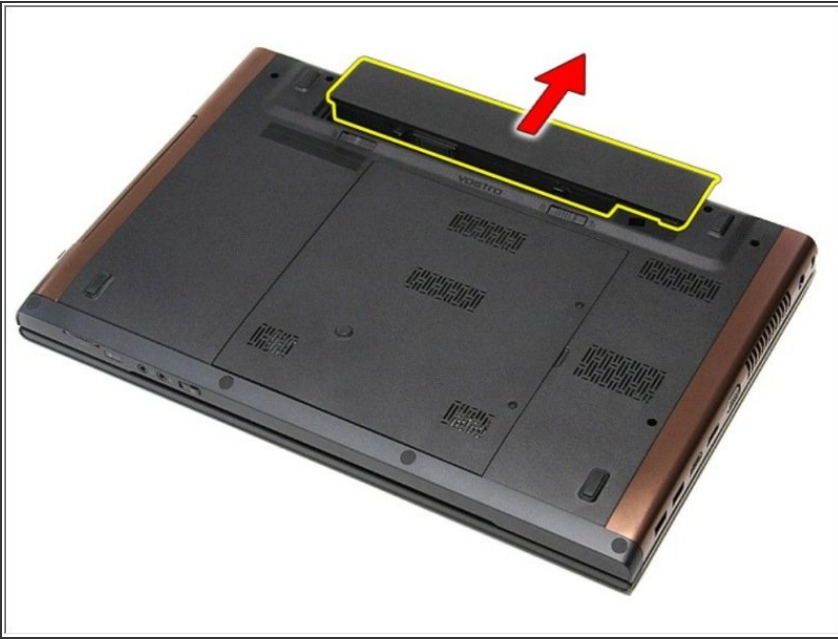

- Slide the battery and remove it from the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 4 — Remove the Screws



- Remove the screws that secure the base cover to the computer.

Step 5 — Removing the Base Cover



- Lift up the base cover and remove it from the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 6 — Releasing the Memory Module



- Push apart the memory retention clips to release the memory module.

Step 7 — Removing the Memory Module



- Remove the memory module from its connector on the system board.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.