




Dell Vostro 3558 Hard Drive Replacement

Written By: Johnathan Hammond

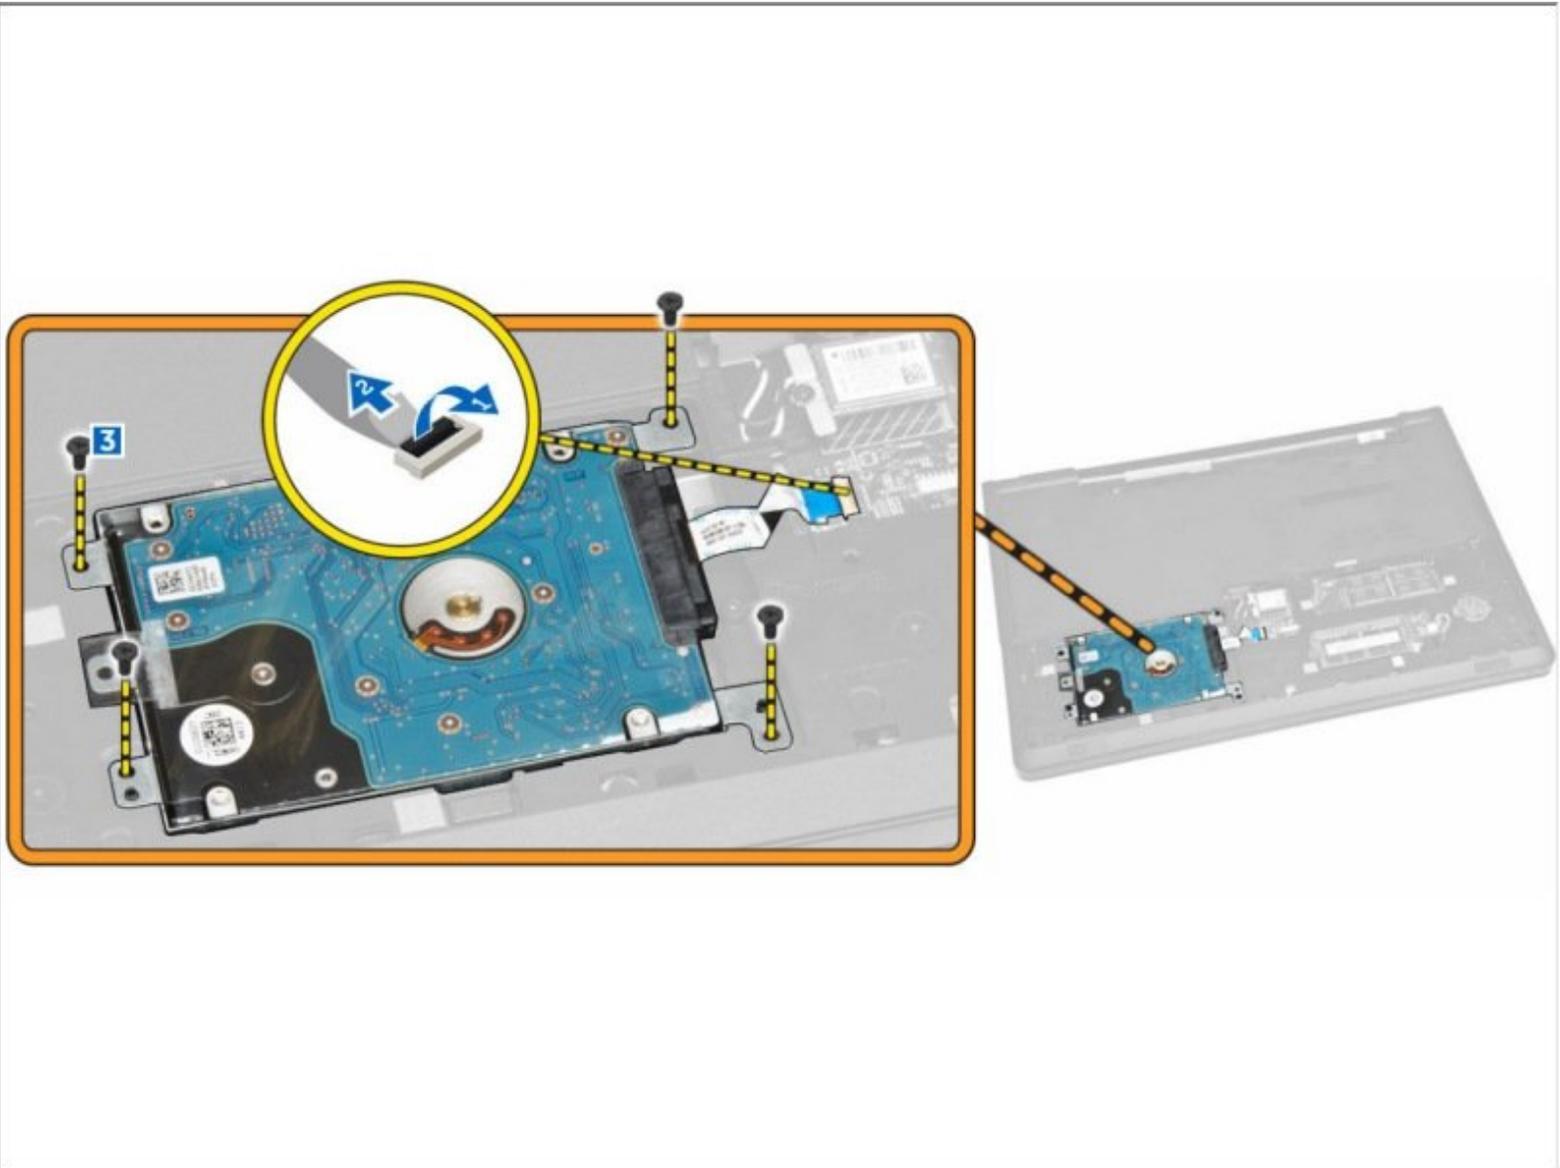


INTRODUCTION

In this guide, we will show you how to remove and replace the Hard Drive.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Unlocking the Battery

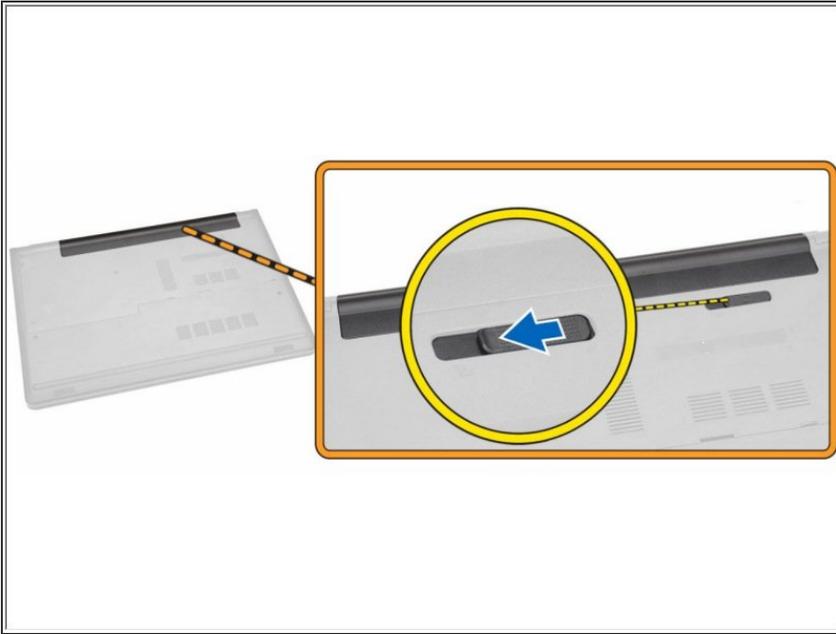


- Slide the release latch outwards to unlock the battery.

Step 2 — Removing the Battery

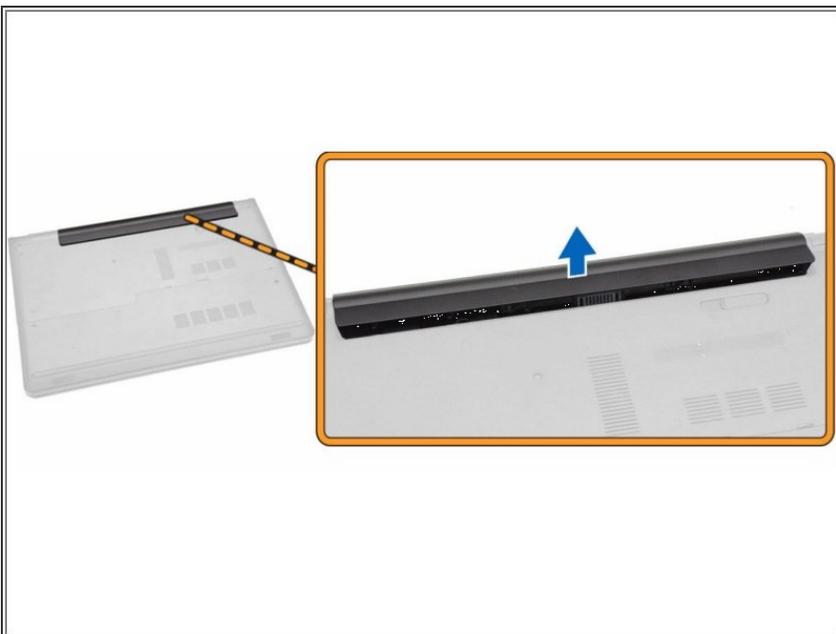


- Remove the battery from the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 3 — Access Panel

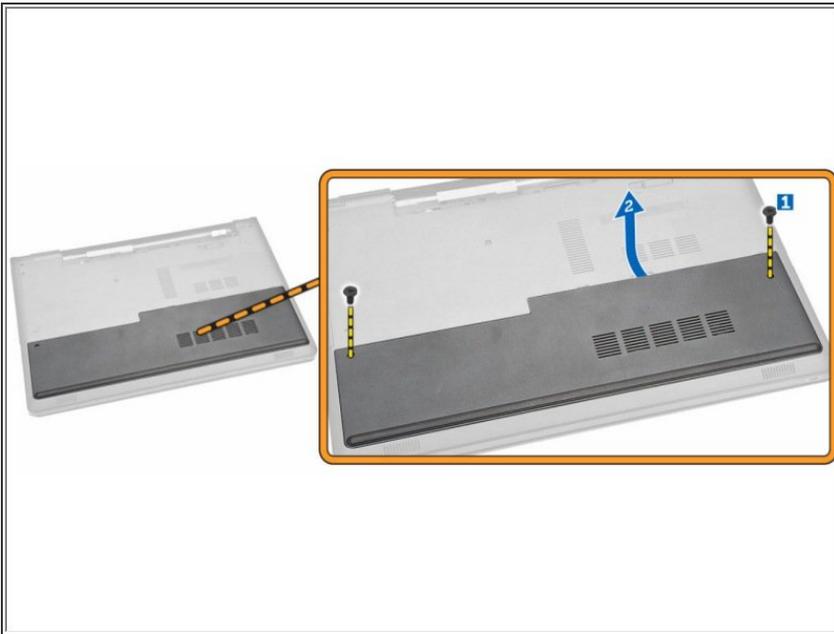


- Remove the screws that secure the access panel to the computer [1].
- Lift the access panel partially at a 45-degree angle [2].

Step 4 — Remove the Access Panel

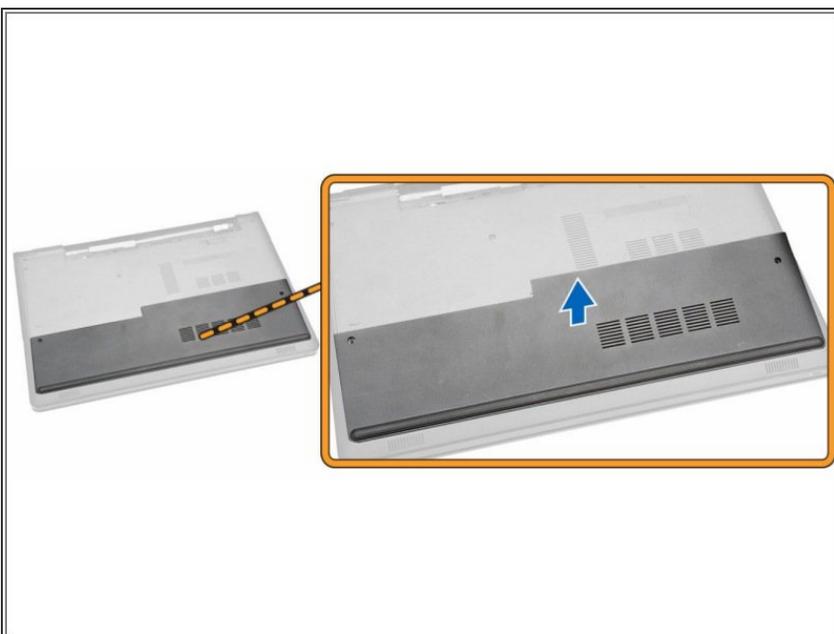


- Remove the access panel from the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 5 — Disconnecting the Hard Drive Cable

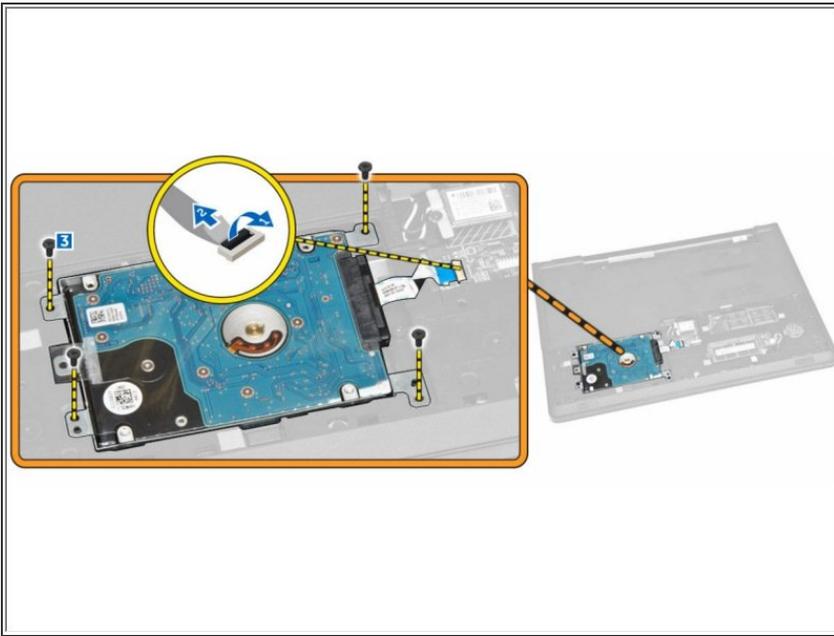


- Disconnect the hard drive cable from the system board and lift it up to remove it from the computer.
- Remove the screws that secure the hard drive to the computer.

Step 6 — Lifting the Hard Drive

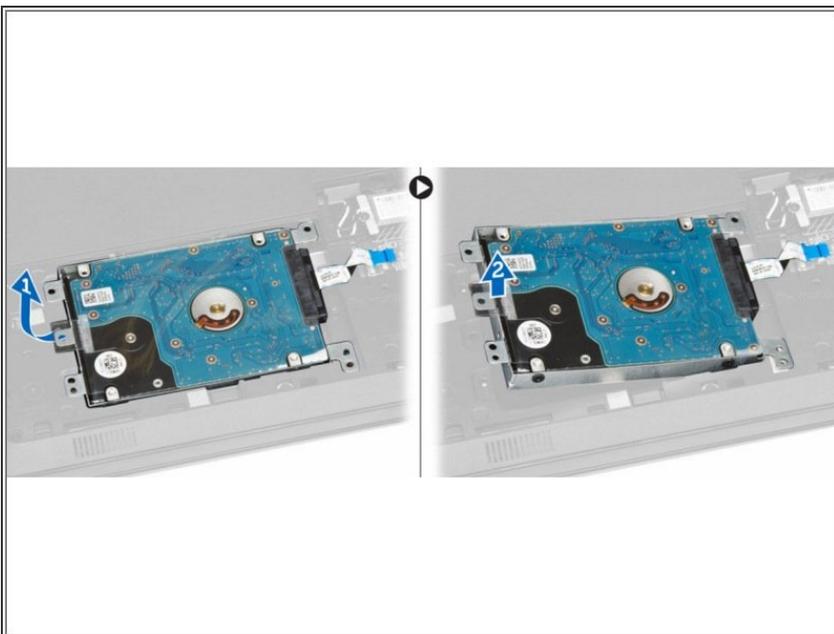

- Lift the hard drive to remove it from the computer.

Step 7 — Removing the Hard Drive

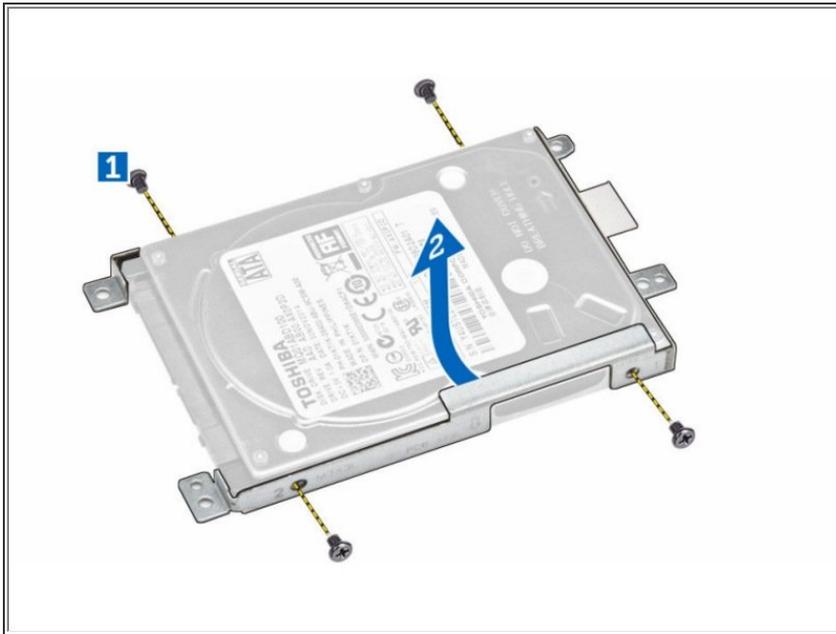

- Remove the screws that secure the hard drive to the bracket.
- Lift the hard drive from the bracket.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.