

Toshiba Satellite C55-B5200 Keyboard Replacement

Standard Keyboard with 10-key and touchpad with...

Written By: Pablo Andrade



INTRODUCTION

Standard Keyboard with 10-key and touchpad with multi-touch control




TOOLS:

Tweezers (1)

iFixit Opening Tool (1)

Phillips #0 Screwdriver (1)

Step 1 — Battery

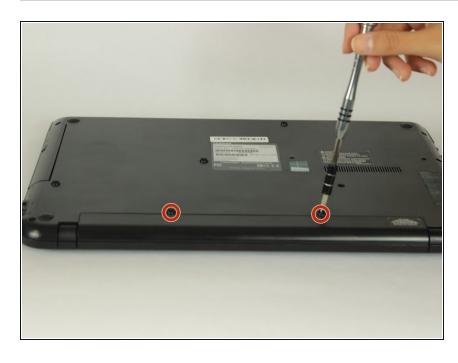

- Turn the laptop off and remove all sources of power.
- Flip the laptop over so that way the bottom is facing towards you.
- Remove the two 6.6mm Phillips #0 screws from the battery.



• Pull the battery out of the laptop.

Step 3 — Keyboard



Remove the thirteen 6.6mm Phillips
#0 screws on the back of the device.




 Use a plastic opening tool to lift and remove the bottom panel.

Step 5



- Remove the six 2.3mm Phillips #0 screws from the motherboard.
- Use a pair of tweezers to lift up the tab on the ZIF connector and pull out the ribbon cable.

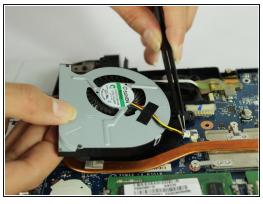






- Disconnect the wires from the motherboard.
- Lift and remove the disk drive.
- Lift and remove the hard drive.

Step 7

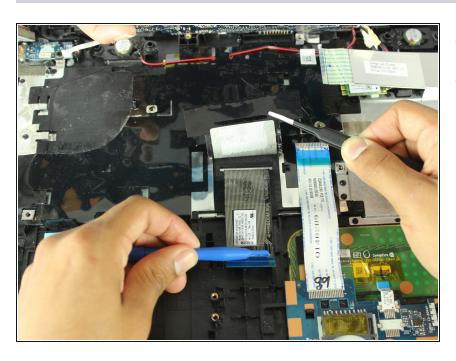

- Lift up the motherboard
- Use tweezers to carefully peel apart IDE ribbon cables connected from motherboard to keyboard





- Use a plastic opening tool to unlatch the keyboard from the device
- Lift the keyboard off the laptop, careful of the IDE ribbon cable

To reassemble your device, follow these instructions in reverse order.