


# **Dell Vostro 3459 Access Panel Replacement**

Written By: Johnathan Hammond

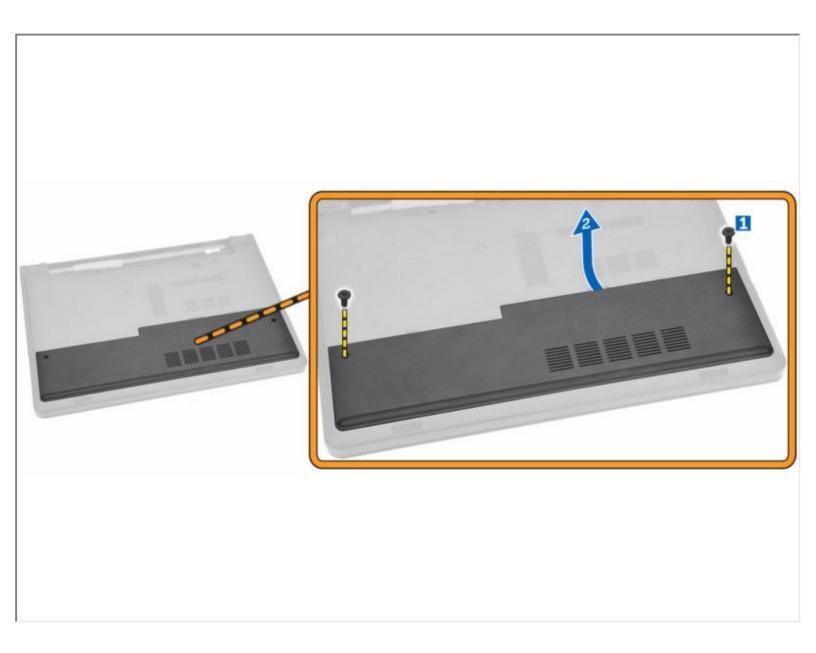

### **INTRODUCTION**


In this guide, we will show you how to remove and replace the Access Panel.



## **TOOLS:**

• Phillips #0 Screwdriver (1)

#### **Step 1 — Unlocking the Battery**

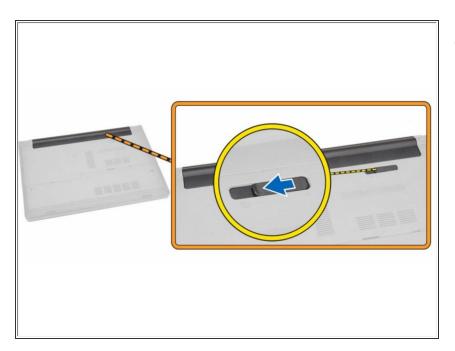


 Slide the release latch outwards to unlock the battery.

#### Step 2 — Lifting the Battery



 Lift the battery to remove it from the computer.

#### Step 3 — Remove the Screws

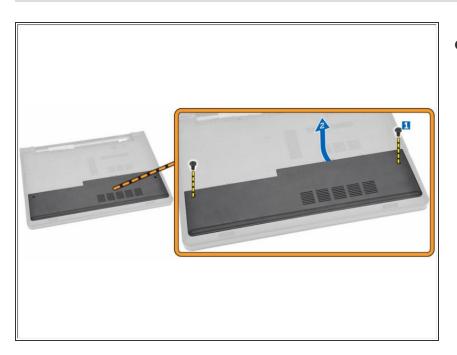

- Remove the screws that secure the access panel to the computer.
  - Lift the access panel away from the computer.

To reassemble your device, follow these instructions in reverse order.