



Asus ZenBook UX303U Back Panel Replacement

Replace the back panel if it is dented, scratched, or cracked.

Written By: Luis Perez



INTRODUCTION

This guide will show you how to replace a dented or damaged bottom panel on an Asus ZenBook UX303U laptop.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Panel




- Remove the two round rubber feet at the hinge-edge of the laptop.

Step 2

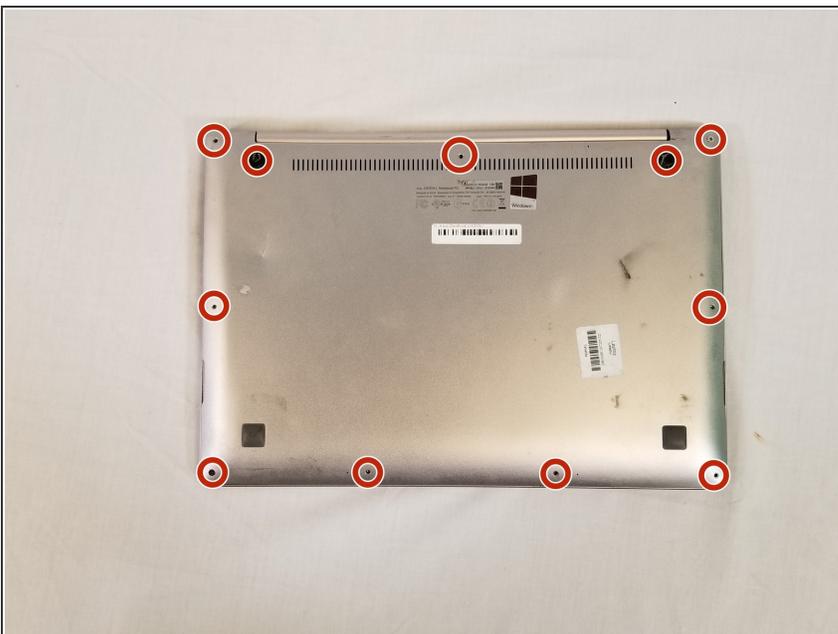

- Remove the eleven 4 mm Phillips #00 screws from the back panel.

Step 3

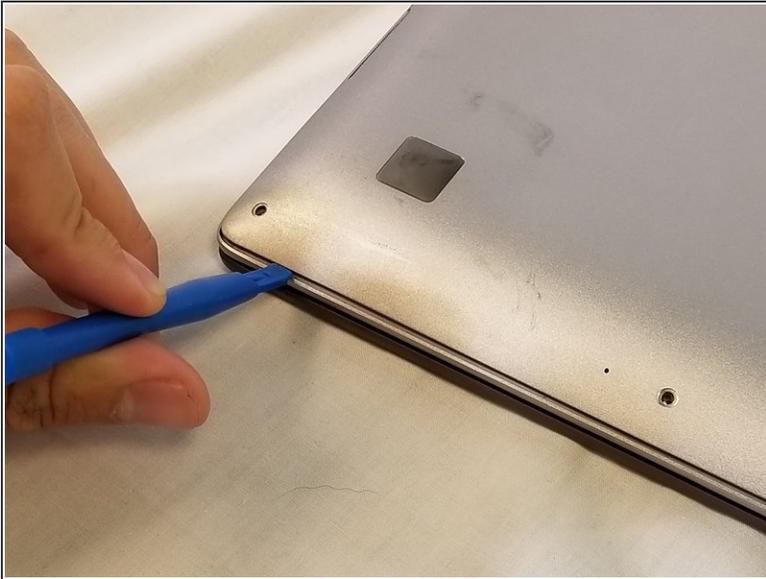

- Using a plastic opening tool pry the back panel off of the laptop.

To reassemble your device, follow these instructions in reverse order.