



Dell Vostro 3360 Keyboard Replacement

Written By: Johnathan Hammond



INTRODUCTION

In this guide, we will show you how to remove and replace the Keyboard.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove the Screw



- Remove the screw that secures the keyboard to the chassis.

Step 2 — Prying the Keyboard

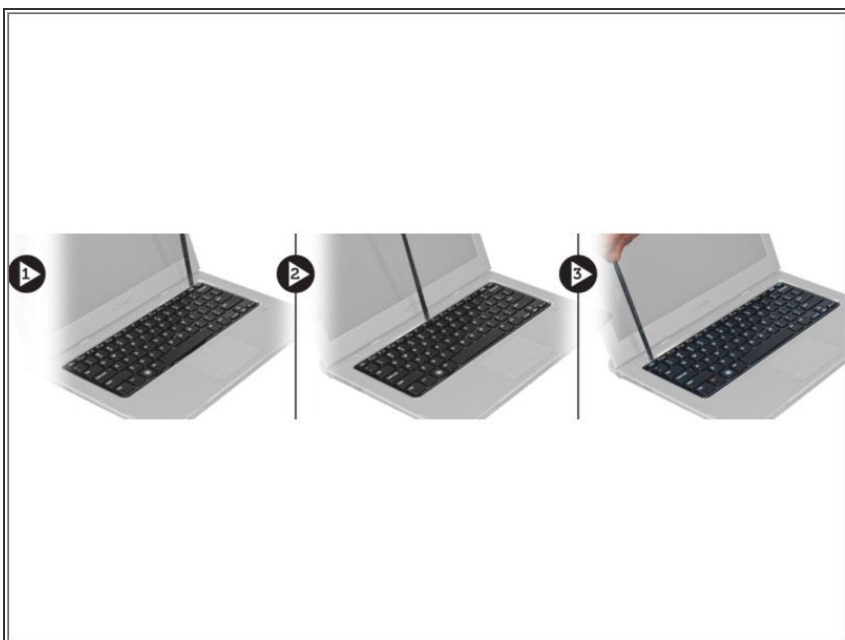


- Starting on the right side of the system, use a plastic scribe to pry up the keyboard from the computer.

Step 3 — Flipping the Keyboard



- Flip the keyboard over and lay it on the palmrest.

Step 4 — Lifting the Clip

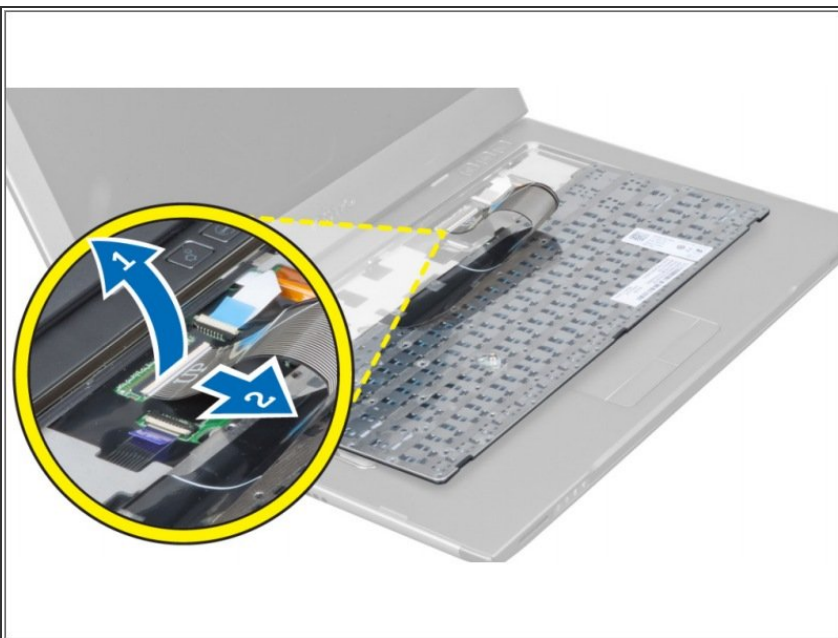

- Lift the clip to release the keyboard cable and disconnect it from the computer.