



Memorex CD Alarm Clock Radio Antenna Replacement

Written By: Aubrey Frank




TOOLS:

Soldering Iron 60w Hakko 503F (1)

Lead-Free Solder (1)


Soldering Tweezers (1)

Step 1 — Memorex CD Alarm Clock Radio

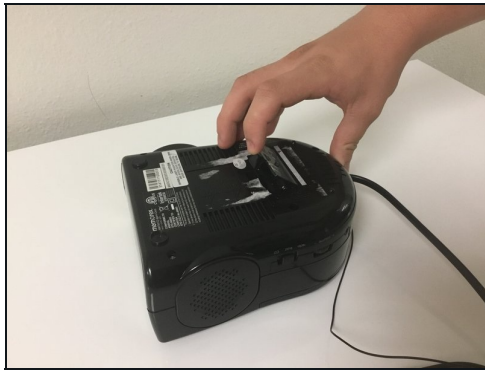


- Turn the clock radio over so the bottom is facing up.
- Pull the tab upward and remove the cover from the battery compartment.
- Remove the batteries.

Step 2

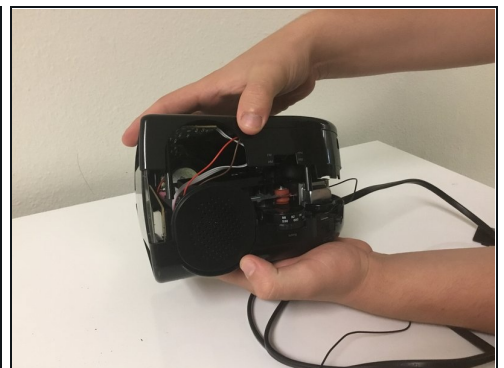

- Remove the five screws on the bottom of the device with a screwdriver.
- Grasp the top and bottom and gently pull apart.

Step 3 — Antenna

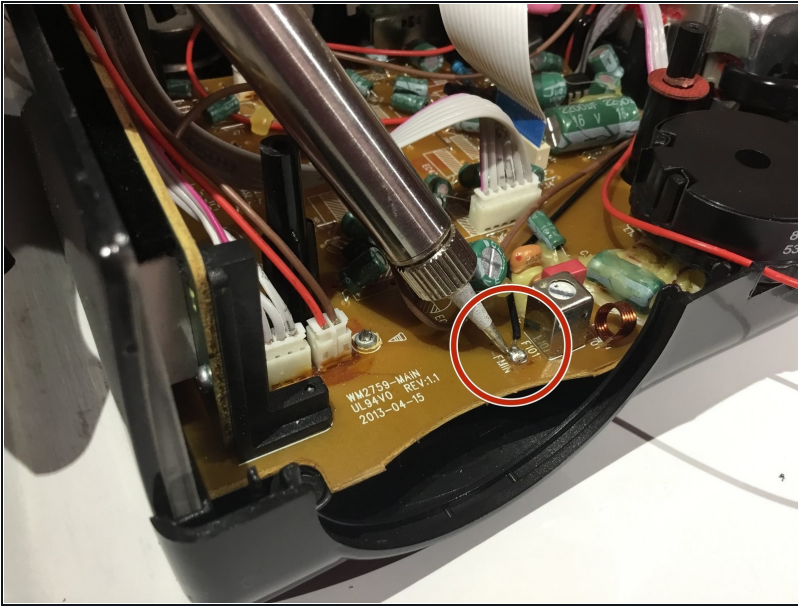

- Locate the small silver transistor between the front left speaker and the tuning knob. The antenna should be attached directly below the transistor.
- [Deolder](#) the antenna wire from the circuit board, and remove the wire.

To reassemble your device, follow these instructions in reverse order.